


DVD RECEIVER


DVR-S150

CinemaStation

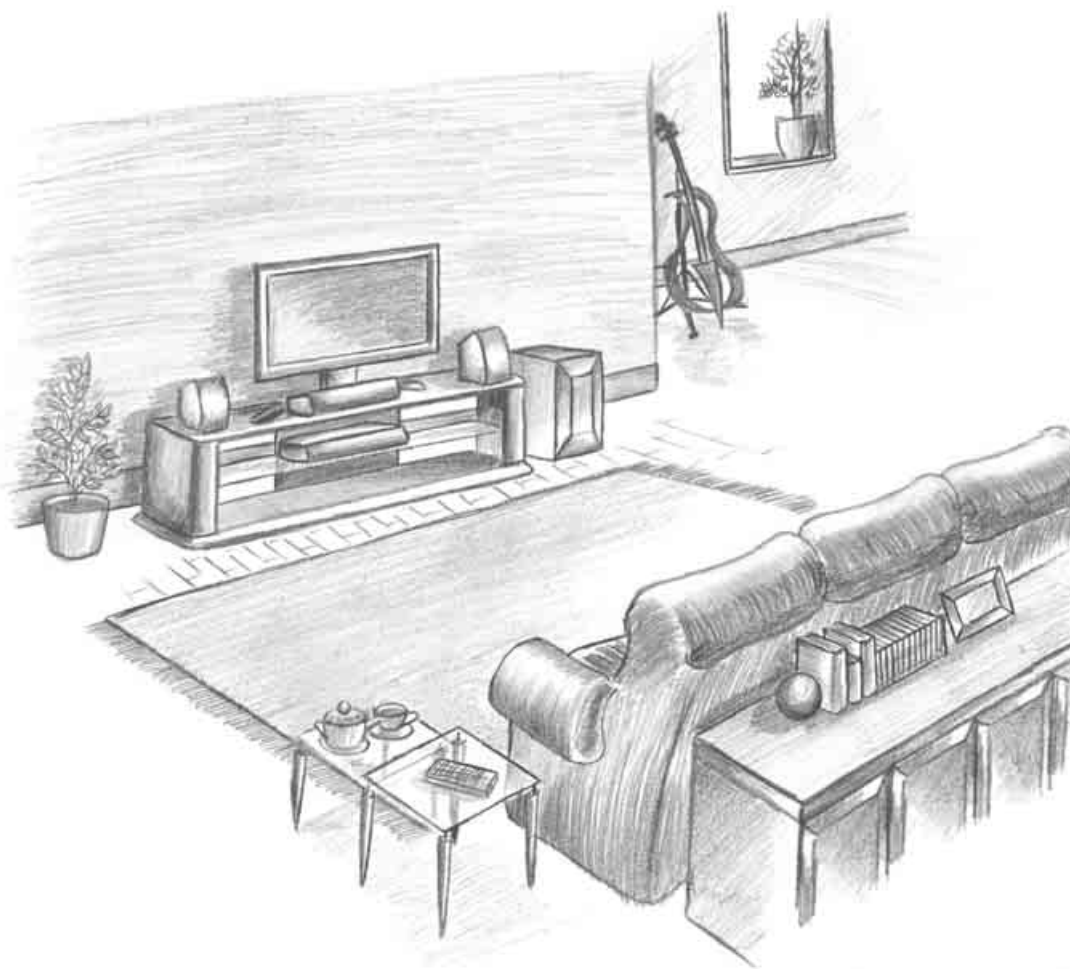


OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

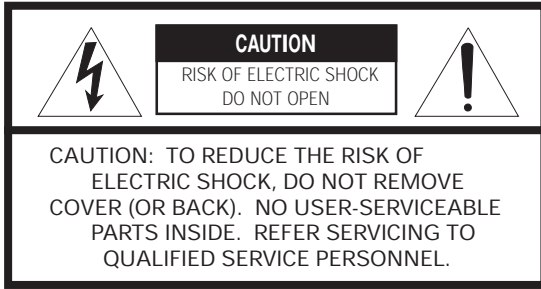

* Explanation of Graphical Symbols

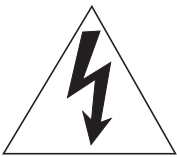

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT

Please record the serial number of this unit in the space below.

MODEL:

Serial No.:

The serial number is located on the rear or the bottom of this unit.
Retain this Owner's Manual in a safe place for future reference.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cable from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15 Be sure to allow spaces of at least 10 cm above, behind and on both sides of the DVR-S150.
- 16 Do not place the following objects on this unit:
A vessel with water in it.
If the vessel falls by vibrations and water spills, it may cause damage to the unit, and/or you may get an electric shock.



FCC INFORMATION (for US customers)**1. IMPORTANT NOTICE : DO NOT MODIFY THIS UNIT!**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT :

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE :

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply **ONLY** to those products distributed by Yamaha Corporation of America or its subsidiaries.

We Want You Listening For A Lifetime

YAMAHA and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, YAMAHA and the Electronic Industries Association's Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



CAUTION: READ THIS BEFORE OPERATING YOUR UNIT.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place with at least 10 cm on the top, 10 cm on the left and right, and 10 cm at the back of DVR-S150 — away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold.
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
 - Other components, as they may cause damage and/or discoloration on the surface of this unit.
 - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
 - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. YAMAHA will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, disconnect the power cable from the wall outlet during an electrical storm.
- 14 Do not attempt to modify or fix this unit. Contact qualified YAMAHA service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the “Troubleshooting” section on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, press STANDBY/ON to set this unit in standby mode, and disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave the unit alone.
- 19 When using the unit for a long time, the unit may become warm. Turn the power off, then leave the unit alone for cooling.

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if this unit itself is turned off. This state is called the standby mode. In this state, this unit is designed to consume a very small quantity of power.

FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.

This Class B digital apparatus complies with Canadian ICES-003.

DANGER

When this unit is plugged to the wall outlet, do not place your eyes close to the opening of the disc tray and other openings to look into inside.

The laser component in this product is capable of emitting radiation exceeding the limit for Class I.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

■ For U.K. customers

If the socket outlets in the home are not suitable for the plug supplied with this appliance, it should be cut off and an appropriate 3 pin plug fitted. For details, refer to the instructions described below.

Note

The plug severed from the mains lead must be destroyed, as a plug with bared flexible cord is hazardous if engaged in a live socket outlet.

■ Special Instructions for U.K. Model

IMPORTANT

THE WIRES IN MAINS LEAD ARE COLOURED IN ACCORDANCE WITH THE FOLLOWING CODE:

Blue: NEUTRAL

Brown: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Making sure that neither core is connected to the earth terminal of the three pin plug.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

- The name plate is located on the bottom of the unit.



CAUTION

VISIBLE AND / OR INVISIBLE LASER RADIATION WHEN OPEN.
AVOID EXPOSURE TO BEAM.

SYNLIG OCH / ELLER OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. STRÅLEN ÄR FARLIG.

VARO !

AVATTAESSA OLET ALLTIJUNA NÄKYVÄLLE JA / TAI NÄKYMÄTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESSEEN.


SYNLIG OCH / ELLER OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRÄKTA EJ STRÅLEN.

VORSICHT !


SICHTBARE UND / ODER UNSICHTBARE LASERSTRAHLUNG WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.

ATTENTION

RADIATION VISIBLE ET / OU INVISIBLE LORSQUE L'APPAREIL EST OUVERT. ÉVITEZ TOUTE EXPOSITION AU FAISCEAU.


**YAMAHA**

MODEL NO. DVR-S150



YAMAHA CORPORATION

MADE IN MALAYSIA

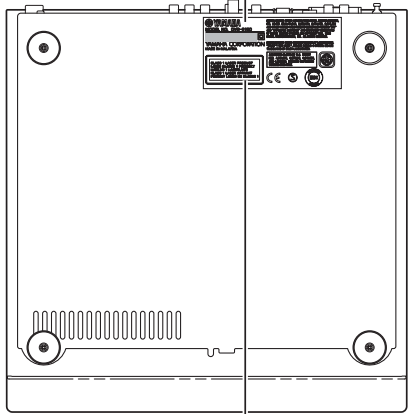

CLASS 1 LASER PRODUCT

LASER KLASSE 1 PRODUKT

LUOKAN 1 LASERLAITE

KLASS 1 LASER APPARAT

PRODUIT LASER DE CLASSE 1

INTRODUCTION

Introduction	3
About this manual.....	3
Supplied Accessories	3
Controls and Functions	4
Top and front panels	4
Display	5
Remote control.....	6

PREPARATION

Connecting Speakers	9
Connecting speakers	
(Front/Surround/Center)	10
Connecting a subwoofer	10
Using commercially available speakers or cables ..	11
Connecting a TV	12
Connecting Antennas	13
Connecting the FM antenna.....	13
Connecting the AM loop antenna	13
Connecting External AV Components	14
Connecting a VCR.....	15
Connecting a game console	16
Connecting a CD recorder or MD recorder	17
Connecting the Power Cables	17
Installing Batteries in the Remote Control	18
Using the Remote Control.....	18

BASIC OPERATION

Turning the Power to On/Standby.....	19
Selecting an Input Source	19
Adjusting the Volume Level	20
Muting the Sound (Mute)	20
Auto Speaker Setup (YPAO).....	21
Enjoying Sound Field Programs	
(DSP Programs)	26
Setting the Sleep Timer	28
Changing DVD Settings on the TV	
(On-Screen Menu)	29
Operating the On-Screen Menu	29
On-Screen Menu guide	30

ENJOYING MOVIE AND MUSIC DISCS

Supported Disc Types	32
Basic Playback Operations.....	33
Useful Playback Operations	34
Specifying an elapsed time for playback (Time Search).....	34
Customizing playback order (Program Play)	35
Repeating playback (Repeat Play).....	37
Operating disc menus (DVD menu/Video CD Playback Control)	39
Selecting Audio and Subtitle Languages	40
Selecting a Viewing Angle	41
Zooming Images	42
Restricting Playback (Parental Control)	43
Setting the Parental Control level.....	43
Locking discs	44
Playing locked discs	44
Changing the password.....	45
Enjoying High-Quality Video	
(NTSC/Progressive Scan)	46
Enjoying JPEG Images.....	47

ENJOYING RADIO

Tuning Radio Stations	48
Tuning radio stations automatically	
(Auto Tuning)	48
Tuning radio stations manually (Manual Tuning) ..	48
Selecting preset radio stations (Preset Tuning)	49
Receiving FM RDS stations	
(U.K. and Europe models only).....	49
Presetting Radio Stations	51
Presetting FM stations automatically	
(Auto Preset).....	51
Presetting radio stations manually	
(Manual Preset)	52
Changing the order of preset radio stations	52

ENJOYING EXTERNAL AV SOURCES

Playing Back External Sources	53
TV playback	53
VCR playback.....	53
Game console playback	54
Recording AV Sources With External AV Components	55
Recording audio sources with CinemaStation	55
Copying video component sources to a video cassette.....	56

SOUND OPTIONS

Enjoying Sound with Specific Speakers.....	57
Enjoying 6.1/5.1ch sources with all speakers including a virtual speaker (Matrix 6.1).....	57
Enjoying 2ch sources with all speakers (Dolby Pro Logic II).....	58
Enjoying DSP programs with the front speakers only (Virtual CINEMA DSP).....	59
Enjoying DSP Programs in a Variety of Ways	60
Listening with headphones ("SILENT CINEMA")	60
Listening at low volume (Night Listening)	61
Enjoying High-Quality Sound	62
Enjoying original Dolby and DTS sounds.....	62
Enjoying original 2ch sound (Stereo).....	63

ADVANCED CONFIGURATION

Adjusting the Speaker Balance During Playback.....	64
Adjusting the speaker balance with test tones	64
Adjusting the speaker balance during playback	65
Configuring Dolby Pro Logic II Music Settings	67
DSP Program Delay Time Settings	68
Configuring the Audio Input Signal Setting.....	70
Checking the Audio Input Signal Type	71
Controlling External Components	72
Setting remote control codes	72
Available operations	73
Configuring Various Parameters (Set Menu)	75
Operating the Set Menu	76

APPENDIX

Troubleshooting	80
General.....	80
Remote control	83
Disc playback	84
Radio reception.....	85
Additional Information	86
Disc Information.....	86
Handling a disc	87
Glossary	88
Audio formats.....	88
Sound field programs.....	89
Audio information	89
Video signal information	90
Copyright and logo marks	91
Specifications	92

Introduction

The YAMAHA CinemaStation “DVR-S150” is a slimline DVD receiver equipped with a digital amplifier. This product provides you with the best sound possible, allowing you to enjoy not just DVDs and CDs, but various other AV sources as well. We hope the “DVR-S150” brings you great listening pleasure and satisfaction.


About this manual

- This manual provides information relevant only to the YAMAHA CinemaStation “DVR-S150”. For information on speakers or other AV equipment, refer to the manual for that product.
- In this manual, operations that can be performed using either the DVD receiver or its remote control are explained using the remote control.
- Remote control descriptions and illustrations in this manual are based on the U.K. and Europe models unless otherwise specified.
- ☼ indicates a tip for your operation.
- Notes contain important information about safety and operating instructions.
- This manual is printed prior to production. Design and specifications are subject to change in part as a result of improvements, etc. In case of differences between the manual and the product, the product has priority.


Supplied Accessories

This product includes the following accessories. Before connecting speakers or a TV to this product, make sure you received all of the following parts.


Remote control

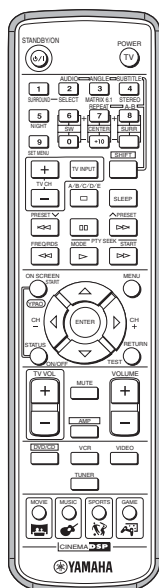


**Batteries (2)
(AA, R06, UM-3)**

 

AM loop antenna

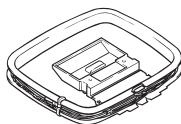


Optimizer microphone

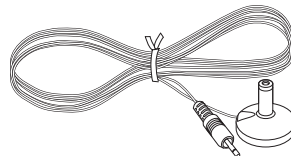


Indoor FM antenna


**(U.S.A., Canada, China,
Asia and General
models)**

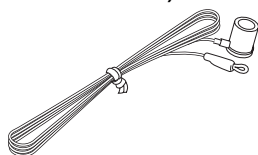

**(Europe, U.K.,
Australia and Korea
models)**

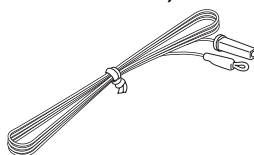


**Video pin
cable**

 


Speaker cables

**Surround
15m (2)**

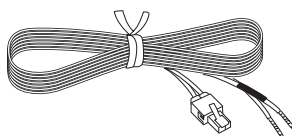


**Front, Center
5m (3)**

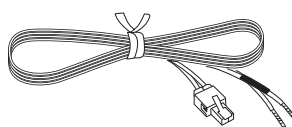

Controls and Functions

Top and front panels

Buttons indicated with an asterisk (*) perform different functions depending on the selected mode of operation.

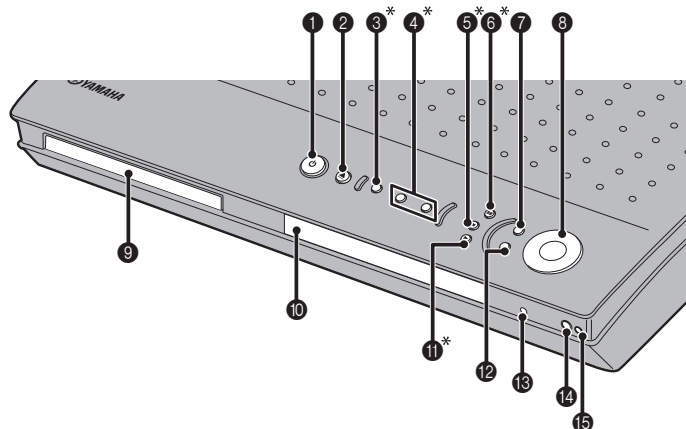

1 STANDBY/ON

Turn this unit on. Press to set the unit in the standby mode. (page 19)



Opens and closes the disc tray.

3 PROGRESSIVE (MEMORY)

[MEMORY (for U.K. and Europe models)]
(DVD/CD mode)

Switches DVD playback between progressive scan and interlace outputs. (page 46)

(Tuner mode)

Stores the current radio station for Preset Tuning. (page 52)

4 ◀◀/▶▶, ◀▶/▶▶ (PRESET/TUNING ^)

(DVD/CD mode)
Selects the previous/next track or chapter. Press and hold to fast forward or fast reverse.

(Tuner mode)

Selects a preset number or adjusts the frequency. (page 51)

5 ■ (A/B/C/D/E)

(DVD/CD mode)

Stops disc playback.

(Tuner mode)

Selects a preset group. (page 52)

6 ■ (PRESET/BAND)

(DVD/CD mode)

Pauses disc playback.

(Tuner mode)

Switches between FM and AM. (page 48)

7 INPUT

Selects an input source or sets the priority level for the audio input signals (if any equipment is connected to both OPTICAL IN and AUDIO IN jacks).

8 VOLUME

Adjusts the overall volume level.

9 Disc tray

Holds a disc to be played.

10 Display

Displays playback information or settings. (page 5)

11 ▶ (AUTO/MAN'L)

(DVD/CD mode)

Starts disc playback.

(Tuner mode)

Switches between Auto Tuning and Manual Tuning modes. (page 48)

12 DSP

Switches the DSP programs in the selected DSP program group. Press and hold to switch the DSP program groups. (page 26)

13 ◡ SILENT CINEMA jack

Connects headphones.


14 Remote control sensor

Receives signals from the remote control.

15 YPAO MIC jack

Connects the optimizer microphone.

Display

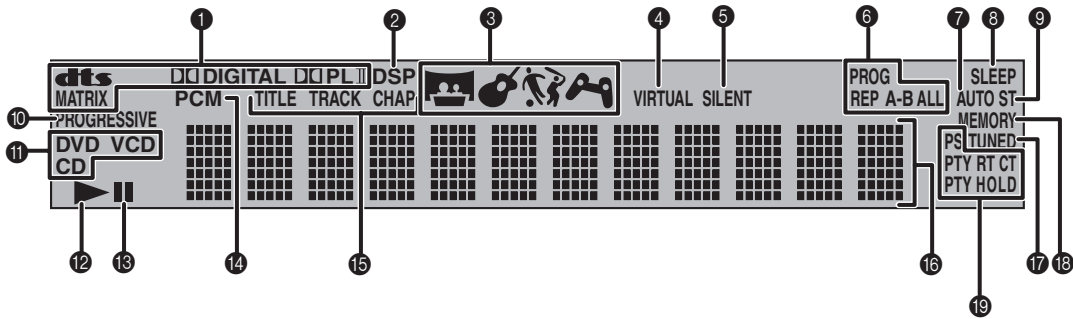

(U.K. and Europe models only)

1 Decoder indicator

Displays the icon for the selected internal decoder.

2 DSP

Lights up when a DSP program is selected.

3 DSP program indicator

Displays the icon for the selected DSP program.

4 VIRTUAL

Lights up when Virtual CINEMA DSP is activated.

5 SILENT CINEMA indicator

Lights up when the Silent Cinema mode is activated.

6 Playback mode indicator

Displays the icon for the selected playback mode.

7 AUTO

Lights up when using the Auto Tuning or Auto Preset mode.

8 SLEEP

Lights up when the Sleep Timer is on.

9 ST

Lights up when receiving a strong FM radio signal in the Auto Tuning or Auto Preset mode.

10 PROGRESSIVE

Lights up when the progressive scan function is activated.

11 Disc indicator

Displays the icon for the disc.

12 Playback icon

Lights up during disc playback.

13 Pause icon

Lights up when disc playback is paused.

14 PCM

Lights up when playing PCM signals such as CDs.

15 Display mode indicator

Displays the indicator for the information type shown in the CinemaStation display.

16 Display

Displays various information such as a title, chapter or track number, or elapsed playing time.

17 TUNED

Lights up when receiving an FM/AM broadcast.

18 MEMORY


Blinks when presetting an FM/AM radio station.

■ U.K. and Europe models only

19 RDS indicators

Light up when receiving an RDS signal. "PTY HOLD" lights up when the PTY SEEK mode is activated. (page 50)

Remote control

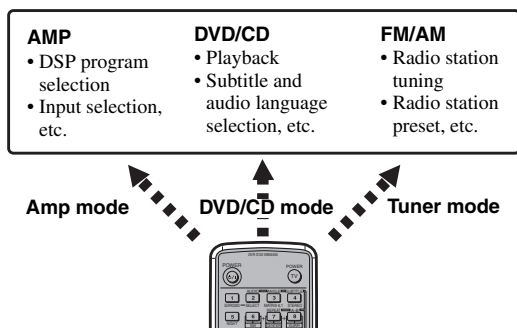


CinemaStation has three main operation modes. Before operating functions in each mode, you need to select a mode to change the remote control button assignments.

To switch the operation mode


- Amp mode:** Press AMP. (page 7)
- DVD/CD mode:** Press DVD/CD. (page 8)
- Tuner mode:** Press TUNER. For details on tuner operations, refer to “Tuning Radio Stations” (page 48).



You can also operate the TV or VCR connected to the CinemaStation using the remote control. For details, refer to “Controlling External Components” (page 72).

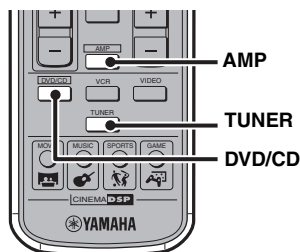

Common functions

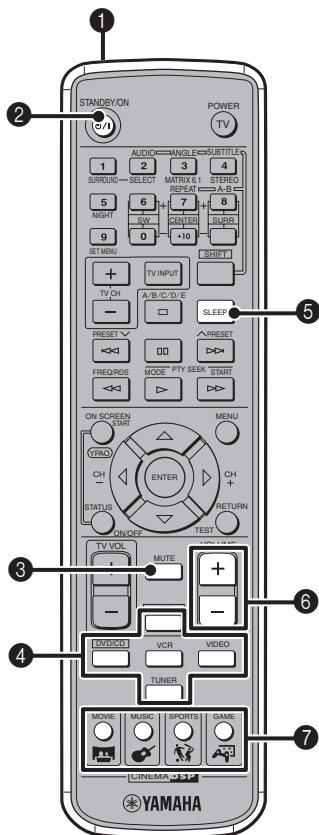

Operations common to all modes

① Infrared signal transmitter

Sends signals to the CinemaStation.

② STANDBY/ON (⏻/⏻)

Turn the CinemaStation on, or set it to the standby mode. (page 19)

③ MUTE

Turns off the volume. Press again to resume the volume.

④ Input selection buttons

Select an input source to operate. (page 19)

⑤ SLEEP

Sets the Sleep Timer. (page 28)


⑥ VOLUME +/-

Adjusts the overall volume level.

⑦ DSP program buttons

Selects a DSP program. (page 26)

■ Amp mode

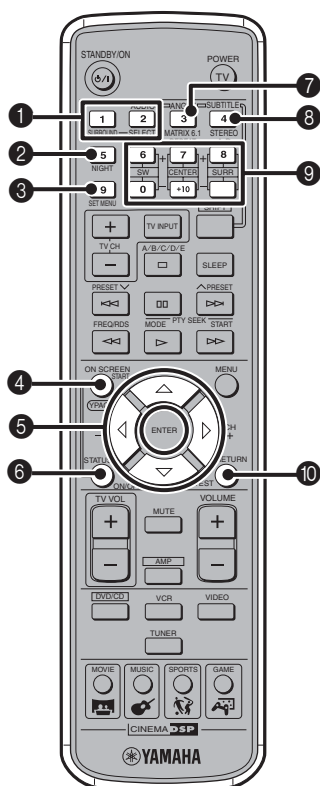

Operations available only in amp mode

① SURROUND, SELECT

Sets Dolby Digital or DTS. Press SURROUND and then SELECT to set Dolby Pro Logic II for 2ch sources. (page 58)

② NIGHT

Sets the CinemaStation to the Night Listening mode. (page 61)

③ SET MENU

Enters the Set Menu. (page 76)

④ YPAO

Starts the YPAO function. (page 21)

⑤ $\triangle / \nabla / \triangleleft / \triangleright$

Adjusts the test tone (page 64) or Set Menu (page 76).

⑥ ON/OFF

Turns the YPAO mode on/off. (page 23)

⑦ MATRIX 6.1

Sets the Matrix 6.1 decoder. (page 57)

⑧ STEREO

Switches between normal stereo sound and audio with a sound field effect. (page 63)

⑨ Speaker volume buttons

Adjusts the speaker balance (volume level of each speaker). (page 65)

SW +/-: Adjusts the subwoofer volume.

CENTER +/-: Adjusts the center speaker volume.

SURR +/-: Adjusts the surround speaker volume.


⑩ TEST

Outputs a test tone. (page 64)



Amp mode operations are indicated in purple on the remote control.

■ DVD/CD mode

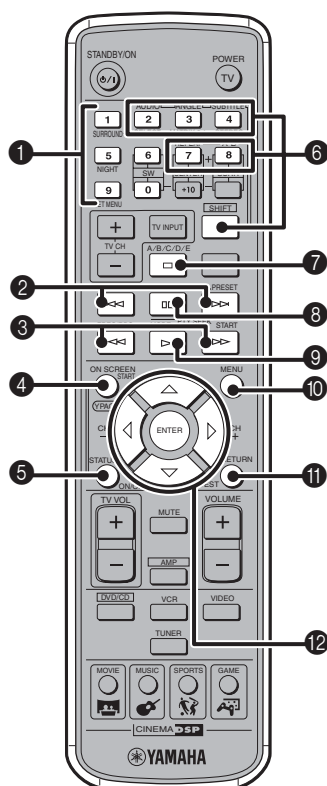

Operations available only in DVD/CD mode

① Number buttons (1 to 9, 0)

Inputs numerals to specify parameters such as track or chapter numbers.

② ⏮, ⏭

Skips to the start of current track or next track.

③ ⏩, ⏪

Fast forwards/fast reverses.

④ ON SCREEN

Displays the On-Screen Menu on the TV screen. (page 29)

⑤ STATUS

Displays the status information such as disc type, total time or elapsed time of current track/chapter on the TV screen. To display the status information, the “Status window” setting in the On-Screen Menu (page 29) should be set to “On”.

⑥ Settings buttons

While holding down SHIFT, press a button below to enable the corresponding operation.

REPEAT: Enables the Repeat Play mode. (page 37)

A-B: Enables the A-B Repeat mode. (page 38)

AUDIO: Selects the audio language of the DVD video. (page 40)

ANGLE: Selects the disc viewing angle. (page 41)

SUBTITLE: Selects the subtitle language of the DVD video. (page 40)

⑦ □

Stops disc playback.

⑧ ⏸

Pauses disc playback or advances to the next frame.

⑨ ▷

Starts disc playback.

⑩ MENU

Displays the DVD menu on the TV screen. (page 39)

⑪ RETURN

Returns the DVD menu to the previous screen. (page 39)

⑫ △ / ▽ / ◀ / ▶ / ENTER

Operates the On-Screen Menu (page 29) or specify various parameters.



DVD/CD mode operations are indicated in green on the remote control.

Connecting Speakers


Follow the procedure below to connect speakers to the CinemaStation. Here, the connection example uses the YAMAHA NX-P150 (consisting of four satellite speakers, a center speaker and a subwoofer) and its supplied cables. For information on your speakers, refer to the owner's manual for the speakers.



You can also use commercially available speakers and cables (see page 11).

Note


Do not connect the power cable of the CinemaStation until all cable connections are completed.

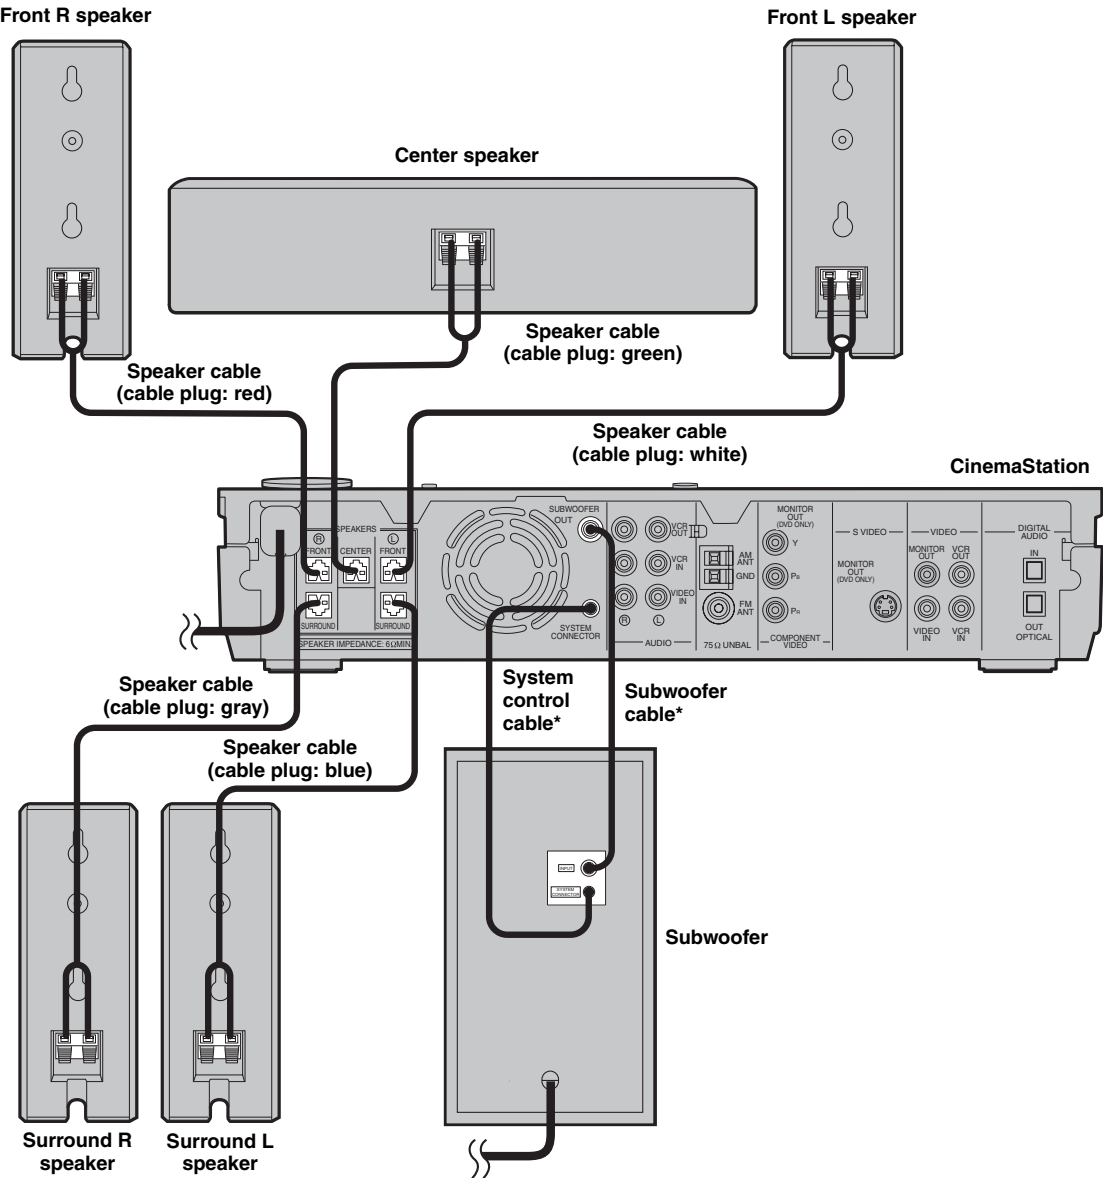

* Supplied with the subwoofer.

Connecting speakers (Front/Surround/Center)


- 1 Insert the cable plug of the speaker cable into the speaker jack of the same color until you hear it click into place.
 - **FRONT R (Red), CENTER (Green), FRONT L (White):** Insert the cable plug facing the tub upwards.
 - **SURROUND R (Gray), SURROUND L (Blue):** Insert the cable plug facing the tub downwards.

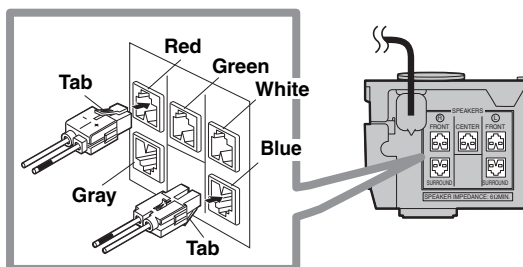

Note

Do not use excessive force when inserting the cable plug. Doing so may damage the cable plug or speaker jack.

- 2 Connect the cable core of the speaker cable with the color band to the + connector on the speaker and other cable core to the – connector.

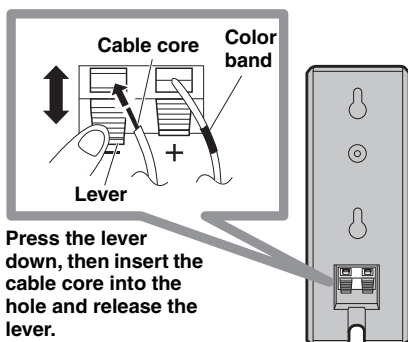


Notes

- Do not allow the cable cores to touch each other or any metal part. Doing so may damage the unit or speakers.
- Make sure you connect the cable cores to the correct connectors. Reversed connections may produce unnatural sounds during playback.

Connecting a subwoofer

Note

Do not connect the power cable of the CinemaStation or subwoofer until all cable connections are completed.

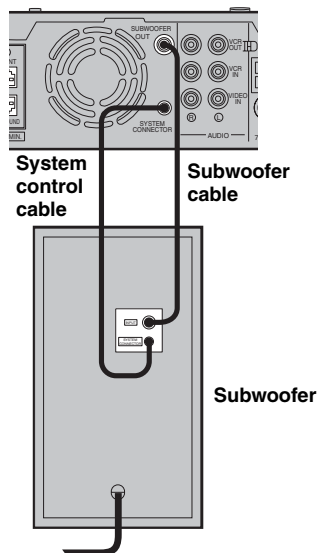

- 1 Connect the SUBWOOFER OUT jack on the CinemaStation to the INPUT jack on the subwoofer using the subwoofer cable.
- 2 Connect the SYSTEM CONNECTOR jack on the CinemaStation to the SYSTEM CONNECTOR jack on the subwoofer using the system control cable.

Using commercially available speakers or cables

When using speakers or cables other than those of the YAMAHA NX-P150 (consisting of four satellite speakers, a center speaker and a subwoofer) and its supplied cables, be careful of the following. When using a commercially available speaker cable, remove the cable plug from one of the supplied speaker cables and attach it to the cable you are using.

When using commercially available speakers


- Use speakers with 6-ohm impedance or more. If a speaker with less than 6-ohm impedance is used, the protective circuit may trip or the speaker may malfunction.
- Use magnetically shielded speakers to prevent interferences with a TV. If these speakers still interfere with a TV, move the speakers a little away from the TV.
- We recommend using speakers of the same manufacturer that have identical sound qualities. If they are mixed, certain sounds may be heard unnaturally.
- Use speaker cables that are the same thickness as the supplied cables.

When using commercially available speaker cables


- Use speaker cables that are the same thickness as the supplied cables.

To replace speaker cables

- 1 Press and hold the release button and remove the supplied speaker cable from the cable plug.**

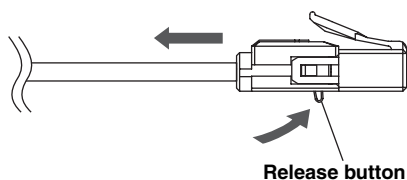

- 2 Peel away about 10 mm (10/32") of covering from the tip of the new cable and twist the cable core firmly in a clockwise direction.**

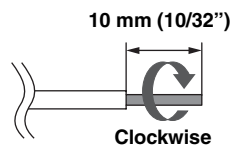


Note

Be sure to twist the cable core firmly in a clockwise direction. Twisting loosely may cause a short.

- 3 Press and hold the release button, insert the cable core into the cable plug, then release the button.**

Match the speaker cable polarity (+/-) with the polarity mark (+/-) of the cable plug.

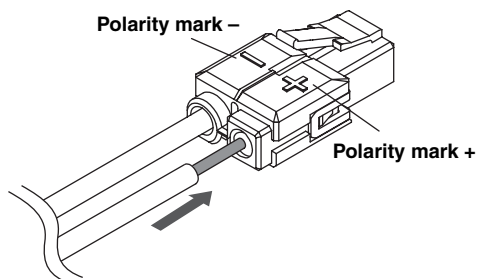


Connecting a TV

Follow the procedure below to connect your TV to CinemaStation using the supplied video pin cable. If you want to output sound from the speakers connected to CinemaStation, prepare a commercially available audio pin cable to connect them. Also, you can enjoy high-quality pictures with the component video, S-Video, or SCART (U.K. and Europe models only) connection. For information about your TV, refer to the supplied manual.

Notes


- Do not connect the power cable of the CinemaStation until all cable connections are completed.
- Turn off the TV before connecting it to the CinemaStation.

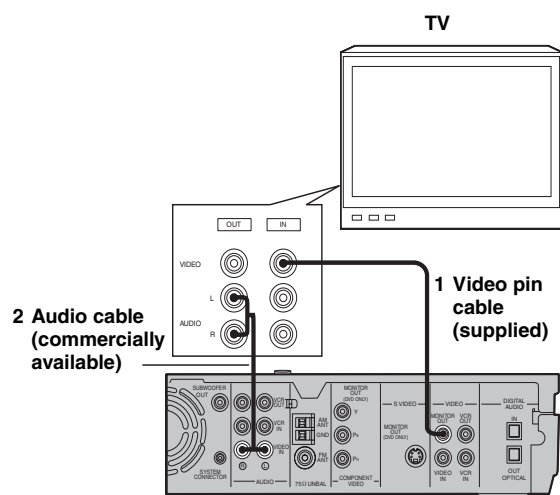

- 1 Connect the MONITOR OUT (VIDEO) jack on the CinemaStation to the video input jack on your TV using the supplied video pin cable.
- 2 To output sound from the speakers connected to CinemaStation, connect the VIDEO IN L/R (AUDIO) jacks on the CinemaStation to the audio output L/R jacks on your TV using the commercially available audio pin cable.

Other connection methods

To make a component video, S-Video, or SCART (U.K. and Europe models only) connection, a corresponding cable is required.

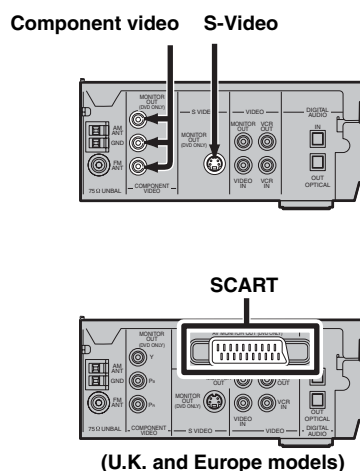

Component video

Connect the MONITOR OUT Y/Pb/Pr (COMPONENT VIDEO) jacks on the CinemaStation to the component video input Y/Pb/Pr jacks on your TV using a commercially available component video cable.

S-Video

Connect the MONITOR OUT (S VIDEO) jack on the CinemaStation to the S-Video input jack on your TV using a commercially available S-Video cable.

SCART (for U.K. and Europe models)

Connect the AV MONITOR OUT jack on the CinemaStation to the SCART input jack on your TV using a commercially available SCART video cable.


Note

(For U.K. and Europe models)

If you set the Video Output setting to "RGB" in the On-Screen Menu (page 29), the MONITOR OUT (S VIDEO) jack cannot output video signals.

Connecting Antennas

To enjoy radio on the CinemaStation, you need to connect AM and FM antennas to the CinemaStation. This product includes an AM loop antenna and indoor FM antenna. If there is a problem of weak radio wave reception in your area or you want to improve radio reception, we recommend that you use optional outdoor antennas. For details, consult the nearest authorized YAMAHA dealer or service center.

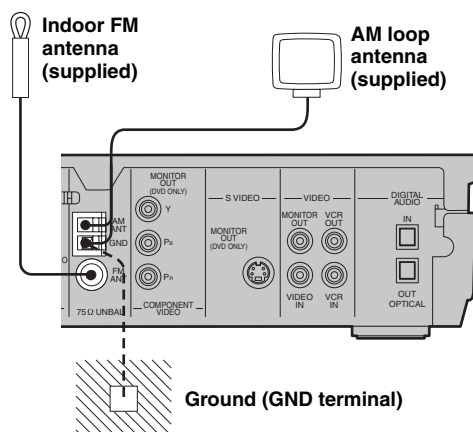

About grounding


For maximum safety and minimum interference, connect the antenna GND terminal to a good earth ground. A good earth ground is a metal stake driven into moist earth.

Connecting the FM antenna


- 1 Connect the supplied indoor FM antenna to the FM ANT jack on the CinemaStation.
- 2 Place the antenna away from the CinemaStation and speaker cables.

Connecting the AM loop antenna


- 1 Attach the antenna stand to the antenna. When attaching the antenna to the wall, you do not need to use the antenna stand.

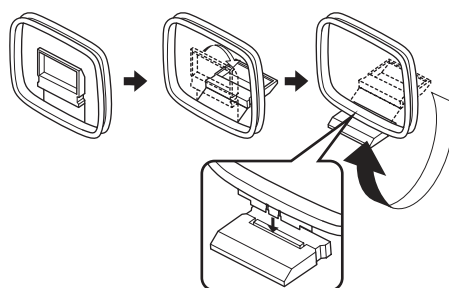

- 2 Open the lever to the right and insert the antenna's cord cores into the AM ANT and GND terminals.

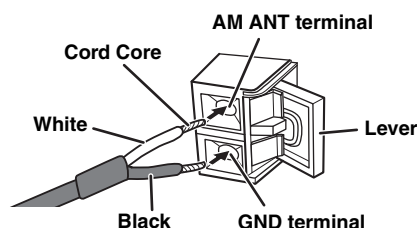

- 3 Close the lever and then pull the cord lightly to make sure it is fastened properly.

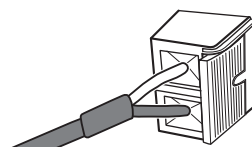


- 4 Place the antenna away from the CinemaStation and speaker cables. While listening to the radio, rotate the antenna head to find the best angle for reception.



Connecting External AV Components

If you connect external AV equipment such as a VCR, video camera, or game console to the following AV jacks on the CinemaStation, you can enjoy those AV sources with the CinemaStation. Also, you can record AV sources played on the CinemaStation using the recording equipment. This section provides some examples of other AV equipment connections. For information on your AV equipment, refer to the manual for it.

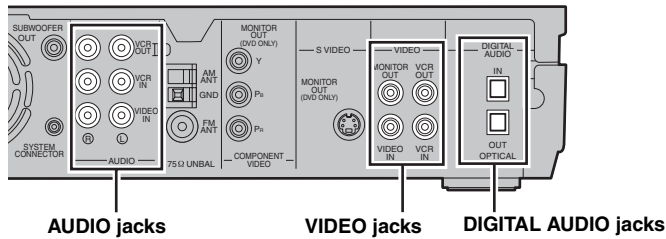

■ About the AUDIO jacks

- You cannot use both IN and OUT jacks for a same category simultaneously. For example, the signal input from the VCR IN jack does not output from the VCR OUT jack.
- CinemaStation's digital and analog signal circuits are independent of each other. Analog input signals can only output from analog output jacks and digital input signals can only output from digital output jacks.

■ About the DIGITAL AUDIO jacks

- The digital jacks are compatible with PCM, Dolby Digital and DTS signals.
- The digital jacks are designed based on EIA standards. To make a digital connection, use an optical cable that meets EIA standards.
- The OPTICAL IN jack is compatible with a digital signal that has a 96 kHz or less sampling frequency.
- You can use "Input Assign" in the Set Menu (page 78) to assign VIDEO or VCR to the OPTICAL IN jack. The default setting is "VIDEO".

■ Connecting a TV to an audio input

 
 
Enjoy TV sound with CinemaStation by connecting the TV audio output jack to the AUDIO IN jack using a commercially available audio cable. Press VIDEO on the remote control to input TV sound.

Connecting a VCR


If you connect a VCR to the CinemaStation using commercially available audio/video cables, you can enjoy videos with the CinemaStation and record AV sources played on the CinemaStation on the VCR. For information on your VCR, refer to the owner's manual for the VCR.

Notes

- Do not connect the power cable of the CinemaStation until all cable connections are completed.
- Turn off the AV equipment before connecting it to the CinemaStation.
- Use commercially available audio/video cables (shown below) to connect a VCR to the CinemaStation or a TV. To make all connections, three audio/video cables are required.



- **For U.K. and Europe models only:** Do not connect a TV to CinemaStation via a VCR using SCART connections. The copyright protection technology incorporated in the CinemaStation may not allow the VCR to play.

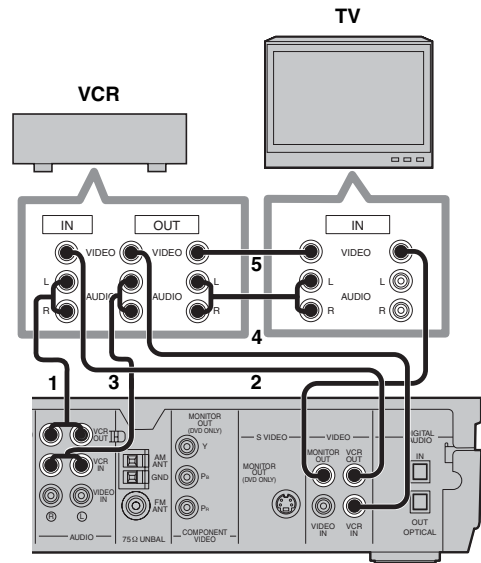

- 1** Connect the VCR OUT L/R (AUDIO) jacks on the CinemaStation to the audio input L/R jacks on your VCR using a commercially available audio/video cable.
- 2** Connect the VCR OUT (VIDEO) jack on the CinemaStation to the video input jack on your VCR using the audio/video cable (used in step 1).
- 3** Connect the VIDEO IN L/R (AUDIO) jacks on the CinemaStation to the audio output L/R jacks on your VCR using another audio/video cable.
- 4** Connect the VIDEO IN (VIDEO) jack on the CinemaStation to the video output jack on your VCR using the audio/video cable (used in step 3).
- 5** To watch videos when the CinemaStation is turned off, connect the audio and video output jacks on your VCR to the audio and video input jacks on your TV using another audio/video cable.



For information on how to connect a TV to CinemaStation, refer to "Connecting a TV" (page 12).

Connecting a game console


If you connect a game console to the CinemaStation using a commercially available audio/video cable (for analog connections) or a video cable and optical cable (for digital connections), you can enjoy games or videos with the CinemaStation. For information, refer to the manual supplied with your game console.

Notes

- Do not connect the power cable of the CinemaStation until all cable connections are completed.
- Turn off the AV equipment before connecting it to the CinemaStation.


■ Analog connections

Follow the procedure below to connect a game console or with an analog connection. If you are using VIDEO IN (AUDIO) jacks for connecting your TV (page 12), connect a game console or video camera using digital connections.

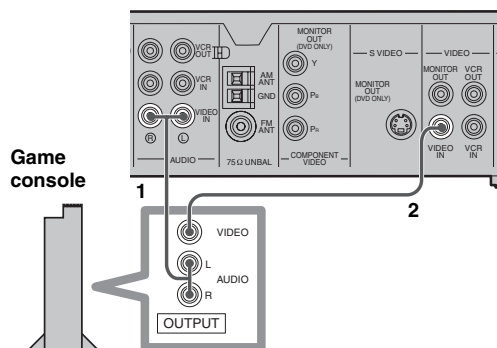

Note

 
Use a commercially available audio/video cable (shown below) to connect your game console to the CinemaStation using analog connections.



- 1 Connect the VIDEO IN L/R (AUDIO) jacks on the CinemaStation to the audio output L/R jacks on your game console using a commercially available audio/video cable.
- 2 Connect the VIDEO IN (VIDEO) jack on the CinemaStation to the video output jack on your game console using the audio/video cable (used in step 1).


■ Digital connections

Follow the procedure below to connect a game console using digital connections.

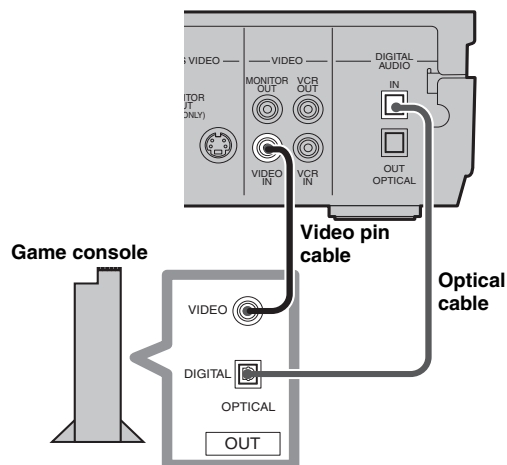


Note

 Use a commercially available video pin cable and an optical cable (shown below) to connect your game console to the CinemaStation with a digital connection.



- 1 Remove the anti-dust cap from the OPTICAL IN (DIGITAL AUDIO) jack on the CinemaStation.

Keep the cap to re-attach it when the jack is not in use.

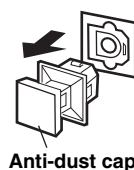

- 2 Connect the VIDEO IN (VIDEO) jack on the CinemaStation to the video output jack on your game console using a commercially available video pin cable.
- 3 Connect the OPTICAL IN (DIGITAL AUDIO) jack on the CinemaStation to the optical digital output jack on your game console using a commercially available optical cable.

Connecting a CD recorder or MD recorder

If you connect a CD recorder or MD recorder to the CinemaStation using commercially available optical cables, you can record audio sources played on the CinemaStation. Also, you can enjoy audio sources played on the recorder with the CinemaStation. For information on your CD recorder or MD recorder, refer to the manual for it.




- Use a commercially available optical cable (shown below) to connect your CD recorder or MD recorder to the CinemaStation. To make all connections, two optical cables are required.



- AM/FM broadcasts cannot be output from this unit's OPTICAL OUT (DIGITAL AUDIO) jack. To record AM/FM broadcasts, use a commercially available audio cable to connect the VCR OUT jack on the CinemaStation to the analog input jack on your recorder (see page 55).


Notes

- Do not connect the power cable of the CinemaStation until all cable connections are completed.
- Turn off the AV component before connecting it to the CinemaStation.

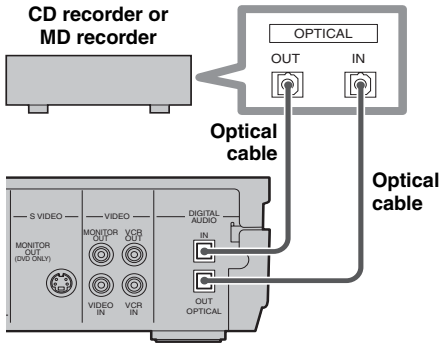

- 1 Remove the anti-dust caps from the **OPTICAL (DIGITAL AUDIO)** jacks on the CinemaStation.

Keep the cap to re-attach it when the jack is not in use.

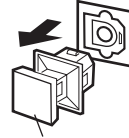


Anti-dust cap

- 2 Connect the **OPTICAL OUT (DIGITAL AUDIO)** jack on the CinemaStation to the optical digital input jack on your recorder using a commercially available optical cable.


- 3 To listen to audio sources played on the recorder with the CinemaStation, connect the **OPTICAL IN (DIGITAL AUDIO)** jack on the CinemaStation to the optical digital output jack on your recorder using another optical cable.

Connecting the Power Cables

After you made all connections, connect the power cables of the CinemaStation and subwoofer.

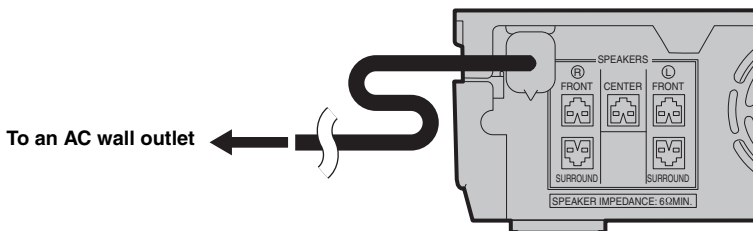

Installing Batteries in the Remote Control

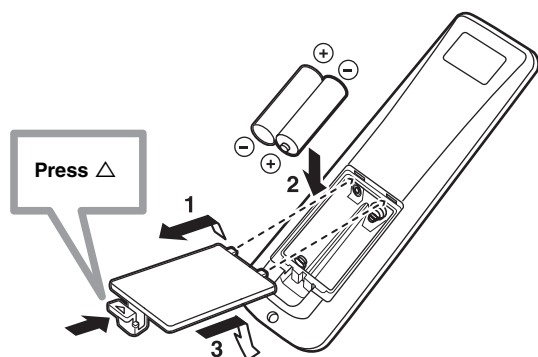

- 1 Press the \triangle mark on the battery cover and slide off the cover.
- 2 Insert the two supplied batteries (AA, R06, UM-3) into the battery compartment. Make sure you insert the batteries according to the polarity markings (+ and -).
- 3 Close the battery cover.


■ To replace the batteries

If the batteries grow old, the effective operation distance of the remote control decreases considerably. If this happens, replace the batteries with two new ones as soon as possible.

Notes

- Do not use an old battery together with new one.
- Do not use different types of batteries (for example, alkaline and manganese) together. Each type of battery has its own characteristics even if they are similar in shape.
- If the batteries run out, immediately remove them from the remote control to prevent an explosion or acid leak.
- Dispose of the batteries according to the regional regulations.
- If a battery starts leaking, dispose of it immediately. Be careful not to let leaking battery acid come into contact with your skin or clothing. Before inserting new batteries, wipe the compartment clean.
- Replace the batteries within two minutes to preserve the memory in the remote control.

Using the Remote Control

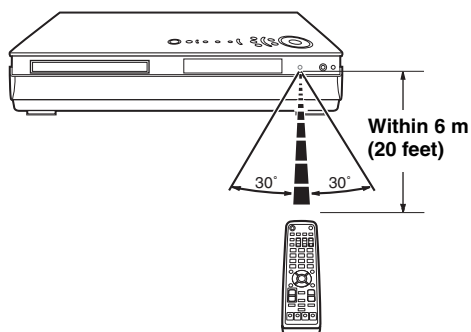


Use the remote control within 6 m (20 feet) of the CinemaStation and point it toward the remote control sensor (page 4).

Notes

- Be careful not to spill liquid on the remote control.
- Be careful not to drop the remote control.
- Do not leave the remote control in the following places:
 - hot or humid places, such as near a heater or in a bathroom
 - extremely cold places
 - dusty places


Turning the Power to On/Standby

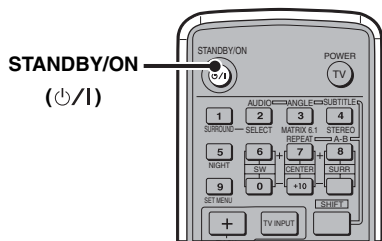

Press **STANDBY/ON** (⏻/⏻) once to turn on the CinemaStation. Press **STANDBY/ON** (⏻/⏻) once more to place the CinemaStation in standby mode.

Selecting an Input Source

You can enjoy various AV sources with the CinemaStation. After connecting the TV, speakers, antennas, or other AV equipment, follow the procedure below to select an input source you want to play on the CinemaStation. For information on connection methods, refer to pages 9 to 17.

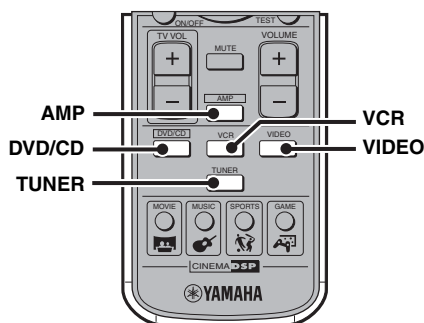

Perform one of the following operations

To switch to the CinemaStation amp mode functions (page 7):

Press **AMP**.

To switch to DVD/CD input:

Press **DVD/CD**.

To switch to tuner input (AM/FM radio):

Press **TUNER**.

To switch to VCR source input (your VCR connected to the CinemaStation):

Press **VCR**.


To switch to video source input (your game console connected to the CinemaStation):

Press **VIDEO**.

Note


The CinemaStation itself does not provide video playback or game features. To play videotapes or games, you need to connect a VCR or game console to the CinemaStation. For details, refer to "Connecting External AV Components" (page 14).

Adjusting the Volume Level

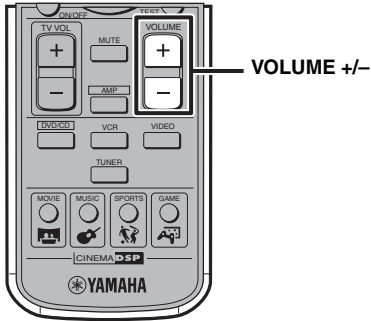

Press **VOLUME +** to increase the volume level and **VOLUME -** to decrease.

Muting the Sound (Mute)

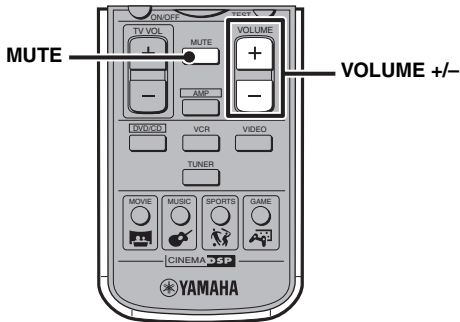

Press **MUTE** to mute the sound.

To restore audio output to the previous volume level, press **MUTE** again or press **VOLUME +/-**.

Auto Speaker Setup (YPAO)

With the YAMAHA Parametric Room Acoustic Optimizer (YPAO) feature, you can avoid troublesome speaker setup and achieve highly accurate sound adjustments. The supplied optimizer microphone collects and analyzes the sound that the speakers produce in your actual listening environment. We recommend that you perform YPAO each time when you change the speaker layout or listening position. To configure the speaker settings manually, refer to “Adjusting the Speaker Balance During Playback” (page 64).

YPAO performs the following adjustments:

- YPAO performs the following checks and makes appropriate adjustments to give you the best possible sound from your system.
- **Wiring/Polarity**
Checks which speakers are connected and the polarity of each speaker. Also checks and adjusts the sound level (volume) of each speaker so that the sound level of each speaker is the same when heard from the listening position.
- **Distance/Phase**
Checks the distance of each speaker from the listening position and adjusts the delay of each channel so that the sound from each speaker reaches the listening position at the same time. Also checks the phase of each speaker.
- **Size**
Checks the speakers frequency response and sets the crossover/high cut frequency for the subwoofer to improve the sound relationship between the speakers and the subwoofer.




The CinemaStation stores speaker settings configured by YPAO and manual setup individually. You can switch between them by turning on/off the YPAO mode (page 23).

Notes

- Since loud test tones will be output during the setup procedure, be sure to keep small children out of the room.
- For the best results, make sure the room is as quiet as possible during the setup procedure. If there is too much noise, the results may not be satisfactory.
- Disconnect the headphones from the SILENT CINEMA jack on the CinemaStation before starting the setup procedure.
- Be sure to disconnect the optimizer microphone when you have completed the setup procedure.
- The optimizer microphone is sensitive to heat. Do not place it on top of the CinemaStation or in direct sunlight.

1 Make sure the CinemaStation and subwoofer are turned off (in standby mode).


2 Connect the supplied optimizer microphone to the YPAO MIC jack on the CinemaStation.

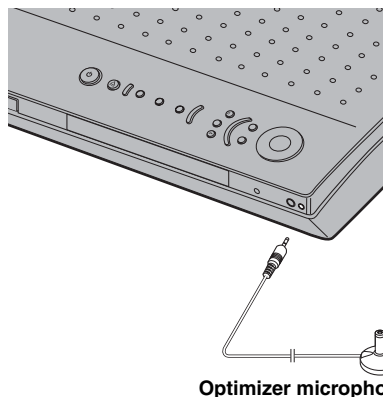

Optimizer microphone

3 Place the optimizer microphone on a flat level surface with the omni-directional microphone head upward, at your normal listening position.


If possible, use a stand such as a tripod to affix the optimizer microphone at the same height as your ears would be when you are seated in your listening position.

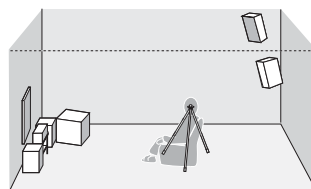

Optimizer microphone position




If your subwoofer has adjustable volume and crossover/high cut frequency controls, set the volume low but not minimum (as shown below) and set the crossover/high cut frequency to the maximum.

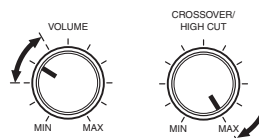


Subwoofer

- 4 Press STANDBY/ON to turn on the CinemaStation.**

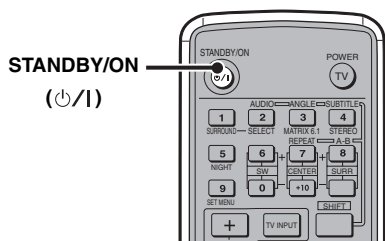

- 5 Press AMP, then press YPAO to start the setup procedure.**

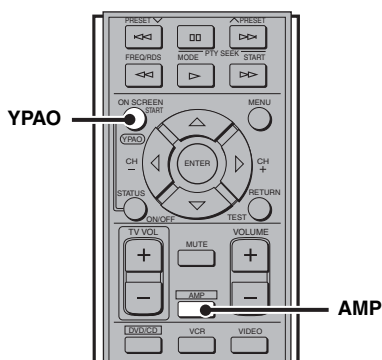

Test tones (the volume is adjustable) are output from each speaker, and the display changes as follows. Check that the speaker from which the test tone is being output and the name of the speaker appearing in the display are the same.

```

TEST LEFT
↓
TEST CENTER
↓
TEST RIGHT
↓
TEST R SUR.
↓
TEST L SUR.
↓
TEST SWFR
↓
OK?
    
```

- 6 Press YPAO once more to continue the setup procedure.**

“AUTO SETUP” appears in the display, and measurement begins. Test tones are output from each speaker in turn, and the display changes as follows.

```

TEST LEFT
↓
TEST CENTER
↓
TEST RIGHT
↓
TEST R SUR.
↓
TEST L SUR.
↓
TEST SWFR
↓
OK?
    
```


The progress status appears in the display as a percentage (normally, it takes about two minutes). If the setup procedure is successful, “YPAO ON” and the speaker connection status appear alternately in the display. For information on the speaker connection status, refer to “Speaker wiring indications” below. If a warning is detected, “WARNING” and the speaker connection status appear alternately in the display. For details, refer to “Error and warning messages” (page 24).

■ Speaker wiring indications

- 2.0 F - - - :** Front speakers only
- 2.1 F - - SW :** Front speakers and the subwoofer
- 3.0 F C - - :** Front speakers and the center speaker
- 3.1 F C - SW :** Front speakers, center speaker and the subwoofer
- 4.0 F - SR - :** Front speakers and surround speakers
- 4.1 F - SR SW :** Front speakers, surround speakers and the subwoofer
- 5.0 F C SR - :** Front speakers, center speaker and surround speakers
- 5.1 F C SR SW :** Front speakers, center speaker, surround speakers and the subwoofer


■ To cancel YPAO mode during setup

Press ON/OFF during the setup procedure.

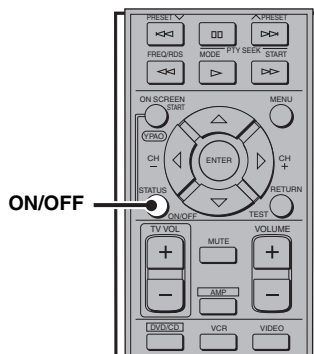

■ To turn the YPAO mode on/off

You can switch between speaker settings configured by YPAO and manual setup by turning on/off the YPAO mode.

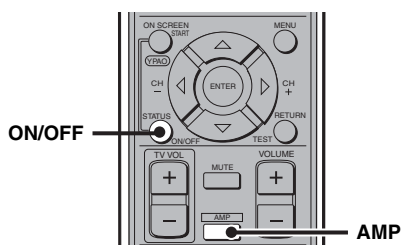

1 Press AMP.

2 Press ON/OFF to display the currently selected mode, then press ON/OFF again to select “YPAO ON” or “YPAO OFF”.

- **YPAO ON:** The CinemaStation uses speaker settings configured by YPAO. If an error occurs during testing, this changes to “W YPAO ON”.
- **YPAO OFF:** The CinemaStation uses speaker settings configured by manual setup.



- If a warning occurs during the YPAO measurement process, “W YPAO ON” appears in the display. If this happens, use \triangle or ∇ to switch the display.
- If you select “YPAO OFF”, settings are returned to their previously set values.

Notes

- In the YPAO mode, you can make fine adjustments for YPAO speaker settings such as level and distance, etc.
- If you make fine adjustments to your YPAO speaker settings, these are reflected whenever you select the YPAO mode.

■ Error and warning messages

If an error or warning message appears, check the cause and follow the remedy corresponding to the message, then carry out the setup procedure once more (page 21).

Error messages before setup

Error message	Cause	Remedy
Connect MIC	Optimizer microphone is not connected.	<ul style="list-style-type: none"> Connect the supplied optimizer microphone to the YPAO MIC jack on the front panel.
Unplug HP	Headphones are connected.	<ul style="list-style-type: none"> Unplug the headphones.

Error and warning messages during setup

Message	Cause	Remedy
NO FRONT L	The front left channel signal is not detected.	<ul style="list-style-type: none"> Select the front speakers with SPEAKER A or B. Check the front left speaker connection.
NO FRONT R	The front right channel signal is not detected.	<ul style="list-style-type: none"> Select the front speakers with SPEAKER A or B. Check the front right speaker connection.
NO SURR L	The left surround channel signal is not detected.	<ul style="list-style-type: none"> Check the left surround speaker connection.
NO SURR R	The right surround channel signal is not detected.	<ul style="list-style-type: none"> Check the right surround speaker connection.
NO SIGNAL	The optimizer microphone does not detect test tones.	<ul style="list-style-type: none"> Check the microphone setting. Check the speaker connections and placement.
CANCEL	<ul style="list-style-type: none"> The setup procedure was cancelled due to user activity. The setup procedure was cancelled because YPAO ON/OFF was pressed. 	<ul style="list-style-type: none"> Perform the setup procedure again. Do not adjust VOLUME (etc.) during the auto setup procedure.

Error messages after setup

If “WARNING” appears in the display after measurement is complete:

Press \triangle or ∇ .

The error message appears. If multiple errors are detected, press \triangle or ∇ to switch between them.

Message	Cause	Remedy
W PHASE L	The speaker polarity (+/-) for the front left channel is incorrect. This message may appear even if the speaker is connected correctly.	<ul style="list-style-type: none"> Check the speaker connection for the proper polarity (+ or -).
W PHASE R	The speaker polarity (+/-) for the front right channel is incorrect. This message may appear even if the speaker is connected correctly.	<ul style="list-style-type: none"> Check the speaker connection for the proper polarity (+ or -).
W PHASE C	The speaker polarity (+/-) for the center channel is incorrect. This message may appear even if the speaker is connected correctly.	<ul style="list-style-type: none"> Check the speaker connection for the proper polarity (+ or -).
W PHASE SR L	The speaker polarity (+/-) for the surround left channel is incorrect. This message may appear even if the speaker is connected correctly.	<ul style="list-style-type: none"> Check the speaker connection for the proper polarity (+ or -).
W PHASE SR R	The speaker polarity (+/-) for the surround right channel is incorrect. This message may appear even if the speaker is connected correctly.	<ul style="list-style-type: none"> Check the speaker connection for the proper polarity (+ or -).

Message	Cause	Remedy
W LEVEL L	The volume level of the front left speaker is outside the specified range. (No level correction is made.)	<ul style="list-style-type: none"> • Readjust the speaker installation so that all speakers are set in locations with similar conditions. • Check the speaker connections. • Use speakers of similar quality and efficiency.
W LEVEL R	The volume level of the front right speaker is outside the specified range. (No level correction is made.)	<ul style="list-style-type: none"> • Readjust the speaker installation so that all speakers are set in locations with similar conditions. • Check the speaker connections. • Use speakers of similar quality and efficiency.
W LEVEL C	The volume level of the center speaker is outside the specified range. (No level correction is made.)	<ul style="list-style-type: none"> • Readjust the speaker installation so that all speakers are set in locations with similar conditions. • Check the speaker connections. • Use speakers of similar quality and efficiency.
W LEVEL SR L	The volume level of the surround left speaker is outside the specified range. (No level correction is made.)	<ul style="list-style-type: none"> • Readjust the speaker installation so that all speakers are set in locations with similar conditions. • Check the speaker connections. • Use speakers of similar quality and efficiency.
W LEVEL SR R	The volume level of the surround right speaker is outside the specified range. (No level correction is made.)	<ul style="list-style-type: none"> • Readjust the speaker installation so that all speakers are set in locations with similar conditions. • Check the speaker connections. • Use speakers of similar quality and efficiency.
W LEVEL SW	The volume level of the subwoofer is outside the specified range. (No level correction is made.)	<ul style="list-style-type: none"> • Readjust the speaker installation so that all speakers are set in locations with similar conditions. • Check the speaker connections. • Use speakers of similar quality and efficiency. • Adjust the output volume of the subwoofer.
W DIST L	The front left speaker is placed too far away from the listening position.	<ul style="list-style-type: none"> • Bring the speaker closer to the listening position.
W DIST R	The front right speaker is placed too far away from the listening position.	<ul style="list-style-type: none"> • Bring the speaker closer to the listening position.
W DIST C	The center speaker is placed too far away from the listening position.	<ul style="list-style-type: none"> • Bring the speaker closer to the listening position.
W DIST SR L	The surround left speaker is placed too far away from the listening position.	<ul style="list-style-type: none"> • Bring the speaker closer to the listening position.
W DIST SR R	The surround right speaker is placed too far away from the listening position.	<ul style="list-style-type: none"> • Bring the speaker closer to the listening position.
W DIST SW	The subwoofer is placed too far away from the listening position.	<ul style="list-style-type: none"> • Bring the subwoofer closer to the listening position.
W NOISY	Background noise is too loud.	<ul style="list-style-type: none"> • Try the setup procedure in a quiet environment. • Turn off noisy electric equipment like air conditioners etc., or move them away from the optimizer microphone.

Notes

- If a phase warning appears, adjustments are made, but they may not be optimal. In this case, follow the remedy and carry out the setup procedure again (page 21).
- If a level warning appears, no adjustments are made. In this case, follow the remedy and carry out the setup procedure again (page 21).


Enjoying Sound Field Programs (DSP Programs)

Digital Sound Field Processor (DSP) programs feature a variety of sound fields that allow you to enjoy movies and music. At the touch of a button, the DSP program automatically sets your speaker settings, such as reflected sound, reverberant sound and the delay time for each channel to match your audio source.




- You can change the delay time for each DSP program as necessary. For information on the default delay time and how to change it, refer to “DSP Program Delay Time Settings” (page 68).
- The CinemaStation has other sound field effects not listed below. Also, you can enjoy DSP programs with headphones or low volume. For details, refer to “Enjoying DSP Programs in a Variety of Ways” (page 60).
- Feel free to choose a sound field program based on your listening preference, and not purely on the name of the program itself.
- To play back 2ch sources such as CDs faithful to the original sound, turn off the DSP program feature. For details, refer to “Enjoying 2ch sources with all speakers (Dolby Pro Logic II)” (page 58).
- Experiment with different sound field effects until you find the DSP program that you feel best matches your source. For details, refer to “Enjoying Sound with Specific Speakers” (page 57).


Movie programs

<p>Each time you press the MOVIE button, the program changes as follows:</p> <div style="text-align: center;">  <pre> graph TD Action --> Drama Drama --> Sci-Fi Sci-Fi --> Spectacle Spectacle --> Theater Theater --> Action </pre> </div>	<p>Action Enhances the stereoscopic effect for a thrilling sense of presence only found in an action movie.</p>
	<p>Drama Expresses surround sounds softly so that voice and dialog are clear and crisp.</p>
	<p>Sci-Fi (Science Fiction) Fills the space with music and sound that have an eerie sense of reality. Suitable for serious science fiction that has a good story line.</p>
	<p>Spectacle Expresses super-wide spaces. Suitable for a movie that has a powerful visual impact.</p>
	<p>Theater Preserves the power of Dolby or DTS Surround for experiencing the rich acoustical presence of a movie theater.</p>


Music programs

<p>Each time you press the MUSIC button, the program changes as follows:</p> <div style="text-align: center;">  <pre> graph TD MusicVideo --> ClassicHall ClassicHall --> JazzClub JazzClub --> RockConcert RockConcert --> 5chStereo 5chStereo --> MusicVideo </pre> </div>	<p>Music Video Magnifies the feeling of listening to live rock or jazz in a concert hall. The screen image and sound field space stretch out to the fullest, engulfing you in an atmosphere of excitement.</p>
	<p>Classic Hall (The Munich Philharmonic Hall) Puts you in a front row seat at the Munich Philharmonic Hall, surrounded in calm, voluptuous sound.</p>
	<p>Jazz Club (The Bottom Line) Reproduces the acoustics of sitting right in front of the stage at The Bottom Line, a popular New York City jazz club. Experience the lively, realistic throb of a wide stage.</p>
	<p>Rock Concert (The Roxy Theater) Recreates the acoustic personality of a nightclub seating for an audience of about 460.</p>
	<p>5ch Stereo Fills the space with sound and allows all listeners to enjoy the same high-quality sound no matter where they are sitting or standing in the room. A DSP program that is especially suitable for home parties.</p>

Sports program


<p>Press the SPORTS button.</p> 	<p>Live Sports</p> <p>In a live stereo sports broadcast, announcer voices are central, engulfed in the cheers and emotional whirl of the stadium.</p>
---	--

Game program

<p>Press the GAME button.</p> 	<p>Game</p> <p>Gives TV games extra depth and surround. You can enjoy TV games with monaural or stereo sound.</p>
---	--


Setting the Sleep Timer

If you set the Sleep Timer, the CinemaStation automatically turns to the Standby mode after the specified time.

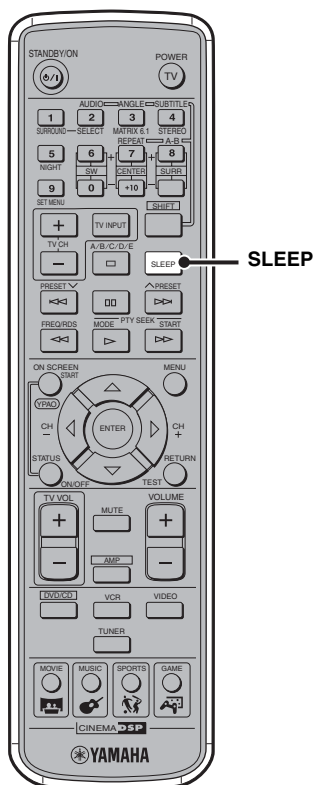

Press SLEEP to select the time setting.

Each time you press the SLEEP button, the time setting changes as follows:

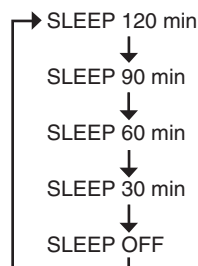

The “SLEEP” indicator lights up in the CinemaStation display.



- The Sleep Timer only works for the CinemaStation. It does not turn off other equipment connected to the CinemaStation.
- The Sleep Timer cancels if you turn the CinemaStation to the Standby mode.
- The CinemaStation stores the mode or playback settings in its memory when it automatically turns to the Standby mode. You can use those settings when you turn on the CinemaStation next time.

■ To cancel the Sleep Timer


Press SLEEP repeatedly to select “SLEEP OFF”.

Changing DVD Settings on the TV (On-Screen Menu)


You can change the various settings for DVD playback using the menu displayed on the TV screen (On-Screen Menu) connected to the CinemaStation. For details on the available menu items, refer to "On-Screen Menu guide" (page 30).

Operating the On-Screen Menu

In this procedure, we adjust the color saturation for example. The actual screen may differ depending on the selected menu.

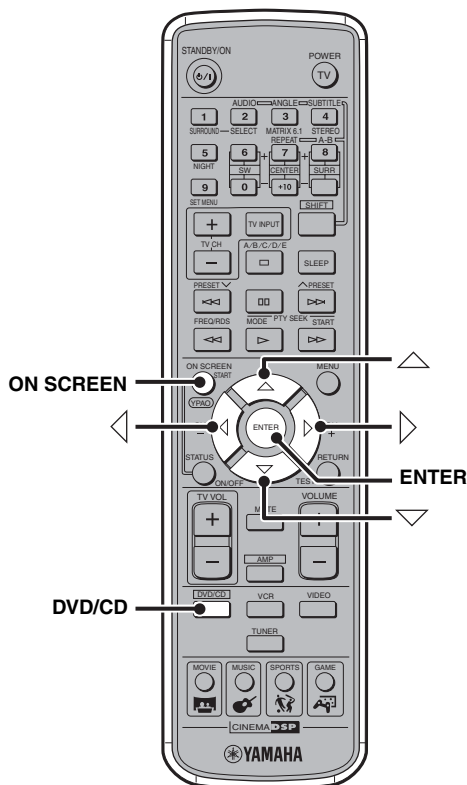


- 1 Press DVD/CD, then press ON SCREEN to display the On-Screen Menu on your TV.
- 2 Press \triangle or ∇ to select a main menu item (Preferences), then press \triangleright .

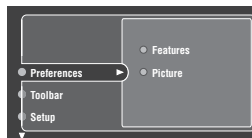

- 3 Press \triangle or ∇ to select a submenu item (Picture), then press \triangleright .




- 4 Press \triangle or ∇ to select a setting item (Saturation).

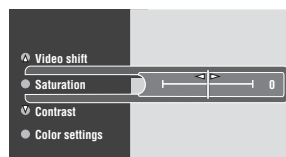

- 5 Press \triangleleft or \triangleright to adjust the setting for the selected item.

You can also use \triangle or ∇ depending on the selected item.

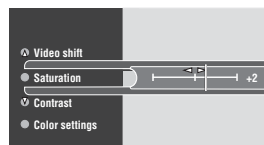

- 6 Press ENTER.
- 7 To exit the On-Screen Menu, press ON SCREEN.

On-Screen Menu guide

Main Menu	Submenu	Setting Item	Function
Preferences	Features	Status window	Sets the status information display to "On" or "Off". On: You can display or hide status information using the STATUS button on the remote control. Status information includes disc type and total time or elapsed time of the current track/chapter. Off: Status information does not appear.
	Picture	Video shift	Adjusts the screen position (+1 to +7).
		Saturation	Adjusts the picture color saturation (-7 to +7).
		Contrast	Adjusts the picture contrast (-7 to +7).
		Color settings (Colour settings)	Adjusts the picture shade. Select a setting from "Rich", "Natural", "Soft" and "Animation". If you select "Personal", you can manually adjust each image setting.
		Brightness	Adjusts the picture brightness (-7 to +7).
		Sharpness	Adjusts the picture sharpness (-7 to +7).
Toolbar	Program	Clear All	Clears the Program Play contents. (page 36)
		Tracks	Selects chapters or tracks for Program Play. (page 35)
		Program	Sets Program Play to "On" or "Off" (page 36).
		Play list (Playlist)	Shows the Program Play contents. (page 36)
	View	Zoom	Enlarges the picture. (page 42)
		Angle	Switches the picture angle. (page 41)
		Chapter Preview	When this item is set, you can preview the beginning of each chapter in turn.
		Rotate	Rotates a JPEG image to -180°, -90°, 0°, 90°, or 180°. The image is rotated counter-clockwise for negative values, and clockwise for positive values.
	Play Option	Audio	Selects the audio language. (page 40)
		Disc Navigation	Selects a title, chapter, or track to play.
		Sub-title (Subtitle)	Selects the subtitle language. You can only select languages the disc contains. (page 40)
	Search	Frame by Frame	Advances/reverses one frame at a time. Frame Reverse is not available with video CDs.
		Fast	Sets the playback speed to -8, -4, +1, +4, or +8x (negative number to reverse and positive number to advance).
		Time	Specifies an elapsed time for playback. (page 34)
		Slow	Sets the playback speed to -1, -1/2, -1/4, -1/8, 0, +1/8, +1/4, +1/2, or +1x (negative number to reverse, 0 to pause, and positive number to advance).
	Slide Show	Picture Time	Sets the duration for each image to Slow, Medium or Fast for JPEG slide show playback.

Main Menu	Submenu	Setting Item	Function
Setup	Access	Disc lock	Sets Disc lock to "On" or "Off". (page 44)
		Change PIN	Changes the password. (page 45)
		Enter PIN	Enters the password. (page 44)
		Parental level	Sets the Parental Control level (0 to +8). (page 43)
		Country	Selects the country in which you are using the CinemaStation.
	TV*1	TV shape	Sets the screen aspect of your TV to "4:3 panscan", "4:3 letterbox", or "Wide-screen (Widescreen)".
		TV system	Sets the video signal system of your TV to "NTSC", "PAL", or "AUTO". When using a TV compatible with both NTSC and PAL, set this to "AUTO". When using Progressive Scan (page 46), set this to "NTSC" or "PAL" that matches to your TV.
		Video Output (For U.K. and Europe models: When connecting the TV to the AV MONITOR OUT jack, press <input type="checkbox"/> again to display "YUV<->RGB". Otherwise, skip this step.)	Sets the output signal of the AV MONITOR OUT jack to "YUV" or "RGB". When connecting your TV to the MONITOR OUT (S VIDEO) jack, set this to "YUV".
	Language	Default Sub-title (Default Subtitle)	Selects a default subtitle language. When playing a disc, the CinemaStation automatically uses the selected language for the subtitle. If you play a disc that is not compatible with the selected language, another language will be selected automatically.
		Menu Language	Select the language for the On-Screen Menu.
		Default Audio	Selects a default audio language. When playing a disc, the CinemaStation automatically uses the selected language for the audio. If you play a disc that is not compatible with the selected language, another language will be selected automatically.
	Audio Menu	Digital output	Sets the output signal of the OPTICAL OUT jack to "All" or "PCM Only". All: Outputs all types of digital signals that the CinemaStation can reproduce. PCM Only: Converts the signal to PCM before outputting it (except for DTS sources). (When "PCM Only" is selected, signals will not be output from the speakers, VCR OUT jack or OPTICAL OUT jack during DTS playback.)
	Features	PBC	Sets video CD playback control to "On" or "Off". On: Playback control is activated, and you can display or hide a disc menu using the MENU button on the remote control (page 39). Off: Disc menus do not appear on the TV screen.

*1 Before configuring items in this menu, refer to the manual for your TV to make sure of the correct settings. Incorrect settings may disable TV functions. If this happens and you cannot operate the On-Screen Menu due to the failure, carry out the procedure below.

■ To recover TV settings from a failure


- 1) Press DVD/CD.
- 2) Press ☐ (for about 5 seconds) until "NTSC<->PAL" appears in the CinemaStation Display.
- 3) **For U.K. and Europe models:** When connecting the TV to the AV MONITOR OUT jack, press ☐ again to display "YUV<->RGB".
For all other models: Skip this step.
- 4) Press ☐ to switch the settings.
- 5) If "NTSC/PAL SET" or "YUV/RGB SET" appears in the CinemaStation display, the recovery procedure is complete.

Supported Disc Types

You can enjoy movie or music discs with CinemaStation. Since some CinemaStation disc operations are limited to specific disc types, the supported disc types are indicated using the icons shown below. Each icon means that the operation is limited to the corresponding disc type. For information on supported disc standards and disc usage notes, refer to “Disc Information” (page 86) and “Handling a disc” (page 87). Operations with no icon indicated are available for all disc types.

DVD video	Video CD	Music CD
DVD-V	VCD	CD

About MP3 and JPEG picture discs

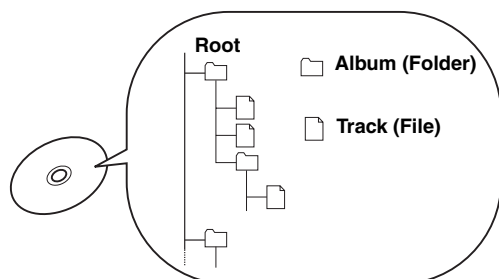

You can play MP3 files recorded on a CD-R or CD-RW with similar uses as a music CD. The CinemaStation regards folders in the MP3 disc as albums, and files as tracks (as shown on the left). Also you can play JPEG picture files recorded on a CD-R or CD-RW. For details about how to play JPEG picture discs, refer to “Enjoying JPEG Images” (page 47).

What is MP3?

“MP3 (MPEG-1 Audio Layer-3)” is a standard technology and format for compressing an audio sequence into a small-sized file. However it preserves the original level of sound quality when it is played.

Notes

- Depending on recording conditions such as recording software settings, the CinemaStation may not be able to play the disc or play tracks in the order they were recorded.
- The CinemaStation is compatible with a bit rate range of 32, 64, 96, 128, 192, or 256 kbps and variable bit encoded MP3 files.
- The CinemaStation is compatible with a sampling frequency of 32, 44.1, or 48 kHz.

What is JPEG?


“JPEG” is a compression format for still images. With only a slight drop in image quality (part of the data is removed), still image data can be compressed to approximately 1/10 to 1/100 of its original size.

Notes

- The Program Play feature is not available for JPEG images.
- This unit does not support the progressive JPEG format.

Basic Playback Operations

Follow the procedures below to carry out basic disc playback operations. The CinemaStation also provides various useful functions for disc playback. For details, refer to “Useful Playback Operations” (page 34).

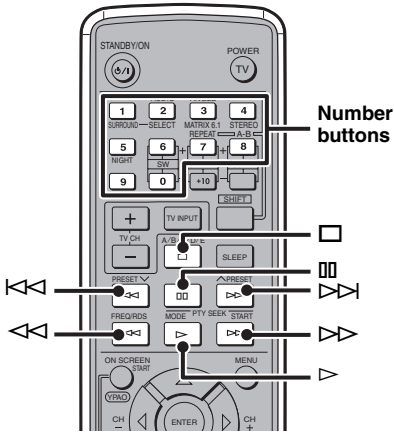




- To start playback

Press \blacktriangleright .

- **To stop playback**

Press \square .



Whenever you stop playback, the CinemaStation automatically memorizes the stopping position, and the message “To start playback from the beginning, press  once more. To resume playback from where it was stopped, press .” appears. If you press , playback resumes from where it left off.

- To pause playback

Press **00**.



To return to normal playback, press \blacktriangleright .

- To advance frame-by-frame

DVD-V VCD

Press **⏸** to pause playback, then press **⏸** repeatedly. Each time you press **⏸**, playback advances one frame at a time. To return to normal playback, press **▶**.

- To fast reverse or fast forward

To fast reverse, press . To fast forward, press . Each time you press the button, the speed changes (reverse: -4, -8, or -32x, forward: 4, 8, or 32x).

Notes

- -32 and 32x are not available for music CD playback.
- The speakers do not produce any sound if you fast forward/ reverse while playing a Dolby Digital or DTS disc.

■ To slow reverse and slow forward


DVD-V VCD

Press **⏸** to pause playback, then press **⏮** to slow reverse or press **⏭** to slow forward. Each time you press **⏮** or **⏭**, the speed changes (reverse: $-1/8$, $-1/4$, or $-1/2x$; forward: $1/8$, $1/4$, or $1/2x$). To return to normal playback, press **⏪**.

Note

The slow reverse feature is not available for video CD playback.

■ **To skip chapters (tracks)**

To skip to the start of the current chapter (track), press .

To skip to the next chapter (track), press **⏭**.

To skip to the previous chapter (track), quickly press **⏮** twice.

Note

The Skip feature may not work properly when using Playback Control (page 39) to play a video CD.

- To specify a track for playback

VCD CD

Use the Number buttons to enter the track number you want to play.

To enter 2-digit number, press a number button for the second digit place, then press a number button for the first digit place.



You can also use the On-Screen Menu (page 29) to advance frame-by-frame, fast or slow reverse/forward. Reversing frame-by-frame is available only with the On-Screen Menu.

Useful Playback Operations


You can enjoy movie or music discs with various useful features on the CinemaStation. For information on basic disc playback operations, refer to “Basic Playback Operations” (page 33).

Specifying an elapsed time for playback (Time Search)

You can specify an elapsed time where you want playback to start. The Time Search feature is only available with the On-Screen Menu (page 29).

Notes


- This feature is not available during Program Play of a video CD.
- The Time Search feature is not available during Program Play of a video CD.

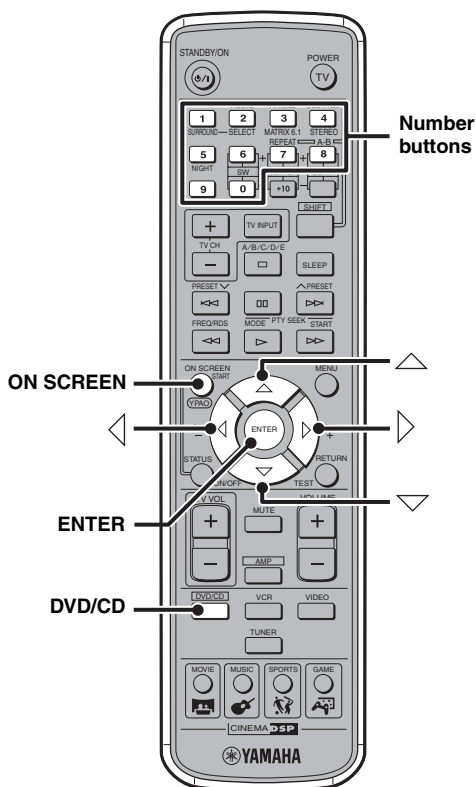

- 2 Press \triangle or ∇ to select “Toolbar”, then press \triangleright .




- 3 Press \triangle or ∇ to select “Search”, then press \triangleright .

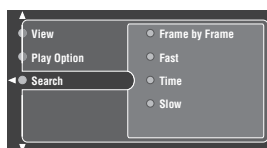

- 4 Press \triangle or ∇ to select “Time”, then press \triangleright .



- 5 Press \triangleleft or \triangleright to select a parameter (hour, minute, or second), then use the number buttons to enter the time where you want to start playback.

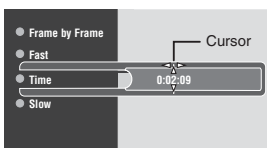

- 6 Press ENTER to start playback from the specified position.


- 7 To exit the On-Screen Menu, press ON SCREEN.

Customizing playback order (Program Play)

You can customize the playback order for chapters or tracks stored in the disc. Also, you can display the playback order, disable the Program Play feature, or clear all Program Play contents after customizing the playback order. The Program Play feature is available only with the On-Screen Menu (page 29).


Notes

- In this procedure, we use the DVD disc for example. The actual screen may differ depending on the disc type you use.
- The Playback Control feature (page 39) is not available during Program Play of a video CD.

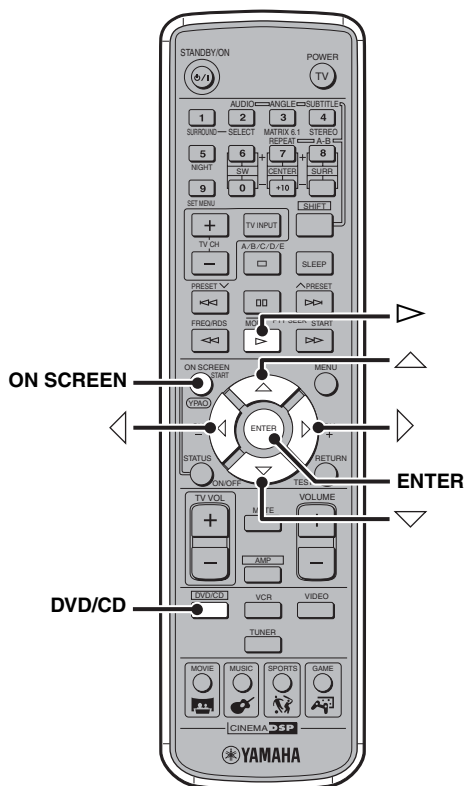


1 Press DVD/CD, then press ON SCREEN to display the On-Screen Menu on your TV.


2 Press \triangle or ∇ to select “Toolbar”, then press \triangleright .

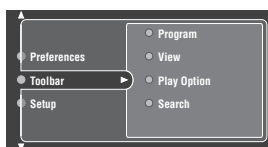

3 Press \triangle or ∇ to select “Program”, then press \triangleright .

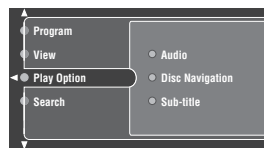

4 Press \triangle or ∇ to select “Tracks”, then press \triangleright .

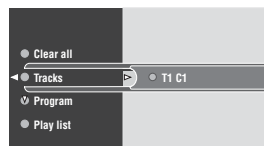

5 When using a DVD or video CD, press \triangle or ∇ to select the title and press \triangleright , then press \triangle or ∇ to select the chapter you want to store as a Program Play content and press ENTER.


When using a music CD, press \triangle or ∇ to select the track you want to store as a Program Play content, then press ENTER.



Repeat this step until you store all desired chapters (tracks). To select chapters in another title, press \triangleleft .

6 Press \triangleleft to return to the screen in step 3, then press ON SCREEN to exit the On-Screen Menu.

The Playback mode indicator (“PROG”) lights up in the CinemaStation display and Program Play starts automatically. If playback does not start automatically, press \triangleright .

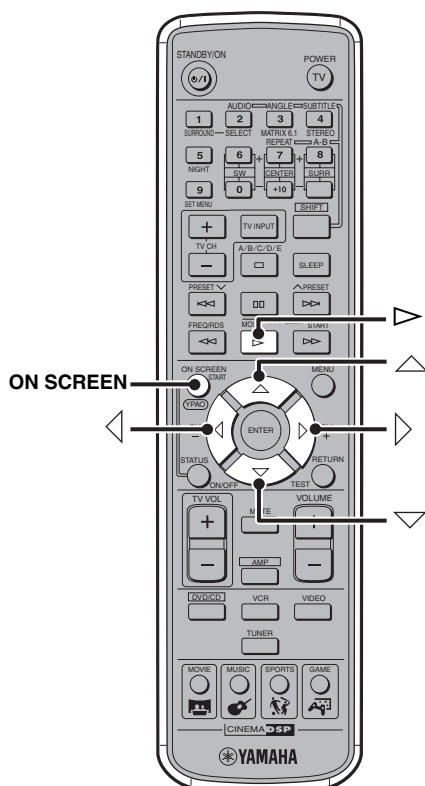

■ To check Program Play contents

You can check the chapters (tracks) you stored as Program Play contents.

- 1 Carry out steps 1 to 3 in the “Customizing playback order (Program Play)” procedure (page 35).
- 2 Press \triangle or ∇ to select “Play list” (“Playlist”), then press \triangleright .
- 3 Press \triangle or ∇ to scroll the list of chapters (tracks).

■ To enable/disable Program Play

The CinemaStation automatically enables Program Play if you customize playback order. This playback order remains even after playback of all chapters (tracks) stored as the Program Play contents are finished. To return to normal playback, follow the procedure below to disable Program Play. Even if you disable it, the playback order remains in the memory until you clear it, so you can use the playback order again by enabling Program Play and pressing \triangleright .

- 1 Carry out steps 1 to 3 in the “Customizing playback order (Program Play)” procedure (page 35).
- 2 Press \triangle or ∇ to select “Program”, then press \triangleright .
- 3 Press \triangle or ∇ to select “On” or “Off”.

Note

If you press \blacktriangle and remove the disc you made Program Play settings for, the settings are cancelled.

■ To clear Program Play contents

Follow the procedure below to clear all Program Play contents.

- 1 Carry out steps 1 to 3 in the “Customizing playback order (Program Play)” procedure (page 35).
- 2 Press \triangle or ∇ to select “Clear All”, then press \triangleright .
The message “Cleared” appears on the TV screen and all Program Play contents are cleared.

Repeating playback (Repeat Play)

You can repeat single chapter (track), single title, or entire disc. Also, you can set two points (start and end points) to repeat the specified section of a title (track) with A-B Repeat (page 38).

Notes

- Repeat Play may not work depending on DVD disc types.
- Repeat Play does not work while playing back a video CD using the Playback Control feature (page 39).



1 Play back the disc, title, or chapter (track) you want to repeat.

For details, refer to “Basic Playback Operations” (page 33).


2 While holding down SHIFT, press REPEAT to select the Repeat Play mode.

Every time you press the button, the display on the TV screen changes as follows:

DVD Video



Video CD/Music CD

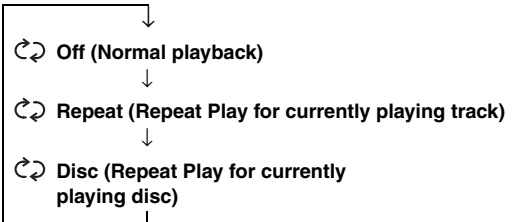

Repeat Play starts and the following playback mode indicator lights up in the CinemaStation display.

REP: Repeats the title, chapter or track.

REP ALL: Repeats the disc.

■ To cancel Repeat Play


While holding down SHIFT, press REPEAT to select “Off”.

■ To repeat between two points (A-B Repeat)

You can repeat the specified section of a title (track) by setting two points (start and end points).

Notes

- Repeat Play may not work depending on DVD disc types.
- You can use A-B Repeat only within one title (track).

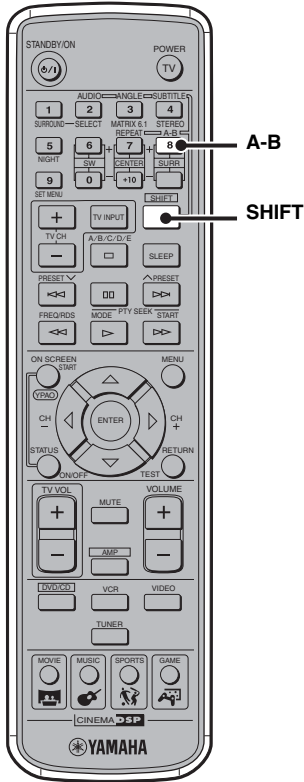

1 Play back the title or track that includes the section you want to repeat.

For details, refer to “Basic Playback Operations” (page 33).

2 At the position where you want to set as the start point of the repeat section, hold down SHIFT and press A-B.

“↺ Repeat A” appears on the TV screen and the playback mode indicator (“REP A-” lights up in the CinemaStation display).

3 At the position where you want to set as the end point of the repeat section, hold down SHIFT and press A-B again.

A-B Repeat starts.

“↺ A/B” appears on the TV screen and the playback mode indicator (“REP A-B” lights up in the CinemaStation display).

■ To cancel A-B Repeat

While holding down SHIFT, press A-B.

“↺ A/B Off” appears on the TV screen, and A-B Repeat is cancelled.


Operating disc menus (DVD menu/ Video CD Playback Control)

Many DVDs and video CDs include original navigational menus called “DVD menus” and “video CD Playback Control menus”. These menus provide a convenient way to operate the disc. Follow the procedure below to use a DVD menu or video CD Playback Control with the CinemaStation.

Note

Menu contents or operation method of each disc may vary. For information about the disc you are using, refer to the operating instructions in the disc’s menu or on its jacket.

■ To operate the DVD menu DVD-V

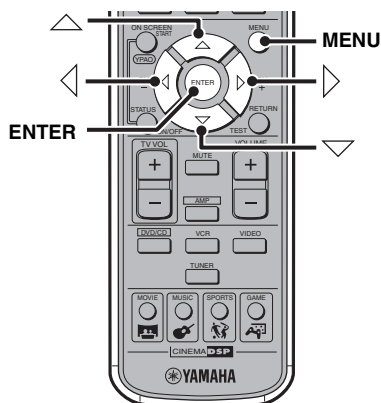

1 Press MENU.

The DVD menu appears on the TV screen.




Depending on the disc, the DVD menu may automatically appear after the disc is loaded.

2 Press $\triangle / \nabla / \triangleleft / \triangleright$ to select a menu item, then press ENTER.

■ To operate the video CD Playback Control menu VCD

If you play back a video CD that includes the Playback Control feature, the menu automatically appears on the TV screen. To operate the Playback Control feature with the CinemaStation remote control, use the following buttons.

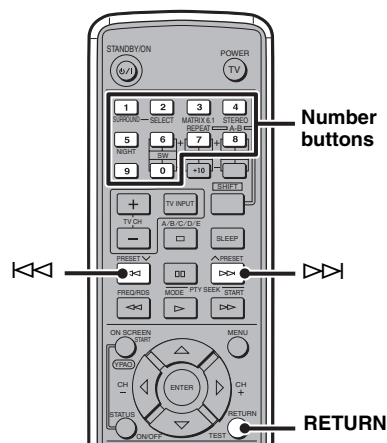

Number buttons: Selects an item.

$\triangleright \triangleright$: Moves to the next screen.

$\triangleleft \triangleleft$ or RETURN: Returns to the previous screen.

Note


The Playback Control feature does not work during Program Play (page 35).

Selecting Audio and Subtitle Languages DVD-V

You can select audio and subtitle languages for DVD playback. Also, you can set default languages for DVD playback with the On-Screen Menu. For details on setting default languages, refer to “On-Screen Menu guide” (page 30).

Note


This selection is available only with multi-language compatible discs. Also, languages available for each disc may vary. For information about the disc you are using, refer to the operating instructions in the disc’s menu or on its jacket.

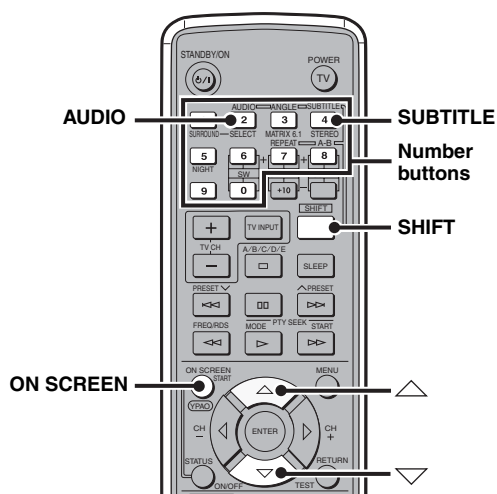


- 1 While playing a disc or pausing, hold down SHIFT and press AUDIO or SUBTITLE.**

The audio language selection screen or subtitle language selection screen appears on the TV screen.

Audio language selection screen

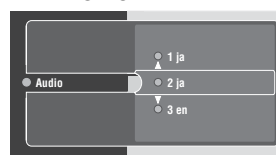

Subtitle language selection screen

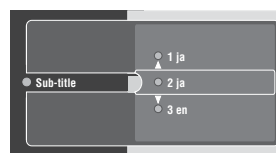

- 2 Press \triangle or ∇ or the number buttons to select the language you want to use for audio or subtitle.**



You can also select a language by pressing AUDIO or SUBTITLE while holding down SHIFT.

- 3 To exit the language selection screen, press ON SCREEN.**

■ To turn off the subtitle


Select “None” in step 2 above.

Selecting a Viewing Angle DVD-V

You can select a viewing angle for DVD playback.

Note


This selection is available only with multi-angle compatible discs. Also, viewing angles available for each disc may vary. For information on your disc, refer to the operating instructions in the DVD menu or on its jacket.

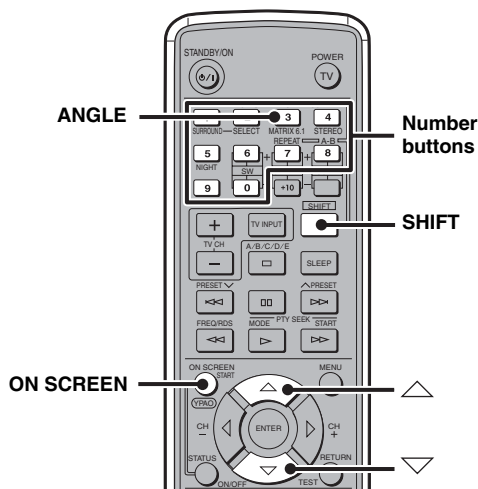

- 1 While playing a disc or pausing, hold down SHIFT and press ANGLE.**

The viewing angle selection screen appears on the TV screen.

Viewing angle selection screen

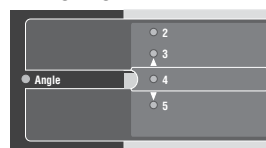

- 2 Press \triangle or ∇ or the number buttons to select the viewing angle.**




You can also select a viewing angle by pressing ANGLE while holding down SHIFT.

- 3 To exit the viewing angle selection screen, press ON SCREEN.**

Zooming Images DVD-V

You can zoom in a specified part of picture during DVD playback. The Zoom feature is available only with the On-Screen menu (page 29).

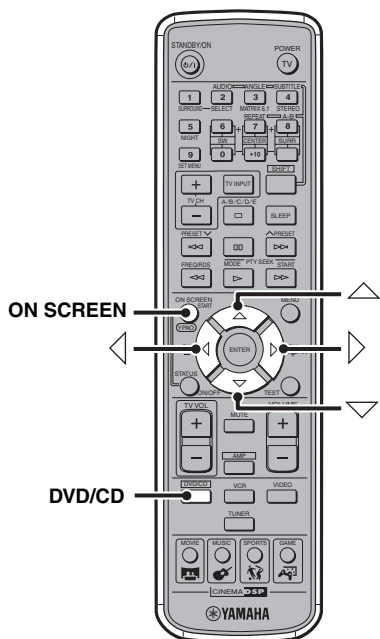


1 Press DVD/CD, then press ON SCREEN to display the On-Screen Menu on your TV.


2 Press \triangle or ∇ to select “Toolbar”, then press \triangleright .



3 Press \triangle or ∇ to select “View”, then press \triangleright .

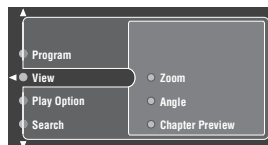


4 Press \triangle or ∇ to select “Zoom”, then press \triangleright .

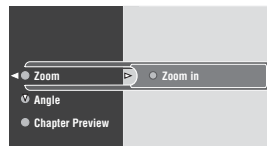

5 Press \triangle / ∇ / \triangleleft / \triangleright to specify the center of a zooming part (+ mark position), then press ENTER.

Each time you press ENTER, the zooming scale changes as follows:

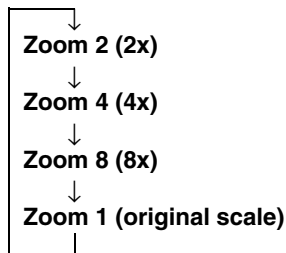

6 To exit the On-Screen Menu, press ON SCREEN.


■ To return to the original scale
Select “Zoom 1” in step 5 above.

Restricting Playback (Parental Control) DVD-V

You can set playback restrictions for certain discs using Parental Control. Only users who know the password can access the locked discs.

Setting the Parental Control level

You can restrict playback according to a predetermined level (Parental Control level). For information on the Parental Control level of each disc, refer to the instruction on its jacket.

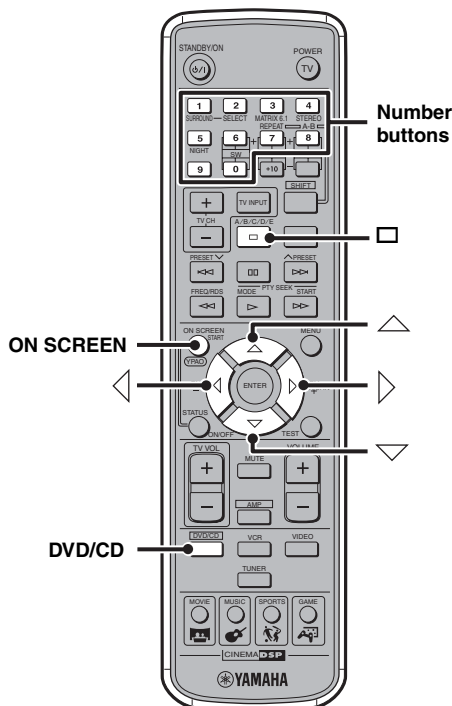


1 Press DVD/CD, then press ON SCREEN to display the On-Screen Menu on your TV.


2 Press \triangle or ∇ to select "Setup", then press \triangleright .




3 Press \triangle or ∇ to select "Access", then press \triangleright .

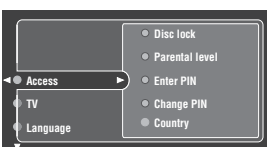

4 Press \triangle or ∇ to select "Enter PIN", then press \triangleright .

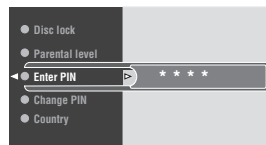


5 Press the number buttons to enter the password (4 digits).

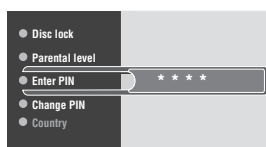


Notes

- The default password is "0000". To change the password, carry out the "Changing the password" procedure (page 45).
- If you forget your password, press \square four times instead of entering the password. The restricted icon appears. If you press \square another four times, "Enter the new PIN" appears.

6 Press \triangle or ∇ to select "Parental level", then press \triangleright .

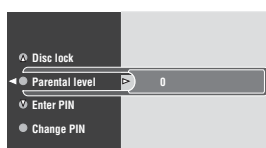

7 Press \triangleleft or \triangleright to adjust the Parental Control level, then press ENTER.

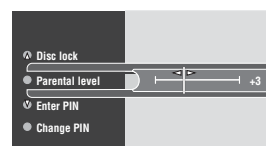

0: Parental Control is off. (Users can play all discs without entering the password.)


1 to 7: Users cannot play a disc that is rated above the level without entering the password. (The smaller the number, the stricter the Parental Control level.)

8: Users can play all discs without entering the password.

8 To exit the On-Screen Menu, press ON SCREEN.


Locking discs

You can use this function to lock all video discs to restrict playback. Only those discs you select to unlock in “Playing locked discs” are available for access.

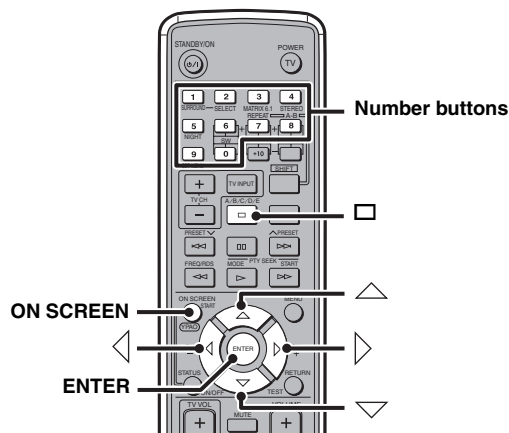


1 Carry out steps 1 to 5 in the “Setting the Parental Control level” procedure (page 43).

2 Press \triangle or ∇ to select “Disc lock”, then press \triangleright .

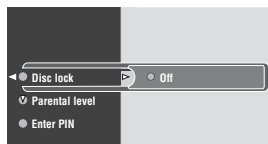

3 Press \triangle or ∇ to select “On”, then press ENTER.

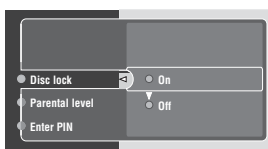

4 To exit the On-Screen Menu, press ON SCREEN.

■ To disable a lock applied to a disc

Select “Off” in step 3.

Playing locked discs

Follow the procedure below to access a locked disc by entering the password.

1 Load a disc into the disc tray.

If the disc is locked, the password input screen appears on the TV screen.

2 Press \triangle or ∇ to select “Play once” or “Play always”, then press \triangleright .

Play once: Requires that the password be entered when playing the disc next time.

Play always: Does not require that the password be entered when playing the disc next time.

3 Use the number buttons to enter the password (4 digits).

Playback starts.






- Even if you select “Play always”, you can change the setting to “Play once” by pressing \square within 10 seconds after the \square icon appears on the TV screen.
- The CinemaStation automatically memorizes disc information for up to 120 discs. If you load the 121st disc, the CinemaStation automatically deletes the disc information for the first (oldest) one.

Notes



- The default password is “0000”. To change the password, carry out the “Changing the password” procedure.
- If you forget your password, press \square four times instead of entering the password. The restricted icon appears. If you press \square another four times, “Enter the new PIN” appears.

Changing the password

Follow the procedure below to change the password to access locked disc.

- 1** Carry out steps 1 to 5 in the “Setting the Parental Control level” procedure (page 43).
- 2** Press  or  to select “Change PIN”, then press .
- 3** Use the number buttons to enter the current password (4 digits).


Notes

- The default password is “0000”.
- If you forget your password, press  four times instead of entering the password. The restricted icon appears. If you press  another four times, “Enter the new PIN” appears.

- 4** Use the number buttons to enter the new password (4 digits).
- 5** Use the number buttons to re-enter the new password (4 digits) for confirmation.
- 6** To exit the On-Screen Menu, press ON SCREEN.

Enjoying High-Quality Video (NTSC/Progressive Scan) DVD-V

Progressive Scan is video that represent a frame with one pass of sequential scan lines whereas interlace output video, which is usually adopted for most TVs, represents a frame with two passes. Progressive Scan provides better video quality by reducing picture noises. To enjoy DVDs with Progressive Scan, you need to connect the CinemaStation to a TV that has component video input jacks compatible with Progressive Scan. For details on connections, refer to “Other connection methods” (page 12). Also, Progressive Scan is available only for NTSC signal output. You can set the video signal system of your TV to “NTSC” with the On-Screen Menu (page 29).

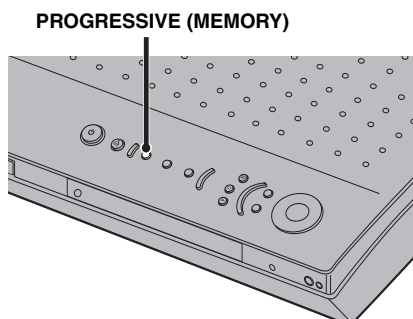

■ To turn on the Progressive Scan mode

While disc playback is stopped, press and hold PROGRESSIVE (MEMORY) on the CinemaStation for 2 seconds or longer.

The Progressive Scan mode is activated and the “PROGRESSIVE” indicator lights up in the CinemaStation display.

■ To turn off the Progressive Scan mode

While disc playback is stopped, press and hold PROGRESSIVE (MEMORY) on the CinemaStation for 2 seconds or longer.



- When the Progressive Scan mode is off, the CinemaStation provides video with interlace output mode.
- During playback, you cannot switch between the Progressive Scan mode and the interlace output mode.

Notes

- If you play video with a 4:3 aspect ratio on a 16:9 wide television screen, Progressive Scan may fill the screen top to bottom. In this case, change the screen aspect setting of your TV with the On-Screen Menu (page 29). If you cannot adjust the ratio, press PROGRESSIVE (MEMORY) to turn off the Progressive Scan mode (use the interlace output mode).
- When the Progressive Scan mode is activated, a video signal will only output from the COMPONENT VIDEO jacks. Since the COMPONENT VIDEO jack and Progressive Scan are available only for DVD playback, you cannot enjoy sources other than DVDs with the Progressive Scan mode.
- CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT YOU SWITCH THE CONNECTION TO THE “STANDARD DEFINITION” OUTPUT. IF THERE ARE QUESTIONS REGARDING YOUR VIDEO MONITOR COMPATIBILITY WITH THIS UNIT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.


This unit is compatible with the complete line of YAMAHA projectors (including the DPX-1, DPX-1000, DPX-1100, LPX-500 and LPX-510), and YAMAHA plasma displays (including the PDM-1, PDM-4210 and PDM-4210E).

For U.K. and Europe models only

- When “Video Output” is set to an item other than “YUV”, Progressive Scan is not available.
- When this unit is connected to a PAL monitor and you are playing back a PAL disc, if “TV system” is set to “AUTO” in the On-Screen Menu (page 29), Progressive Scan is not available.
- When “TV system” is set to “NTSC” in the On-Screen Menu (page 29), Progressive Scan is available only with NTSC signals (PAL signals are converted into NTSC signals).

Enjoying JPEG Images

You can view JPEG pictures in a commercial JPEG CD or personally recorded on a CD-R or CD-RW disc on the TV screen.

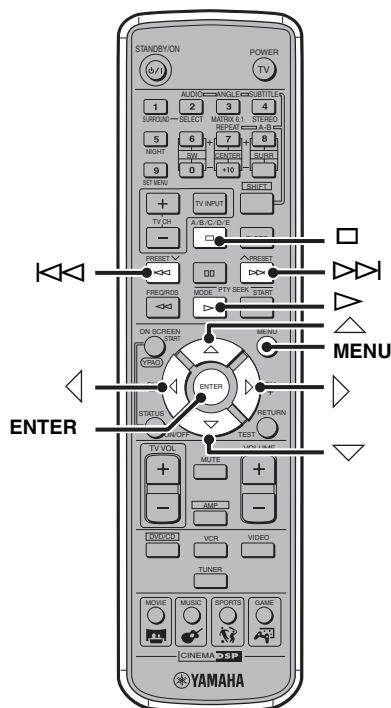

1 Load a disc in the disc tray.

Playback starts automatically and thumbnails appear on the TV screen.

To move through the list of thumbnails, press **◀** or **▶**.

2 Press **▲** / **▼** / **◀** / **▶** to select the thumbnail, then press **ENTER**.

To return to the thumbnail screen, press **MENU**.

3 Press **▶** to start the slide show.

To stop the slide show, press **◻**.

To return to the thumbnail screen, press **MENU**.




You can configure the slide show setting or rotate pictures with the On-Screen Menu. For details, refer to “On-Screen Menu guide” (page 30).

Tuning Radio Stations


The CinemaStation provides several methods for tuning AM/FM radio stations, such as Auto Tuning (FM only), Manual Tuning (AM/FM) and Preset Tuning (AM/FM). Follow the procedure below to tune your favorite radio stations.

About the display

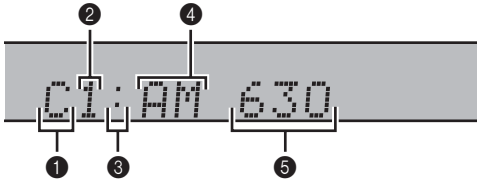


Tuning radio stations automatically (Auto Tuning)

If the radio wave reception is strong in your area, Auto Tuning is a quick and useful way to tune radio stations.

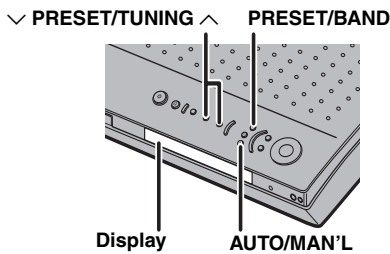


- 1 Press **PRESET/BAND** on the CinemaStation to select **FM (Tuning mode)** or **AM (Tuning mode)**.

Each time you press the button, the mode changes as follows:

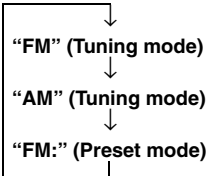

 - 2 Press **AUTO/MAN'L** to select **Auto Tuning mode**. Make sure **"AUTO"** lights up in the CinemaStation display.



- 3 Press **PRESET/TUNING** \wedge or \vee to select the radio station you want to receive.

The CinemaStation automatically detects radio stations that have strong signals for your selection.

- 1 **Preset group**

Displays the preset group (page 51).

- 2 **Preset number**

Displays the preset number (page 51).

- 3 **Mode indicator**

Preset mode: Displays a colon.

Tuning mode: No colon is displayed.

- 4 **Band**

Displays the band (AM or FM).

- 5 **Frequency**


Displays the frequency.

Tuning radio stations manually (Manual Tuning)

If the radio wave reception is weak in your area, tune radio stations manually.


- 1 Press **PRESET/BAND** on the CinemaStation to select **FM (Tuning mode)** or **AM (Tuning mode)**.

Each time you press the button, the mode changes as follows:

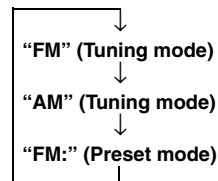

- 2 Press **AUTO/MAN'L** to select **Manual Tuning mode**.

 Make sure **"AUTO"** disappears from the CinemaStation display.




- 3 Press **PRESET/TUNING** \wedge or \vee to adjust the frequency.



If you use Manual Tuning for FM stations, the CinemaStation's radio wave reception mode automatically changes to the monaural mode to increase the signal quality.

Selecting preset radio stations (Preset Tuning)

If you preset your favorite radio stations with Auto Preset (page 51) or Manual Preset (page 52) on the CinemaStation, you can tune the radio stations simply by selecting the preset group and number.

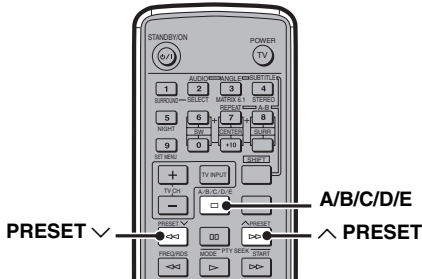

1 Press A/B/C/D/E to select the preset group of the radio station you want to listen to.

Each time you press the button, the preset group changes.

2 Press ∨ PRESET/TUNING ∧ to select the preset number of the radio station you want to listen to.


“TUNED” lights up in the CinemaStation display and the radio plays.



You can also select preset radio stations by pressing A/B/C/D/E and ∨ PRESET/TUNING ∧ on the CinemaStation.


Receiving FM RDS stations (U.K. and Europe models only)

RDS (Radio Data System) is a transmission system for FM stations used mainly in the U.K. and Europe. RDS transmissions include various types of information such as PS (Program Service), PTY (Program Type), RT (Radio Text), and CT (Clock Time). Follow the procedure below to receive FM stations by the RDS transmissions on the CinemaStation.

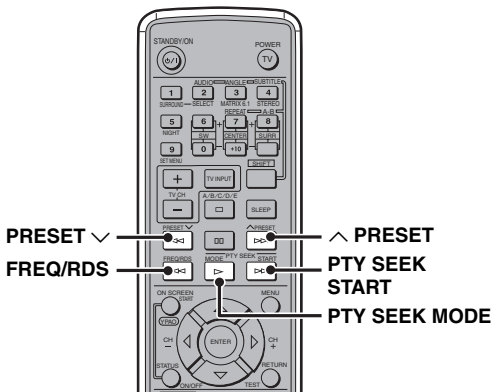


■ To switch frequency and RDS modes

 While receiving an FM RDS station (an RDS indicator lights up), press FREQ/RDS.



Each time you press the button, the mode changes as follows:

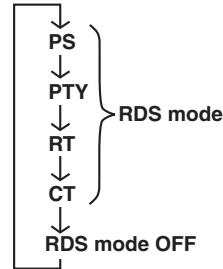

About information type

RDS includes the following types of information.

- **PS (Program Service)**
Displays the station name.
- **PTY (Program Type)**
Displays the program type (genre). For details, refer to the “Program Type (genre)” list (page 50).
- **RT (Radio Text)**
Displays text information related to the RDS broadcast. (Shows an under bar for a non-identifiable character.)
- **CT (Clock Time)**
Displays the current time. (Shows the message “CT WAIT” when time data cannot be received properly.)

Notes

- The available RDS information types vary depending on the station.
- If the FM RDS station’s signal transmission is too weak, the CinemaStation may not be able to receive RDS information completely. In particular, RT (Radio Text) information uses a lot of bandwidth, so it may not be available even when other modes are selectable.
- RDS information may not transmit under weak radio wave conditions. In this case, press AUTO/MAN’L on the CinemaStation to let the CinemaStation’s radio wave reception mode automatically change to the monaural mode to increase the signal quality.
- If radio wave interference occurs, the message “...WAIT” appears in the CinemaStation display. In this case, the CinemaStation cannot receive RDS information.

■ **To select stations by program type (genre)**

You can tune FM RDS stations by selecting a program type (genre). Once you select a program type, the CinemaStation automatically searches for FM RDS stations currently broadcasting the corresponding programs.

■ **To cancel steps 1 or 2**
Press PTY SEEK MODE twice.

1 Press PTY SEEK MODE.

The program type you selected last time appears in the CinemaStation display.

2 Press PRESET \wedge or \vee to select the program type you want to listen to.


The available program types are as follows:

Program Type (genre)

NEWS	News
AFFAIR	Current Affairs
INFO	General Information
SPORT	Sports
EDUCATE	Education
DRAMA	Drama
CULTURE	Culture
SCIENCE	Science
VARIED	Light Entertainment
POP M	Pops
ROCK M	Rock
M.O.R. M	Middle-Of-the-Road Music (easy-listening)
LIGHT M	Light Classics
CLASSICS	Serious Classics
OTHER M	Other Music

3 Press PTY SEEK START to start searching stations.

 “PTY HOLD” lights up in the CinemaStation display during a search.



If the CinemaStation finds a FM RDS station that matches the program type you selected, the radio plays.


4 Repeat step 3 until the CinemaStation finds your favorite FM RDS station.

Presetting Radio Stations

You can preset your favorite radio stations automatically (FM stations only) or manually to tune the stations simply by selecting the preset group and number. The CinemaStation can store up to 40 stations (5 groups x 8 stations) in its memory.


Presetting FM stations automatically (Auto Preset)

If the FM radio wave reception is strong in your area, Auto Preset is a quick and useful way to preset FM radio stations. If you want to preset AM stations or the FM radio wave reception is weak in your area, preset stations manually (page 52).

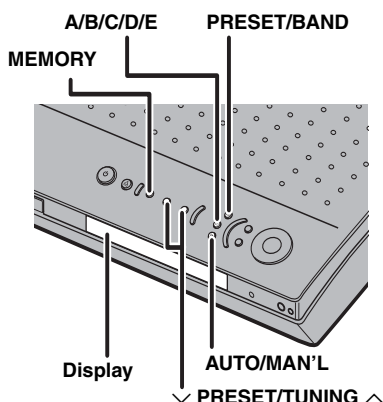


1 Press PRESET/BAND on the CinemaStation to select FM (Preset mode).

Each time you press the button, the mode changes as follows:

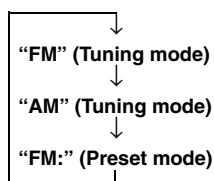

2 Press AUTO/MAN'L to select Auto Preset mode.

 Make sure "AUTO" lights up in the CinemaStation display.



3 Press and hold MEMORY for about three seconds.

"MEMORY" and "AUTO" blinks in the CinemaStation display, then Auto Preset starts at the frequency currently selected toward higher frequency in a few seconds. When Auto Preset finishes, "MEMORY" and "AUTO" turns off and the CinemaStation automatically applies a preset group and number to each detected FM station.

■ To specify a starting group and number

You can specify a preset group and number that store the first detected FM station. Also, you can start Auto Preset at the frequency currently selected toward higher or lower frequency.

 
1 Carry out steps 1 and 2 in the "Presetting FM stations automatically (Auto Preset)" procedure on this page.

2 Press and hold MEMORY for about three seconds.

The MEMORY indicator blinks in the display.

3 While MEMORY is blinking, press A/B/C/D/E to select the starting preset group, then press PRESET/TUNING ^ or v to select the preset start number.

4 Press PRESET/BAND to turn off the colon (:), then press PRESET/TUNING ^ or v.




When you press PRESET/TUNING v, Auto Preset starts at the frequency currently displayed and tunes toward the lower frequencies, and when you press PRESET/TUNING ^, Auto Preset tunes toward the higher frequencies.



- When presetting a radio station, the CinemaStation automatically sets the reception mode (stereo or monaural) at the same time.
- Auto Preset automatically stops after searching the whole frequency range or detecting 40 stations.
- If you select a preset number that has been already applied to other station, it will be replaced with the new station.
- If the MEMORY indicator stops blinking before you perform step 3 above, Auto Preset is cancelled and you must start the procedure again.

Presetting radio stations manually (Manual Preset)

If you want to preset AM stations or FM radio wave reception is weak in your area, follow the procedure below to preset radio stations manually.

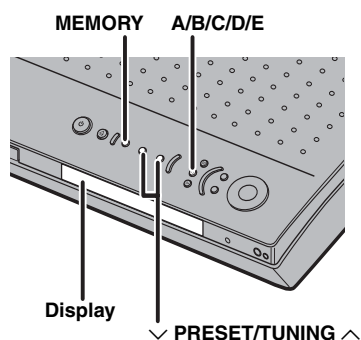

1 Tune the radio station you want to preset.

 
For details, refer to “Tuning Radio Stations” (page 48).

2 Press MEMORY.

“MEMORY” blinks in the CinemaStation display for about five seconds.

3 Press A/B/C/D/E to select the preset group (A to E) to where you want to store the currently selected station.

Make sure the colon (:) appears in the CinemaStation display.



4 Press ∇ PRESET/TUNING ▲ to select the preset number (1 to 8) to where you want to store the currently selected station.

5 Press MEMORY.


The CinemaStation applies the selected preset group and number to the station.



- When presetting a radio station, the CinemaStation automatically sets the reception mode (stereo or monaural) at the same time.
- If you select a preset number that has been already applied to other station, it will be replaced with the new station.
- If the MEMORY indicator stops blinking before you perform step 3 above, Auto Preset is cancelled and you must start the procedure again.

Changing the order of preset radio stations

Follow the procedure below to change the order of preset radio stations. In this procedure, we switch the radio stations preset to E1 and A5 for example.

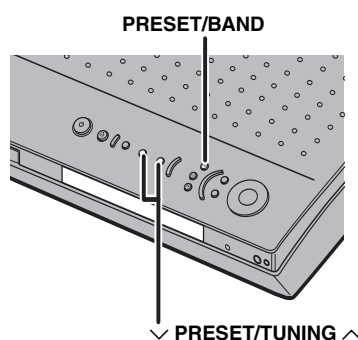

1 Select the radio station preset to E1.

For details, refer to “Selecting preset radio stations (Preset Tuning)” (page 49).

2 Press and hold PRESET/BAND for about three seconds.

“E1” and “MEMORY” blink in the CinemaStation display.

3 While MEMORY is blinking, press A/B/C/D/E to select the preset group “A”, then press ∇ PRESET/TUNING ▲ to select the preset number “5”.

“A5” and “MEMORY” blink in the CinemaStation display.

4 Press PRESET/BAND.

“EDIT E1-A5” appears in the CinemaStation display and the order of the stations changes.



If the MEMORY indicator stops blinking before you perform step 3 above, Auto Preset is cancelled and you must start the procedure again.

Playing Back External Sources


If you connect an external AV component to CinemaStation, you can enjoy AV sources played back on that component with CinemaStation. For details on connection methods, refer to “Connecting External AV Components” (pages 14 to 17). Also, you can operate the component using the CinemaStation remote control by setting a remote control code (page 72).

Note

Make sure you read the owner's manual for your external AV component before making any connections or operating it.

TV playback

If you connect the VIDEO IN L/R (AUDIO) jacks on the CinemaStation to the audio output L/R jacks on your TV using an audio pin cable (page 12), you can enjoy TV sounds with the CinemaStation.

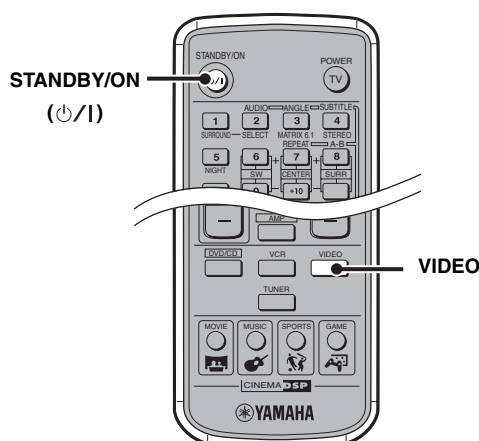

1 Turn on the TV, then press **STANDBY/ON** (⏻/⏻) to turn on the CinemaStation.


2 Press **VIDEO**.

VCR playback

If you connect the VCR IN L/R (AUDIO VIDEO) jacks on the CinemaStation to the audio/video output L/R jacks on your VCR using an audio/video cable (page 15), you can enjoy VCR sounds with the CinemaStation.

Note

When you set the “Input Assign” to “VCR” (page 78) and “Input Mode” to “AUTO” (page 79) in the Set Menu, the CinemaStation outputs the source from the OPTICAL IN jack if any source is input from it. To listen to the source input from the VCR IN jacks, stop playback on the equipment connected to the OPTICAL IN jack.

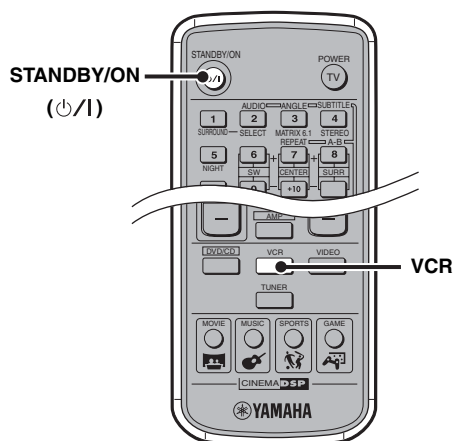

1 Turn on the TV and VCR, then switch the TV input to which the CinemaStation is connected.

2 Press **STANDBY/ON** (⏻/⏻) to turn on the CinemaStation.

3 Press **VCR**.

4 Start playback on the VCR.

Game console playback


If you connect the VIDEO IN L/R (AUDIO/VIDEO) jacks on the CinemaStation to the audio/video output L/R jacks on your game console using an audio/video cable (page 16), you can enjoy game sounds with the CinemaStation.



You can also connect the CinemaStation and a game console with the digital connection (page 16).

Note

When you set the “Input Assign” to “VIDEO” (page 78) and “Input Mode” to “AUTO” (page 79) in the Set Menu, the CinemaStation outputs the source from the OPTICAL IN jack if any source is input from it. To listen to the source input from the VIDEO IN jacks, stop playback on the equipment connected to the OPTICAL IN jack.

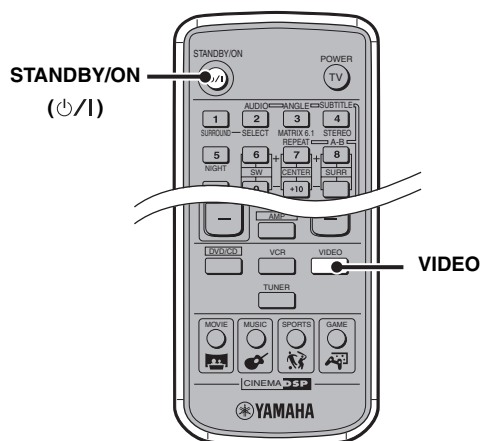

- 1** Turn on the TV and game console, then switch the TV input to which the CinemaStation is connected.
- 2** Press STANDBY/ON (⏻) to turn on the CinemaStation.
- 3** Press VIDEO.
- 4** Start playing a game.

Recording AV Sources With External AV Components

If you connect an external recorder to the CinemaStation, you can record AV sources played back on the CinemaStation or external AV equipment. For details on the connection methods, refer to “Connecting External AV Components” (pages 14 to 17). Also, you can operate those equipment with the CinemaStation remote control by setting the remote control codes (page 72).

Note


Make sure you read the manuals for your equipment to operate them.

Recording audio sources with CinemaStation

If you connect the OPTICAL OUT (DIGITAL AUDIO) jack on the CinemaStation to the optical digital input jack on an external recorder such as a CD recorder or MD recorder using optical cables (page 17), you can record audio sources from the CinemaStation.

Notes

- Radio stations are not output from the OPTICAL OUT jack. To record AM/FM broadcasts, use a commercially available audio cable to connect the VCR OUT jack on the CinemaStation to the analog input jack on your recorder.
- Be sure to perform a test recording before an actual recording.
- Sound field effects on the CinemaStation cannot be recorded with external recorders.
- Turning off the external recorder connected to the CinemaStation may distort playback sounds or reduce the volume. In this case, turn on external recorder.
- The volume level, audio quality, and sound field effect settings have no effect on the recorded sound during recording. However, in the DVD/CD mode, the output sound for recording may cut off if any of the operations below are performed.
 - Output a test tone.
 - Change a DSP program.
 - Connect/disconnect the headphones.
- Depending on the recorder, some DTS software audio signals may not record properly.
- The CinemaStation outputs a signal from the DIGITAL IN jack only to the DIGITAL OUT jack. The signal input from the DIGITAL IN jack is not output from the analog output jacks, and the signal input from the analog input jacks is not output from the DIGITAL OUT jacks.
- Audio recordings that you make cannot be used for any purpose other than private enjoyment without the consent of the copyright holder.

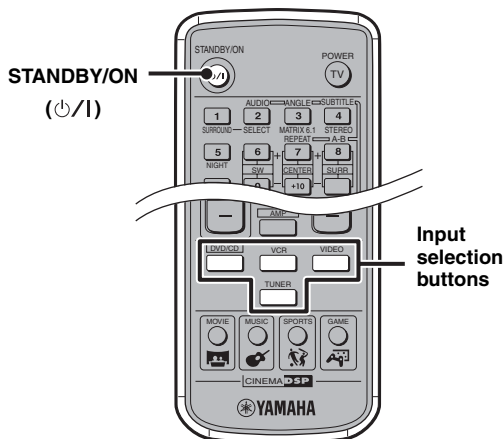

- 1 Turn on the recorder, then press **STANDBY/ON** (ON/I) to turn on the CinemaStation.
- 2 Use the **Input selection buttons** to select the input source, then start playback.
- 3 Start recording on the recorder.

About timer playback/recording

You can use a commercially available audio timer for playback and recordings. Since available operations vary depending on the product, read the manual for it.




- When the CinemaStation is in the standby mode, the timer automatically recalls the CinemaStation's memory contents (e.g. input source, AM/FM frequency) for playback or recording.
- If you want to perform timer recording without hearing sounds, reduce the volume level before timer recording starts. The volume level has no effect on the recorded sound.

Copying video component sources to a video cassette

If you use analog connections to connect a VCR and video component to the CinemaStation (pages 15 to 16), you can copy video component sources to a video cassette on the VCR.

Note

Copying video sources guarded by copy protection may result in picture distortion of the recording due to copy protection signals.

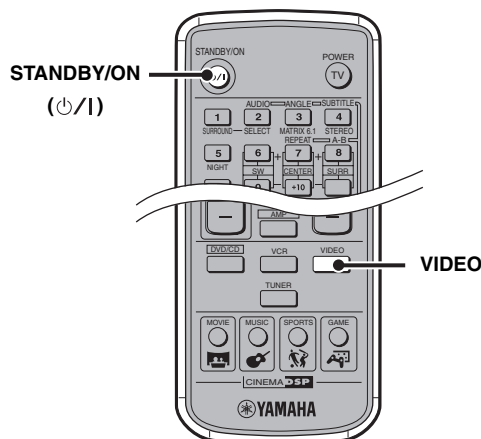


- 1 Turn on the TV, video component and VCR, then switch the TV input to the input connected to the CinemaStation.**
- 2 Press STANDBY/ON (⏻/⏻) to turn on the CinemaStation.**
- 3 Press VIDEO.**
- 4 Prepare to record with the VCR.**
 For example, insert a video cassette into the VCR and switch the VCR input to external.
 For details on VCR operations, refer to the manual for your VCR.
- 5 Start playback on the video component and start recording on the VCR.**
 For details on VCR operations, refer to the manual for your VCR.

Enjoying Sound with Specific Speakers

You can enjoy movies or music with various sound effects produced by the specified speakers.

Enjoying 6.1/5.1ch sources with all speakers including a virtual speaker (Matrix 6.1)


You can use Matrix 6.1 to produce virtual surround back sound from your left and right surround speakers, creating a realistic sense of surround back sound (sound that travels from directly in front of the listening position to directly in back of it). When you play a 6.1ch source such as a Dolby Digital Surround EX or DTS-ES disc, you can enjoy Dolby Digital plus Matrix 6.1 or DTS plus Matrix 6.1 sounds without adjusting any settings. Also, you can enjoy 5.1 channel sources with Matrix 6.1.

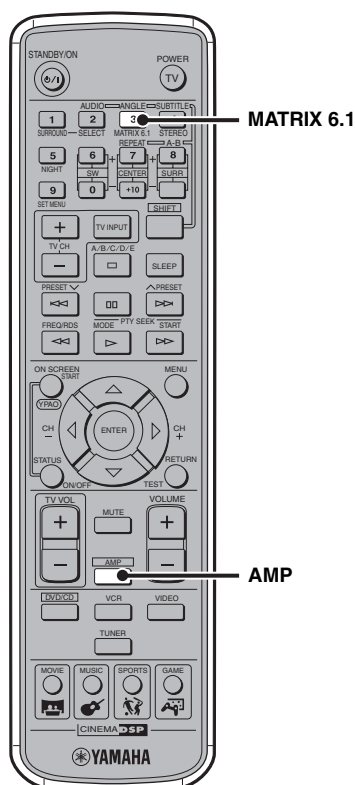

1 Press AMP.

2 Press MATRIX 6.1 to select the mode.

Each time you press the button, the mode changes as follows:

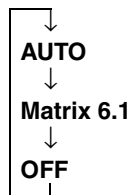

• AUTO

When playing back a 6.1 channel source (Dolby Digital Surround EX or DTS-ES), the sound is automatically switched either to Dolby Digital plus Matrix 6.1 or DTS plus Matrix 6.1 audio. If you play a 5.1 channel source with this mode, a virtual surround back speaker is not created.

• Matrix 6.1

Select this mode to play a 5.1 channel source with Matrix 6.1. Sound outputs from a virtual surround back speaker.

• OFF

The Matrix 6.1 decoder is not enabled. Even if you play a Dolby Digital Surround EX or DTS-ES disc, no sound outputs from the virtual surround back speaker.




When the Matrix 6.1 decoder is working, “MATRIX” lights up in the CinemaStation display and “6.1” appears beside the DSP program name (e.g. “Action 6.1”).

Notes

- Some Dolby Digital Surround EX or DTS-ES discs do not contain a signal (flag) that CinemaStation cannot recognize automatically. To play this type of disc with 6.1ch sound, press MATRIX 6.1 to select “Matrix 6.1”.
- Turning on the CinemaStation automatically sets the parameter to “AUTO”.
- In the following cases, 6.1ch sound playback is not available.
 - “SUR.” is set to “NON” in the Set Menu (page 77).
 - Stereo playback is selected (no sound field effect) (page 63).
 - Headphones are connected to the SILENT CINEMA jack on the CinemaStation.
 - A Dolby Digital KARAOKE source is being played.
 - The DSP program is set to “5ch Stereo” (page 26).
 - Dolby Digital or DTS is set to “SUR. STANDARD” (page 62).

Enjoying 2ch sources with all speakers (Dolby Pro Logic II)


Dolby Pro Logic II converts a 2ch source into virtual multi-channel source for enjoying 2ch sounds with all speakers.

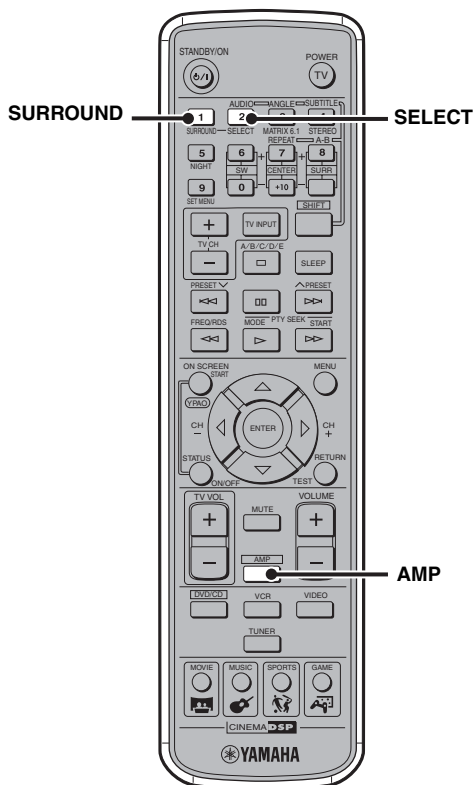

- 1 Play the 2ch source (e.g. music) you want to listen to.
- 2 Press AMP.
- 3 Press SURROUND.
- 4 Press SELECT to select "PL II".

- 5 Press SURROUND to select "PL II" mode.

Each time you press the button, the mode changes as follows:

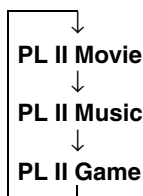

- **PL II Movie:** Suited for movie audio sources.
- **PL II Music:** Suited for music audio sources.
- **PL II Game:** Suited for game audio sources.




- You can also switch the mode by pressing the DSP buttons on the CinemaStation.
- You can make detailed settings for PL II Music. For details, refer to "Configuring Dolby Pro Logic II Music Settings" (page 67).

Note

When a monaural source is being played, Dolby Pro Logic II is not available.

Enjoying DSP programs with the front speakers only (Virtual CINEMA DSP)

Since Virtual CINEMA DSP processes an audio input source to reproduce virtual surround speakers, you can enjoy DSP program only with the front speakers.

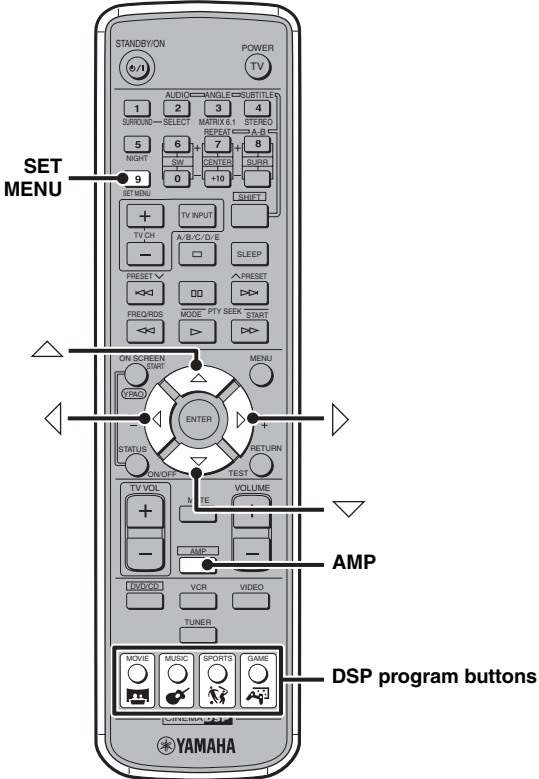

1 Play the source you want to listen to.

2 Press AMP.

3 Press the DSP program button to select the DSP program you want to use.

For details, refer to “Enjoying Sound Field Programs (DSP Programs)” (page 26).

4 Set “SUR” to “NON” in the Set Menu.

For details, refer to “Configuring Various Parameters (Set Menu)” (page 75).



When Virtual CINEMA DSP is activated, “VIRTUAL” lights up in the CinemaStation display.

Note

Virtual CINEMA DSP playback is not available in the following cases.

- During stereo playback (no sound field effects are applied).
- When headphones are connected to the SILENT CINEMA jack on the CinemaStation.
- When a Dolby Digital KARAOKE source is being played.
- When the DSP program is set to “5ch Stereo”, “PRO LOGIC”, “SUR. STANDARD”, “PLII Movie”, “PLII Music”, or “PL II Game”.
- While test tones are being output.


Enjoying DSP Programs in a Variety of Ways

You can enjoy the presence of sound effects with DSP programs even when you use headphones or reduce the volume level.


Listening with headphones ("SILENT CINEMA")

"SILENT CINEMA" allows you to enjoy multi-speaker simulation sounds with headphones.

* "SILENT CINEMA" is a registered trademark of YAMAHA CORPORATION.

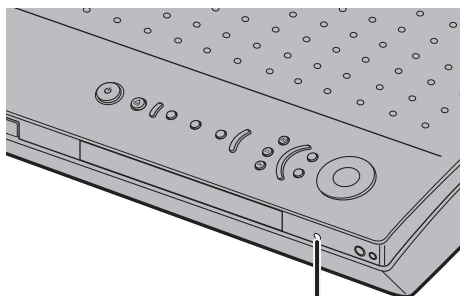

 **SILENT CINEMA jack**

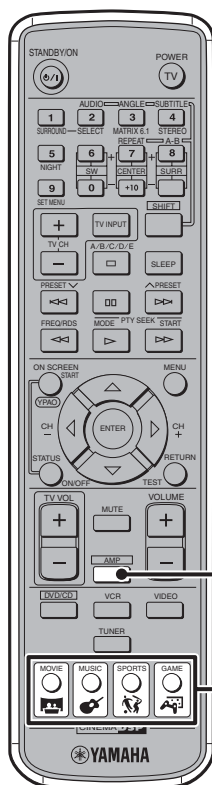

AMP

DSP program buttons

1 Connect the headphones to the  **SILENT CINEMA** jack on the CinemaStation.


2 Play the source you want to listen to.

3 Press **AMP**.

4 Press a DSP program button to select the DSP program you want to use.


For details, refer to "Enjoying Sound Field Programs (DSP Programs)" (page 26).



- When "SILENT CINEMA" is activated, the SILENT CINEMA indicator lights up in the CinemaStation display.
- The CinemaStation mixes LFE channel audio and other channel audio.
- If you do not select a DSP program, the headphone produces normal stereo sound (see "Enjoying original Dolby and DTS sounds" on page 62).
- When headphones are connected to the  SILENT CINEMA jack on the CinemaStation, sound does not output from any speaker regardless of whether sound field effect is on or off.

Listening at low volume (Night Listening)

Since Night Listening tones down large sound effect and clears speech or vocal sounds, you can enjoy DSP programs even at low volume.

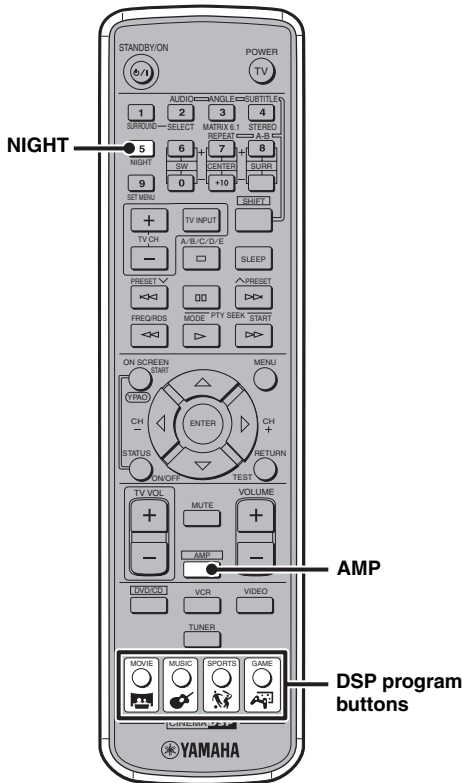

1 Play the source you want to listen to.

2 Press AMP.

3 Press a DSP program button to select the DSP program you want to use.

For details, refer to “Enjoying Sound Field Programs (DSP Programs)” (page 26).

4 Press NIGHT.




When Night Listening is working, “Night L. ON” appears in the CinemaStation display.

■ To return to normal playback

Press NIGHT again.

“Night L. OFF” appears in the CinemaStation display.

Note


When headphones are connected to the  SILENT CINEMA jack on the CinemaStation, Night Listening is not available.



Enjoying High-Quality Sound

You can play back Dolby, DTS, and 2ch sources true to the original sound.

Enjoying original Dolby and DTS sounds

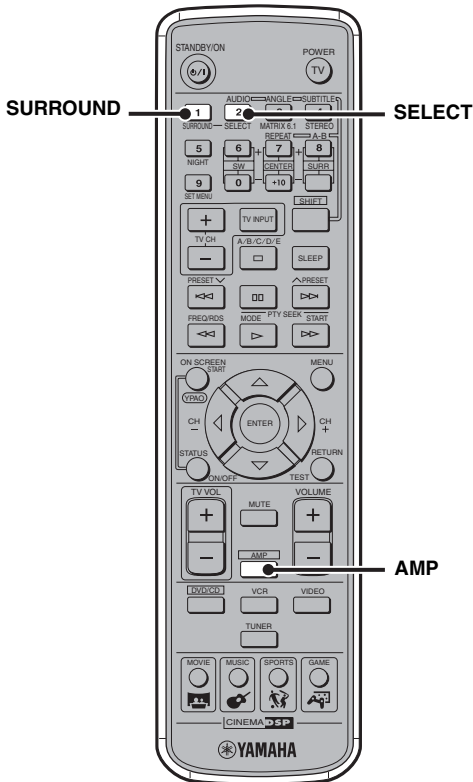
You can play back original sounds processed with Dolby Digital, Dolby Pro Logic or DTS.



- 1 Play the source you want to listen to.
 - 2 Press AMP.
 - 3 When playing a 2ch source, press SURROUND, then press SELECT to select "PRO LOGIC". When playing a source other than a 2ch source, press SURROUND.
- The CinemaStation automatically selects one of the following modes depending on the input source.
- **Dolby Digital:** "PRO LOGIC" appears and  DIGITAL lights up in the CinemaStation display.
 - **DTS:** "SUR. STANDARD" appears and  lights up in the CinemaStation display.

Enjoying original 2ch sound (Stereo)

You can play back original stereo sounds such as music CDs with the front speakers.

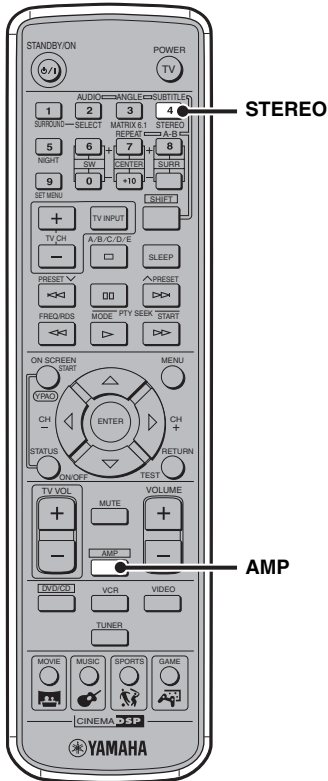

1 Play the 2ch source you want to listen to.

2 Press AMP.

3 Press STEREO.

The sound field effect turns off and Stereo playback starts.



If Stereo is activated, "STEREO" appears in the CinemaStation display.

■ To turn off Stereo playback (turn on the sound field effect)

Press STEREO again.



- Either front speakers or subwoofer produce(s) LFE channel sounds depending on the "BASS" setting in the Set Menu (page 77).
- If "BASS" is set to "BOTH" or "FRONT" is set to "SML" in the Set Menu (page 77), the subwoofer produces low tones.

Notes

- If Stereo playback is selected (no sound field effect), either center speaker or surround speakers produce(s) no sound.
- If Stereo playback is selected (no sound field effect) and "D. Range" is set to "MIN" in the Set Menu (page 78), the volume may become very low. In this case, turn off Stereo playback.
- If you play a Dolby Digital or DTS sound when Stereo playback is selected (no sound field effect), the volume balance of the front speakers may be disturbed because the compressed dynamic range mixes the front speaker's channel sounds. In this case, turn off Stereo playback.

Adjusting the Speaker Balance During Playback

The speaker settings configured by YPAO (page 21) are suitable for most conditions. However, depending on room conditions or listening position, you may need to adjust the speaker balance manually. This adjustment is important because it brings out the maximum effect of the DSP program, and faithfully reproduces the acoustic characteristics of Dolby Pro Logic, Dolby Pro Logic II, Dolby Digital and DTS. You can adjust the speaker balance using test tones or playback source.




Since the following procedures base on the volume level of the front speakers, you cannot adjust the front speaker's L/R balance with these procedures. To adjust the L/R balance of the front speakers, refer to "Configuring Various Parameters (Set Menu)" (page 75).

Notes

- Disconnect the headphones from the SILENT CINEMA jack on the CinemaStation before starting the setup procedure.
- Adjust the speaker balance at your listening position with the remote control.

Adjusting the speaker balance with test tones

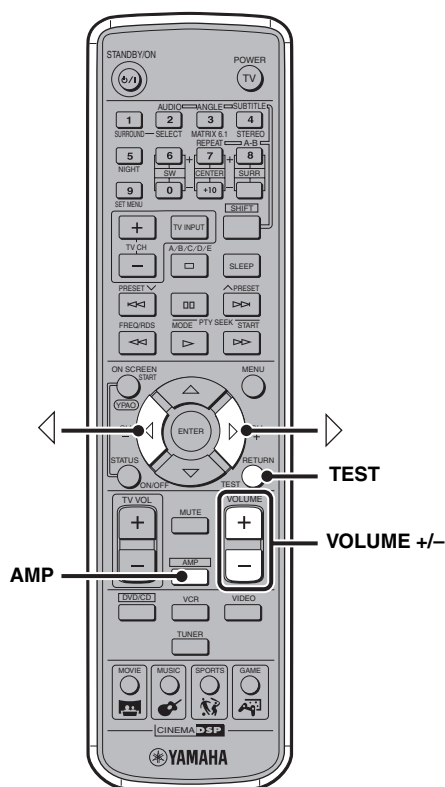


3 While a test tone is output from the front left speaker, press VOLUME +/- to adjust the volume to appropriate level.

4 While a test tone is output from the speaker you want to adjust, press ◀ or ▶ to adjust it to the same volume level as the front left speaker.

The name of the speaker currently outputting a test tone appears in the CinemaStation display.

Test tones are output in the following order:

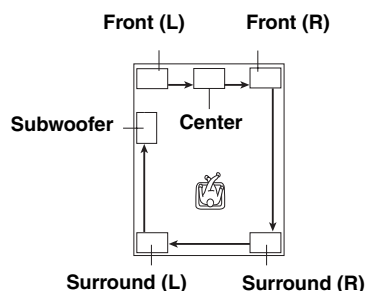

5 When you finished the adjustment, press TEST.



- The volume level adjustment range is -10 to +10 dB.
- If you raise the volume level of the center and/or surround L/R speakers to +10 dB and this is still less than the front speaker, set "F. Level" to -10 dB in the Set Menu (page 77) and carry out this procedure again.

Notes

- If "CENTER" is set to "NON" in the Set Menu (page 77), you cannot adjust the center speaker volume.
- If "SUR." is set to "NON" in the Set Menu (page 77), you cannot adjust the surround speaker volume.
- If "BASS" is set to "FRONT" in the Set Menu (page 77), you cannot adjust the subwoofer volume.
- The test tone output from the subwoofer is different from the others, but this is not a defect.


1 Press AMP.

2 Press TEST.

The CinemaStation starts to output test tones.

Adjusting the speaker balance during playback

If you feel the speaker balance is not proper during audio playback, follow the procedure below.

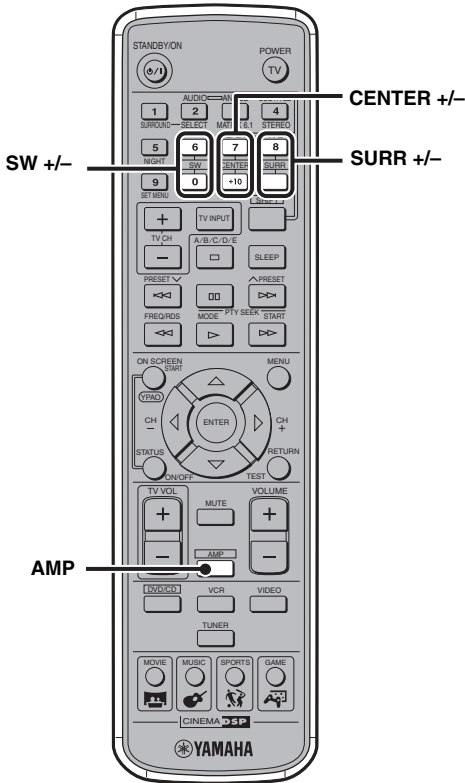

1 Press AMP.

2 Adjust the volume level of each speaker.

To adjust the center speaker volume, press CENTER +/-.

To adjust the surround speaker volume, press SURR +/-.

To adjust the subwoofer volume, press SW +/-.




- We recommend that you first adjust the speaker balance with test tones. For details, refer to “Adjusting the speaker balance with test tones” (page 64).
- The volume level adjustment range is -10 to +10 dB.
- You cannot adjust the left and right surround speakers individually with this procedure. To adjust them individually, carry out the “Adjusting the speaker balance with test tones” procedure (page 64).
- If you set one of the surround speakers to max (+10 dB) or min level (-10 dB), you cannot raise or reduce the volume level of another surround speaker with this procedure.

Notes

- If “CENTER” is set to “NON” in the Set Menu (page 77), you cannot adjust the center speaker volume.
- If “SUR.” is set to “NON” in the Set Menu (page 77), you cannot adjust the surround speaker volume.
- If “BASS” is set to “FRONT” in the Set Menu (page 77), you cannot adjust the subwoofer volume.

■ To adjust the speaker balance for 5ch Stereo DSP programs

You can adjust the speaker balance applied to “5ch Stereo” DSP programs.

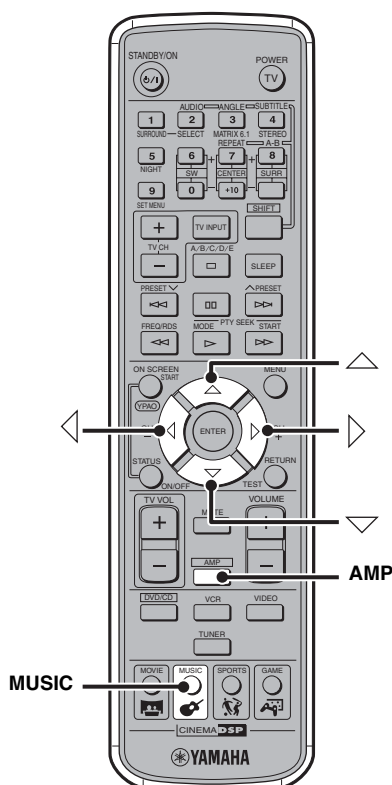

1 Play a source.


2 Press AMP.

3 Press MUSIC to select “5ch Stereo”.

For details, refer to “Enjoying Sound Field Programs (DSP Programs)” (page 26).

4 Press \triangle or ∇ to select the speaker of which you want to adjust the volume level.

Each time you press the button, the speaker changes as follows:

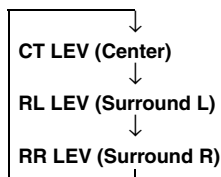

5 Press \triangleleft or \triangleright to adjust the speaker volume level.


Specify the speaker volume level (e.g. 100: Max., 50: Half, 0: Min.). The factory setting is 100.

Notes

- The volume level adjusted with this procedure replaces the volume adjusted with the CENTER button, SURR button or test tones while using “5ch Stereo” DSP programs. Although the CinemaStation display does not show the change in level, the actual volume level changes according to the settings you made in step 5 you specified.
- If “CENTER” is set to “NON” in the Set Menu (page 77), you cannot adjust the center speaker volume.
- If “SUR.” is set to “NON” in the Set Menu (page 77), you cannot adjust the surround speaker volume.

Configuring Dolby Pro Logic II Music Settings

You can configure the parameters for Dolby Pro Logic II Music to fine-tune the sound field effect.

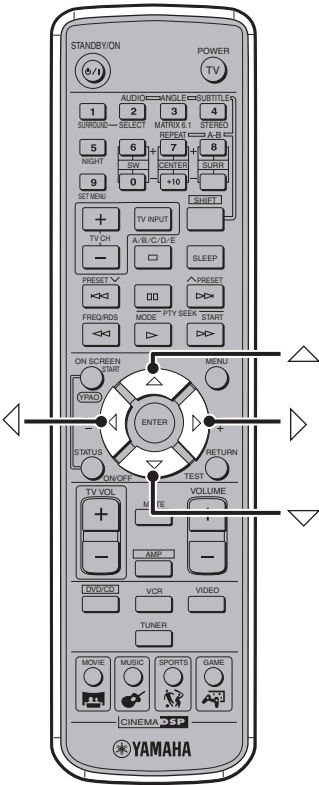

- 1 Carry out the “Enjoying 2ch sources with all speakers (Dolby Pro Logic II)” procedure (page 58) and select “PL II Music”.
- 2 Press \triangle or ∇ to select “PANORAMA”, “DIM.” or “CT WIDTH”.
For details on each parameter, refer to “About the Dolby Pro Logic II Music parameters” below.
- 3 Press \triangleleft or \triangleright to configure the parameter.
- 4 To configure other parameters, repeat steps 2 and 3.

■ About the Dolby Pro Logic II Music parameters

PANORAMA

Gives front L/R channel sound a wraparound effect, distributed throughout the entire surround sound field, for an expansive feeling.

Function: Expands the front sound field of Dolby Pro Logic II.

Selection item: OFF/ON

Default setting: OFF

DIM. (Dimension)

Adjusts the difference in volume between front and surround channels to the volume balance you desire.

Function: Adjusts the difference between front surround sound field and surround volume.

Variable range: -3 (stronger toward the surround direction) to +3 (stronger toward the front direction)

Default setting: STD (Standard)

CT WIDTH

Distributes the center channel sound to the left and right.

Function: Expands audio from the front sound field to the left and right.


Variable range: 0 to 7

If set to 0 center channel sound will only output from the center speaker. As the value rises center channel sound is incrementally distributed to the L/R speakers. When set to 7, sound will only output from the L/R speakers.

Default setting: 3

DSP Program Delay Time Settings

Each DSP program is designed to draw out the maximum effect from the source audio. The CinemaStation provides the DSP programs with optimum value of parameters including reflected sound, reverberant sound and delay time. Among these parameters, you can change the delay time to match to your speaker positions. Delay time is the time gap in playback between front speaker audio and surround speaker audio. The bigger the value becomes the later the surround audio plays back, and the larger the sound space feels. Since delay time is preset at an optimum value for each DSP program, the default value (page 69) will work well for your listening enjoyment. However, depending on the audio source or listening environment, you can adjust each DSP program the way you like.

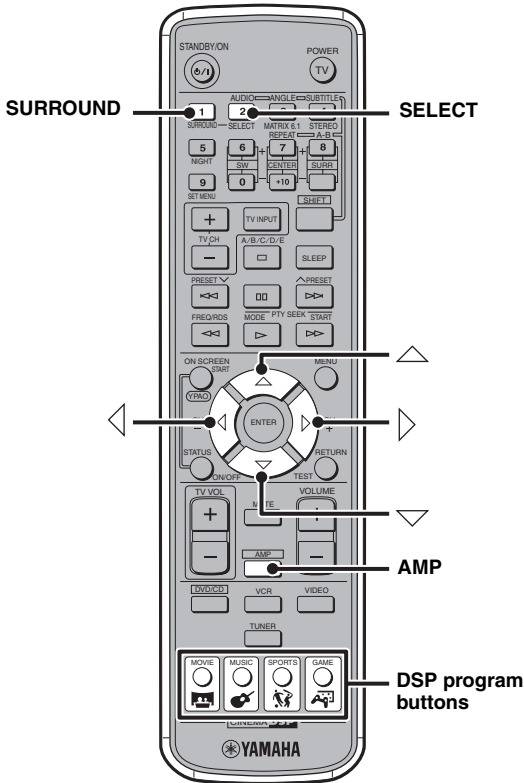

1 Play a source.

2 Press AMP.

3 Select the DSP program for which you want to adjust the delay time.

To select a Movie, Music, Sports, or Game DSP program, press the corresponding DSP program button (MOVIE, MUSIC, SPORTS or GAME). To select Dolby Digital or DTS, press SURROUND. To select Dolby Pro Logic (PRO LOGIC), press SURROUND, then press SELECT to select "PRO LOGIC". To select Dolby Pro Logic II, press SURROUND, press SELECT to select "PL II", then press SURROUND to select the PL II mode (Movie, Music, or Game).

4 Press \triangle or ∇ .

"DELAY" appears in the CinemaStation display.

5 Press \triangleleft or \triangleright to adjust the delay time of the selected DSP program.



- You can also adjust the delay time of Matrix 6.1.
- With "SP Distance" in the Set Menu (page 78), you can adjust the delay time of the center speaker.

Notes

- Depending on the input source, unnatural sound effects may be produced if you raise the delay time too much. In this case, reduce the delay time.
- While adjusting the delay time, you hear no sound temporarily.

■ Program default settings

Program Group		Program Name	Default Setting (ms)
MOVIE	1	Action*	20
		Action 6.1**	15
	2	Drama*	20
		Drama 6.1**	15
	3	Sci-Fi*	20
		Sci-Fi 6.1**	15
	4	Spectacle*	23
		Spectacle 6.1**	15
MUSIC	5	Theater*	20
		Theater 6.1**	5
	1	Music Video	21
	2	Classic Hall	30
SPORTS	3	Jazz Club	30
	4	Rock Concert	15
GAME	1	Live Sports	10
	1	Game	36

Program Name	Default Setting (ms)
PRO LOGIC* (Dolby Pro Logic)	10
SUR. STANDARD** (Dolby Digital, DTS)	0
PL II Movie* (Dolby Pro Logic II Movie)	10
PL II Music* (Dolby Pro Logic II Music)	0
PL II Game* (Dolby Pro Logic II Game)	10


* 2ch source

** Multi-channel source

Items without an asterisk (*/**) appearing next to them can be either 2ch or multi-channel sources.

Configuring the Audio Input Signal Setting

You can play back most audio sources without a problem with the factory audio input signal setting (AUTO). However, depending on your needs, you can configure the audio input mode to specify an input signal type that can be used on the CinemaStation. Also, you can check the type of the audio signal currently input into the CinemaStation (page 71) with the CinemaStation display.

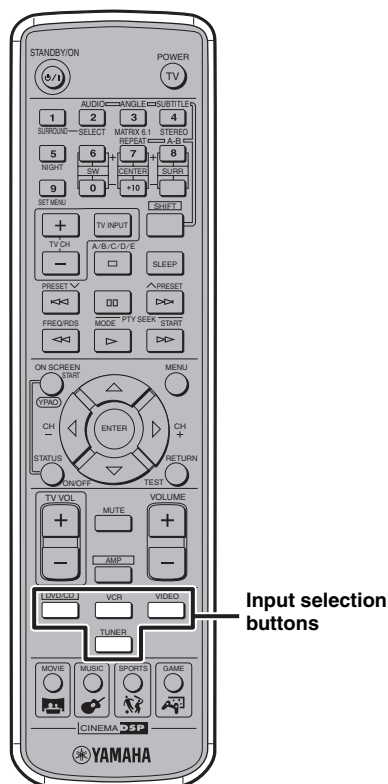


- You can also switch input modes for the currently selected input by pressing and holding INPUT on the CinemaStation.
- If a Dolby Digital or DTS signal is input while the input mode is set to “AUTO”, the CinemaStation automatically select the most suitable decoder for the signal.
- With “Input Mode” in the Set Menu (page 79), you can set the mode that the CinemaStation automatically selects when it is turned on.

Notes

- You cannot set “ANLG” for the DVD/CD input selection button.
- You cannot switch input mode for the button if no external AV equipment is connected to the corresponding input jacks.
- To play back a DTS signal, be sure to set the input mode to “AUTO” or “DTS”. Setting the mode to “ANLG” may produce noises or no sounds.
- The following conditions may happen if a DTS signal is input while the input mode is set to “AUTO”.
 - If the CinemaStation detects a DTS signal, it automatically switches to DTS mode (**dts** lights up). Once DTS audio playback finishes, the **dts** blinks for a while. While it is blinking, you cannot play back audio source other than DTS signals. If you want to play normal PCM audio soon after DTS playback, set the input mode to “AUTO” again.
 - If the DTS signal is interrupted when you perform Search or Skip, the **dts** may blink. If this condition continues for over 30 seconds, the Input mode automatically changes from DTS to normal digital (PCM) and the **dts** goes out.

1 Press and hold the Input selection button for the current input source until the input mode you want to select appears in the CinemaStation display.

 While holding down the button, the input mode changes as follows:




AUTO: Plays a source according digital signals priority over analog signals.

DTS: Plays only DTS signals.

ANLG: Plays only analog signals.

Checking the Audio Input Signal Type

You can check the information on the audio input signal currently played back on the CinemaStation.

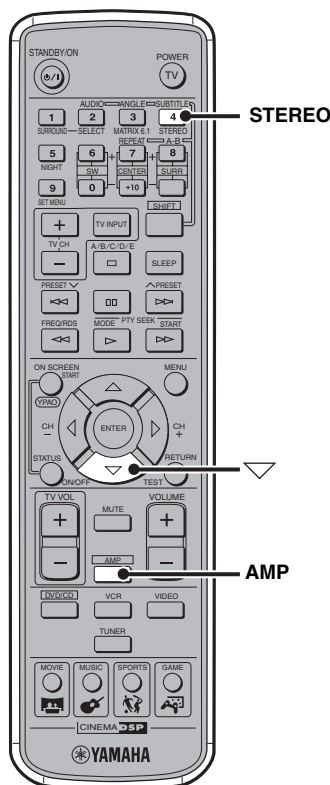

1 Play the source of which you want to check the audio input signal type.

2 Press AMP.

3 Press STEREO

Stereo playback starts.

4 Press ▽.

Audio input signal information appears on the CinemaStation display.

Each time you press the button, information changes depending on the input source.

- **Audio input signal type**

Shows the format of the audio signal. When the digital audio input cannot be recognized, the mode is automatically set to analog audio input.

- **Audio channels (only for Dolby Digital and DTS)**

Shows the number of audio channels the input signal contains. For example, “in: 3/2/LFE” indicates 3 front channels, 2 surround channels, and LFE. “1+1” indicates main/sub audio in bilingual broadcasts or other 2-channel audio, and MLT indicates audio with 3 channels or more.

- **Frequency (fs) (only for digital signals)**

Shows the frequency sampling of the input signal. If the sampling frequency cannot be measured, “unknown” appears.

- **Bit rate (rate) (only for Dolby Digital and DTS)**

Shows the amount of data the input signal contains per second. If the bit rate cannot be measured, “unknown” appears.

- **Flag (flg) (only for Dolby Digital and DTS)**

Shows the recognition signal (flag) the input signal contains. If the flag cannot be recognized, “None” appears.

■ About digital signals that exceed 48 kHz

CinemaStation’s digital input jack supports a sampling frequency up to 96 kHz. Before connecting an AV equipment to the digital input jack, read the manual for it to check the sampling frequency. Also, be sure to the following notes when inputting a digital signal that exceeds 48 kHz.

- DSP Programs are not selectable. You can only listen to normal 2ch stereo from the front speakers.
- During playback, you cannot adjust the volume level of center and surround L/R speakers.
- Depending on the “Setting speaker sizes (Speaker Set)” settings in the Set Menu (page 77), the Subwoofer may output sound.

Controlling External Components


In addition to controlling this unit, you can operate your TV, VCR, CD recorder or MD recorder with the CinemaStation remote control by selecting the appropriate remote control code (refer to “LIST OF REMOTE CONTROL CODES” at the end of this manual).

Note

Depending on the product, the CinemaStation remote control may not be able to operate the external component. In this case, use the remote control supplied with the product.

Setting remote control codes

The TV button selects a remote control code for a TV. The VCR button selects a remote control code for a VCR, CD recorder, or MD recorder.

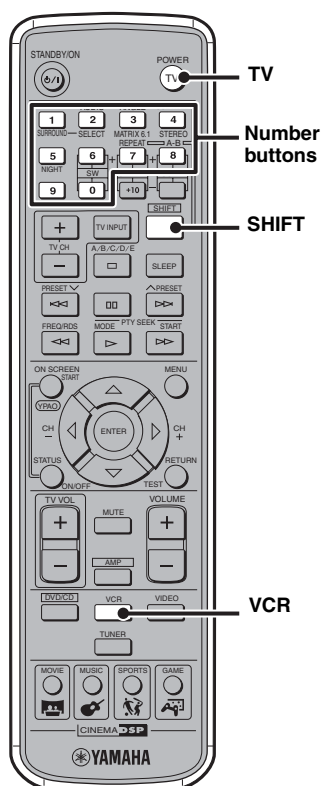

- 1 While holding down SHIFT, press TV or VCR, then while still holding down SHIFT, press the number buttons to enter the three-digit remote control code (refer to “LIST OF REMOTE CONTROL CODES” at the end of this manual) for the manufacturer of your component.

If the setting is successful, the message “Code Set OK” appears in the CinemaStation display.

If the setting fails, the message “Code Set NG” appears. In this case, perform this step again.

The factory settings are “299” (YAMAHA TV) for TV and “399” (YAMAHA VCR) for VCR.

- 2 Refer to “Available operations” (page 73) and try one of the button operations for your component to check that the setting is working properly.

If the button operation does not work properly, the remote control code may be incorrect. In this case, perform step 1 again.

Notes


- Even if you set a remote control code, it will be cleared about two minutes after the remote control batteries run out. In this case, store remote control codes again after replacing the batteries. (Be careful not to press the remote control buttons while replacing the batteries. Doing so may clear the settings.)
- Depending on the product, the CinemaStation remote control may not be able to operate the external component. In this case, use the remote control supplied with the product.
- If the manufacturer of your component has more than one code, try each of them until you find the correct one.

Available operations

By carrying out step 1 in “Setting remote control codes” (page 72), you can operate the following functions on your external component using the CinemaStation remote control.

■ TV operations

Press TV (POWER) for TV operations.

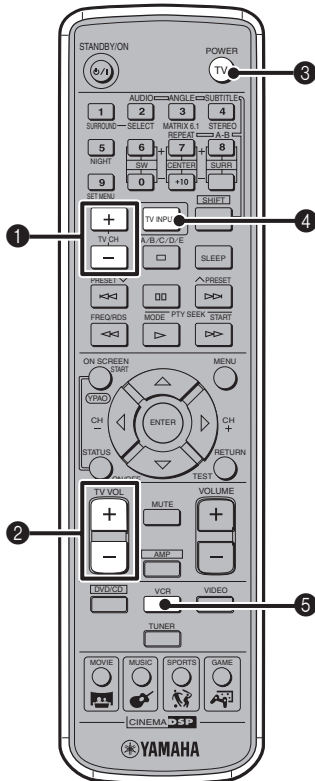

Functions for TV operation

❶ TV CH +/-

Switches the TV channels.

❷ TV VOLUME +/-

Adjusts the TV volume level.

❸ TV (POWER)

Turn the TV on, or set it to the standby mode.

❹ TV INPUT


Switches the TV inputs.

❺ VCR

Sets the remote control to the VCR, CD recorder, or MD recorder operation mode.

■ VCR operations

Press VCR for VCR operations.

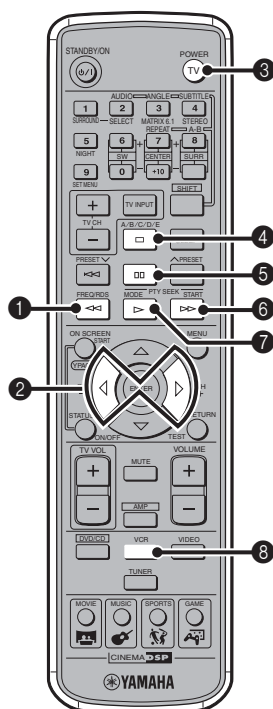


Functions for VCR operation

- 1 Rewinds.
- 2 (CH-/CH+) Switches the video channels.
- 3 **TV (POWER)**
Sets the remote control to the TV operation mode.
- 4 Stops video playback.
- 5 Pauses video playback.
- 6 Fast forwards.
- 7 Starts video playback.
- 8 **VCR**
Sets the remote control to the VCR, CD recorder, or MD recorder operation mode.

■ CD recorder and MD recorder operations

Press VCR for CD recorder or MD recorder operations.

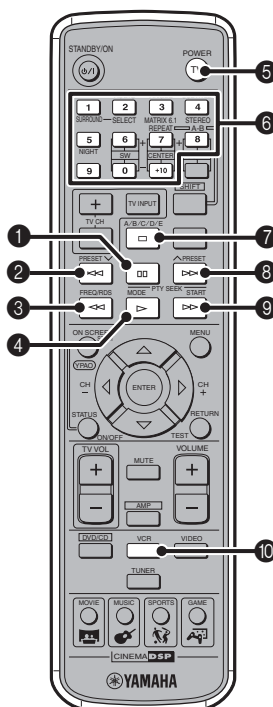

Functions for CD recorder and MD recorder operation

- 1 Pauses disc playback.
- 2 Skips to the start of the current track.
- 3 Reverses.
- 4 Starts disc playback.
- 5 **TV (POWER)**
Sets the remote control to the TV operation mode.
- 6 **Number buttons (1 to 9, 0, +10)**
Inputs numerals to specify parameters such as track numbers or elapsed time.
- 7 Stops disc playback.
- 8 Skips to the start of the next track.
- 9 Fast forwards.
- 10 **VCR**
Sets the remote control to the VCR, CD recorder, or MD recorder operation mode.

Configuring Various Parameters (Set Menu)

In the Set Menu, you can configure various parameters for your CinemaStation system. In most cases, you can enjoy AV sources on the CinemaStation with the default settings. However, depending on the speakers or listening environment, you need to configure parameters for your system.


■ Set Menu list

You can configure the following parameters by carrying out the “Operating the Set Menu” procedure (page 76).

Main menu	Submenu	Default setting
Speaker Set (page 77)	CENTER	SML
	FRONT	SML
	SUR.	SML
	BASS	SWFR
	F. Level	Nrm
LFE Level (page 78)	SP LFE	0 dB
	HP LFE	0 dB
SP Distance (page 78)	UNIT	U.S.A. and Canada: feet (ft) Other models: meters (m)
	FRONT L	10 ft 3.0 m
	FRONT R	10 ft 3.0 m
	CENTER	10 ft 3.0 m
	SURR L	10 ft 3.0 m
	SURR R	10 ft 3.0 m
	SWFR	10 ft 3.0 m
D. Range (page 78)	SP D.R	MAX
	HP D.R	MAX
L/R Balance (page 78)	–	Center
Input Assign (page 78)	–	VIDEO
Input Mode (page 79)	MODE	AUTO
Display set (page 79)	DIMMER	0
Tuner Step (page 79) (Asia, Korea, China and General models only)	–	AM9/FM50

Operating the Set Menu

Follow the procedure below to operate the Set Menu to configure parameters. For details on menu items and parameters, refer to pages 77 to 79.

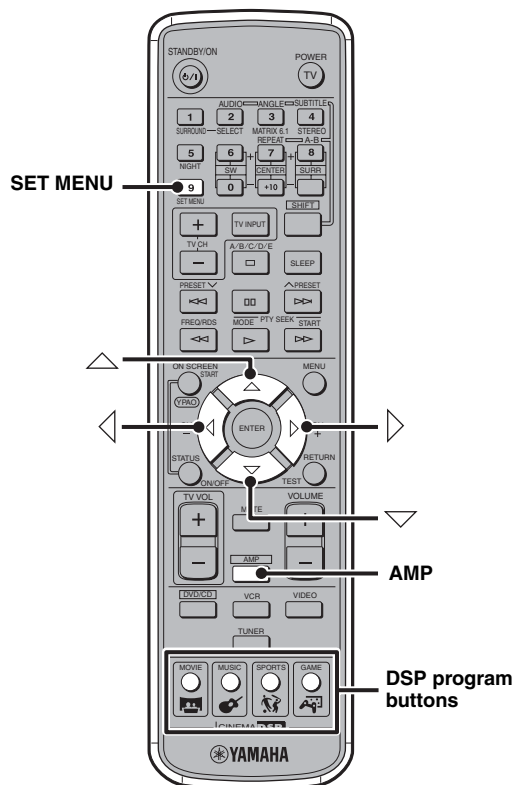

- 1 Press AMP, then press SET MENU.
- 2 Press \triangle or ∇ to select a main menu item in the CinemaStation display, then press \triangleleft or \triangleright .
- 3 If the selected menu item contains two or more submenu items, press \triangle or ∇ to select a submenu item in the CinemaStation display, then press \triangleright . Otherwise, skip this step.
The current setting appear in the CinemaStation display.
- 4 Press \triangleleft or \triangleright to change the setting.
- 5 To exit the Set Menu, press SET MENU or one of the DSP program buttons.

■ Setting speaker sizes (Speaker Set)

Submenu: CENTER

Sets whether the center speaker is present or not, and sets the size of the center speaker.

Selection items: LRG (Large), SML (Small), NON (None)

Default setting: SML

LRG: Select this setting when using a large center speaker. The entire frequency band of the center channel signal is output as it is from the center speaker.

SML: Select this setting when using a small center speaker. A center channel signal with a low tone is output from the speaker set to “BASS”.

NON: Select this setting when not using a center speaker. The center channel signal distributes the same volume level to the front L/R speakers.

Submenu: FRONT

Sets the size of the front speakers.

Selection items: LRG (Large), SML (Small)

Default setting: SML

LRG: Select this setting when using large front speakers. The entire frequency band of the front L/R channel signal is output as it is from the front L/R speakers.

SML: Select this setting when using small front Speakers. A front L/R channel signal with a low tone of is output from the speaker set to “BASS”.

Submenu: SUR.

Sets whether the surround L/R speakers are present or not, and sets the size of the surround L/R speakers.

Selection items: LRG (Large), SML (Small), NON (None)

Default setting: SML

LRG: Select this setting when using large surround L/R speakers or when using surround L/R Speakers with surround subwoofers connected by speaker cables. The entire frequency band of the surround L/R channel signal is output as it is from the surround speakers.

SML: Select this setting when using small surround L/R speakers. A surround L/R channel signal with a low tone is output from the speaker set to “BASS”.

NON: Select this setting when not using surround L/R speakers. The surround L/R channel signal distributes the same volume level to the front L/R speakers (page 59).

Submenu: BASS

Selects the speaker to output a LFE/bass (low tone) signal. LFE stands for Low Frequency Effect and it is used to output bands of 90 Hz and below when Dolby Digital or DTS is active.

Selection items: SWFR (Subwoofer), FRONT, BOTH

Default setting: SWFR

SWFR: Select this setting when using a subwoofer. The LFE and low tone sound from other channels, depending on “CENTER”, “FRONT” and “SUR.” settings, are output from the subwoofer.

FRONT: Select this setting when not using a subwoofer. The LFE and low tone sound from other channels, depending on “CENTER”, “FRONT” and “SUR.” settings, are output from the front L/R speakers.

BOTH: Select this item to mix a low tone with a LFE channel when using a subwoofer and independent of the front speaker sound mode setting. The entire frequency band of the front L/R channel is output from both the front L/R speakers and subwoofer. Sounds can be output from the subwoofer during 2ch or Dolby Surround playback.

Submenu: F. Level

Selects the front speaker level. When the front speaker volume level is extremely high and out of alignment with that of other speakers, you can lower the volume level and adjust the balance.

Selection items: Nrm (Normal), -10 dB

Default setting: Nrm

Nrm: Usually this setting is selected.

-10 dB: Use this setting if the output level of the center or surround speakers is out of alignment with the front speakers. The volume level of the front speakers decreases 10 dB (about 1/3).



- Even if “FRONT” is set to “SML” while “BASS” is set to “FRONT”, low tones of the front L/R channel signal will be output from the front speakers.
- If you select any DSP Program when “SUR.” is set to “NON”, the CinemaStation automatically enters Virtual CINEMA DSP mode (page 59).
- These settings are not reflected when connecting headphones.

Note

When a sampling digital signal over 48 kHz is input, some settings may not be reflected in the playback sound.

■ Adjusting the playback level of the LFE signal (LFE Level)

You can adjust the LFE channel output level while playing a Dolby Digital or DTS signal. Adjust the LFE level to match the performance of the subwoofer and headphones.

Submenu: SP LFE, HP LFE

Variable range: -20 to 0 dB

Default setting: 0 dB

■ Adjusting the delay time of each speaker (SP Distance)

Use this feature to manually input the distance of each speaker and adjust the delay applied to respective channel. Ideally, each speaker should be the same distance from the main listening position. However, this is not possible in most home situations. Thus, a certain amount of delay must be applied to the sound from each speaker so that all sound will arrive at the listening position at the same time.

Submenu: UNIT

Selection items: meters (m), feet (ft)

Default setting:

U.S.A. and Canada models: feet (ft)

Other models: meters (m)

- Select meters to input speaker distances in meters.
- Select feet to input speaker distances in feet.

Speaker distances

Choices: 0.3 to 24.00 m (1 to 80 ft)

- **FRONT L** adjusts the distance of the front left speaker. Initial setting: 3.0 m (10.0 ft)
- **FRONT R** adjusts the distance of the front right speaker. Initial setting: 3.0 m (10.0 ft)
- **CENTER** adjusts the distance of the center speaker. Initial setting: 3.0 m (10.0 ft)
- **SURR L** adjusts the distance of the surround left speaker. Initial setting: 3.0 m (10.0 ft)
- **SURR R** adjusts the distance of the surround right speaker. Initial setting: 3.0 m (10.0 ft)
- **SWFR** adjusts the distance of the subwoofer. Initial setting: 3.0 m (10.0 ft)

■ Setting the dynamic range during Dolby Digital playback (D. Range)

You can select the dynamic range (spread between the max. and min. volume) of Dolby Digital playback from three levels.

Submenu: SP D.R, HP D.R

Selection items: MAX (Maximum), STD (Standard), MIN (Minimum)

Default setting: MAX

MAX: Plays back the dynamic range of the source at the maximum limit.

STD: Recommended by software manufacturers for home use.

MIN: Easy to hear even at a low volume, dynamic range suitable for evening listening.

Note


 
Depending on the Dolby Digital playback source, "MIN" may not work and result in an extremely low volume. In this case, set the dynamic range to "MAX" or "STD".

■ Adjusting the volume balance of the front speakers (L/R Balance)

You can set the volume balance of the front L/R speakers. This setting also applies to the headphones.

Variable range: L/R 10 levels

Default setting: Center

Press  to make the sound smaller in the front L speaker, and press  to make the sound smaller in the front R speaker. You cannot turn off the sound for either one of the front speakers.

■ Changing the optical input jack assignment (Input Assign)

You can assign CinemaStation's OPTICAL IN jack to "VIDEO" or "VCR". When set to "VIDEO", press the VIDEO button to operate the device connected to the OPTICAL IN jack and the input source name will appear as "VIDEO". When set to "VCR", press the VCR button to operate the device connected to the OPTICAL IN jack and the input source name will appear as "VCR".

Selection items: VIDEO, VCR

Default setting: VIDEO

■ Setting the input mode when powering on (Input Mode)

Sets the input mode (page 70) for powering on when playback devices are connected to both digital and analog jacks.

Selection items: AUTO, LAST

Default setting: AUTO

AUTO: When CinemaStation is turned on, the input mode (page 70) automatically sets to “AUTO”.

LAST: The last selected input mode is applied.



■ Adjusting the CinemaStation display brightness (Display set)

Dimmer

You can adjust the CinemaStation display brightness.

Variable range: -4 to 0

Default setting: 0

Press  to increase the brightness and  to decrease.

■ Setting frequency step (Tuner Step) (Asia, Korea, China and General models only)

The inter-station frequency spacing differs depending on the areas. Set the frequency step according to the frequency spacing in your area.

Selection items: AM9/FM50, AM10/FM100

Default setting: AM9/FM50

Notes

- Be sure to turn off (standby) the CinemaStation after you change the frequency step setting. The new setting becomes effective after restarting the CinemaStation.
- The frequency spacing setting for North, Central and South America is AM10/FM100 and for other areas is AM9/FM50.

Troubleshooting

If there is any problem with your CinemaStation system, check the following items. If you cannot solve your problem with the following remedies or if your problem is not listed below, turn off and unplug the CinemaStation, then consult the nearest authorized YAMAHA dealer or service center.

General

Problem	Cause	Solution
Power turns on but immediately shuts off	The system cable may be connected improperly.	Make sure the system cable is connected properly. (page 10)
	The power cable may be connected improperly.	Make sure the power cable is plugged into the outlet firmly. (page 17)
	The speaker cable may be shorted.	Make sure all speaker cables are connected properly. (page 10)
	The CinemaStation may receive a strong electrical shock such as from a lightning bolt or excessive static electricity.	Set the CinemaStation to the Standby mode, then disconnect the power cable. Wait for about 30 seconds, then connect the power cable and turn on the CinemaStation.
The speakers make no sound	The volume may be set to minimum level.	Adjust the volume level. (page 20)
	The Mute function may be enabled.	Cancel the Mute function. (page 20)
	The input source or input setting may be incorrect.	Select the correct input source or input setting. (pages 19 and 70)
	The cables may be connected improperly.	Make sure all cables are connected properly. (page 9)
	The disc loaded into the CinemaStation may be not compatible.	Make sure you use a disc supported by the CinemaStation. (page 32)
	You are playing a DTS source and “PCM Only” is selected for “Digital output” in the On-Screen Menu.	Select “All” for “Digital output” in the On-Screen Menu. (page 30)
The TV shows no picture	The cables may be connected improperly.	Make sure all cables are connected properly. (page 12)
Sound suddenly turns off	The Sleep Timer (page 28) might be set.	Turn on the CinemaStation and play the source again.
Sound is too low on one side	The cables may be connected improperly.	Make sure all cables are connected properly. (page 9)
Speakers other than the front ones make no sound	You may be listening to stereo sounds without the sound field effect.	Press STEREO to enable the sound field effect. (page 63)
	You may be listening to an audio source (Dolby Digital or DTS) that does not contain any special effect signal.	Select another DSP program. (page 26)

Problem	Cause	Solution
The center speaker makes no sound	The volume of the center speaker may be set to minimum level.	Adjust the volume level of the center speaker. (page 65)
	You may be listening to a Dolby Digital or DTS audio source.	Dolby Digital and DTS audio sources do not contain a center speaker signal.
	One of the DSP program in the Music group (other than 5ch Stereo) may be selected.	Select another DSP program. (page 26)
	In the Set Menu, "CENTER" may be set to "NON".	Configure the Set Menu properly. (page 77)
The surround speakers make no sound	The volume of the surround speakers may be set to minimum level.	Adjust the volume level of the surround speakers. (page 65)
	You may be listening to a monaural source with the Theater DSP Program (page 26).	Select another DSP program. (page 26)
The subwoofer makes no sound	The volume of the subwoofer may be set to minimum level.	Adjust the volume level of the subwoofer. (page 65)
	You may be listening to an audio source that does not contain any low tone signal such as LFE.	The subwoofer does not support signals outside the specified range.
The subwoofer makes strange sounds	The subwoofer may be placed improperly.	Place the subwoofer in the correct position. For details, refer to the manual for the subwoofer.
	The subwoofer cable may be connected improperly.	Make sure the subwoofer cable is connected properly. (page 10)
The speaker does not output low tones properly	The speaker setting may be improper.	Make sure you configure the speaker settings properly. (page 77)
The volume does not increase or sounds are distorted	The power of the equipment connected to a CinemaStation's output jack may be turned off.	Turn on the power of the equipment connected to a CinemaStation's output jack.
Recording sounds does not reflect the sound field effect settings	The sound field effects are not available for recording.	
A source being played back on CinemaStation (DVD, CD, AM/FM broadcast, etc.) does not record when using an external component	You may be trying to make a digital recording of an AM/FM broadcast.	Use the analog recording method. (pages 17 and 55)
	You may be trying to make a recording of a DTS source.	Depending on the recorder, DTS sources may not record properly. For further information, refer to the owner's manual supplied with the recorder you are using.
A source being played back on an AV component connected to the CinemaStation (MD recorder, etc.) does not record when using an external recorder	You may be trying to make a digital recording of an analog source, or analog recording of a digital source.	Use the proper audio source.
The CinemaStation does not operate properly	The CinemaStation may receive a strong electrical shock, such as from a lightening bolt or excessive static electricity, or drop in power supply.	Set the CinemaStation to the Standby mode, then disconnect the power cable. Wait for about 30 seconds, then connect the power cable and turn on the CinemaStation.

Problem	Cause	Solution
A digital equipment or high-frequency equipment produces noises	The CinemaStation may be placed close to the digital equipment or high-frequency equipment.	Place the CinemaStation further away from such equipment.
The Set Menu configurations have been cleared	The power to the CinemaStation may be lost more than a week.	Make sure the power cable is plugged into the outlet firmly, then configure the Set Menu settings again. (page 75)
The volume does not increase or sounds are distorted	The power of the component connected to a CinemaStation's output jack may be turned off.	Turn on the power of the component connected to a CinemaStation's output jack.
Recording sounds does not reflect the sound field effect settings	The sound field effects are not available for recording.	
Sound played on the CinemaStation cannot be recorded with an external recorder	You may be trying to make a digital recording with an analog source, or analog recording with a digital source.	Use proper audio sources.
	The recording equipment may be connected to the CinemaStation with an analog connection.	Connect them with a digital connection. (page 16)
Sounds played on the AV equipment connected to the CinemaStation cannot be recorded with external recording equipment	Either the AV equipment or recording equipment may be connected to the CinemaStation with a digital connection.	Connect those equipment to the CinemaStation with analog connections. (page 16)
The CinemaStation does not operate properly	The CinemaStation may receive a strong electrical shock, such as from a lightening bolt or excessive static electricity, or drop in power supply.	Set the CinemaStation to the Standby mode, then disconnect the power cable. Wait for about 30 seconds, then connect the power cable and turn on the CinemaStation.
A digital equipment or high-frequency equipment produces noises	The CinemaStation may be placed close to digital equipment or high-frequency equipment.	Place the CinemaStation further away from such equipment.
The Set Menu configurations have been cleared	The power to the CinemaStation may be lost more than a week.	Make sure the power cable is plugged into the outlet firmly, then configure the Set Menu settings again. (page 75)

Remote control

Problem	Cause	Solution
The remote control does not work for operating the CinemaStation	The remote control may be operated outside the remote control operation range.	For information on the remote control operation range, refer to “Using the Remote Control” (page 18).
	The remote control sensor on the CinemaStation may be exposed to direct sunlight or lighting (inverted fluorescent lamps).	Change the lighting or CinemaStation’s orientation.
	The remote control mode selection may be improper.	Select the mode that suits your purpose. (page 6)
	The batteries may be worn out.	Replace the batteries with new ones. (page 18)
The remote control does not work for operating other AV equipment	You may be trying to operate a system component.	You cannot operate a system component with the CinemaStation remote control. Use the remote control supplied with the product.
	The remote control code may be incorrect.	Set the correct remote control code. (page 72) Depending on the model and year of the product, the CinemaStation remote control may not be able to operate it partly or wholly. In this case, use the remote control supplied with each product.

Disc playback

Problem	Cause	Solution
Some button operations do not work	Some discs do not support certain CinemaStation functions.	
Playback does not start or stops immediately when pressing ►	The disc may not be set in the disc tray properly.	Set the disc in the disc tray properly.
	The disc may be dirty.	Wipe the disc clean.
	The disc loaded into the CinemaStation may be not compatible.	Make sure you use a disc supported by the CinemaStation. (page 32)
	When moved the CinemaStation from a cold place to warm one, condensation may be form on the disc reading lens.	Wait for one to two hours, then try again.
An audio or subtitle language does not switch	The disc may not support the multi-language feature.	Make sure you use a disc that supports the multi-language feature.
No subtitles appear	The subtitle may be set to “None”.	Select a subtitle language you want to display. (page 40)
	The disc may not contain subtitle data.	Make sure you use a disc with subtitle data.
	When using the A-B Repeat function, the subtitle may not appear at the parts other than the selected section.	Cancel the A-B Repeat function. (page 38)
A viewing angle does not switch	The disc may not support the multi-angle feature.	Make sure you use a disc that supports the multi-angle feature.
DVD videos cannot be copied with the VCR	You may be trying to copy a copy-protected DVD.	Most commercially available DVDs include copy protect features. You cannot make a copy of these DVDs.
Picture looks poor	In some cases, picture may look poor while fast forwarding or reversing, but this is not a defect.	
The TV shows no picture or its screen size looks strange	In the On-Screen Menu, the Picture settings may be improper.	Adjust the Picture settings in the On-Screen Menu. (page 29)
	The Progressive Scan mode may be used with a TV that does not support it.	Turn off the Progressive Scan mode. (page 46)
The TV shows overlapped picture partly	The disc content does not match the Progressive Scan mode due to the editing method or other conditions.	Turn off the Progressive Scan mode. (page 46)
Status information does not appear	In the On-Screen Menu, the Status window may be set to “Off”.	Set the Status window to “On” in the On-Screen Menu. (page 29)
The disc is ejected without an operation	The disc loaded into the CinemaStation may be not compatible.	Make sure you use a disc supported by the CinemaStation. (page 32)
The message “No Disc” appears in the CinemaStation display even though a disc is inserted	The disc may not be set in the disc tray.	Set the disc in the disc tray properly.

Radio reception

■ FM/AM

Problem	Cause	Solution
The Preset Tuning function (page 49) does not work	The preset (memory) may have been erased.	Preset radio stations again. (page 51)

■ FM

Problem	Cause	Solution
Too much noise is generated during stereo broadcast	The FM antenna may be connected improperly.	Make sure the FM antenna is connected properly. (page 13)
	The radio station you selected may be far away from your area or radio wave reception is weak in your area.	Try Manual Tuning to increase the signal quality (page 48) or use a multi-channel outdoor antenna.
Even with an outdoor antenna, radio wave reception is weak (audio is distorted)	Multipath reflection or other radio interferences may occur.	Change the antenna's height, direction, or placement.
The Auto Tuning function (page 48) does not work	The radio station you selected may be far away from your area or radio wave reception is weak in your area.	Try Manual Tuning to increase the signal quality (page 48) or use a multi-channel outdoor antenna.

■ AM








Problem	Cause	Solution
The Auto Tuning function (page 48) does not work	The AM loop antenna may be connected improperly.	Make sure the AM loop antenna is connected properly. (page 13)
	The radio station you selected may be far away from your area or radio wave reception is weak in your area.	Try Manual Tuning to increase the signal quality (page 48).
Too much noise is generated	The noises may be generated from atmospheric electricity, lightening, fluorescent lights, motors, or thermostat electric devices.	Connect an outdoor antenna and establish better grounding to decrease noises. However, it is difficult to eliminate these types of noises.
	If too much noise is generated especially in the evening, the CinemaStation may be placed close to a TV.	Place the CinemaStation further away from a TV.

Additional Information

Disc Information

The following tables explain the disc types supported by the CinemaStation.

Video Discs













Type of Disc	Disc Logo Mark	
DVD Video		
SVCD (Super Video CD)		
Video CD		
		 Video CDs made by copying an MPEG movie file onto a CD-R or CD-RW

JPEG still image playback




CinemaStation supports playback of JPEG still images contained on CD-R and CD-RW media.

DVD region codes

The region code (an ID number assigned to each market region) is set for normal DVD players and DVD video discs. The CinemaStation supports the discs with the region codes shown in the right table. For details, read the information on the disc jacket.

Destination	Region code of Cinema Station	Playable discs	
U.S.A. Canada			
U.K. Europe			
Australia			
Korea General Asia			

Music Discs

Type of Disc	Disc Logo Mark	
Music CD (Compact disc digital audio)		
		 Music CDs made by copying onto a CD-R or CD-RW (including MP3 format files)



Disc logo marks are printed on the disc and the disc jacket.

Notes

 
- The following discs cannot be played on the CinemaStation. CD-ROM, DVD-ROM, DVD-RAM, CDV. (This product can play some types of DVD-R (Video format only), DVD-RW (Video format only), DVD+R or DVD+RW discs.)
- The CinemaStation cannot play a CD-R, CD-RW, DVD-R, DVD-RW, DVD+R or DVD+RW disc that has not been finalized. Finalizing is a process that prepares a disc for playback on a compatible device.
- Only use discs from a reputable manufacturer. Some discs cannot be played back, depending on recording conditions and disc characteristics.
- Do not use discs with non-standard shapes or sizes.




- Some DVD video or video CD discs may operate and function differently than noted in this manual. That is by manufacturer design and not a defect in this unit. For details read the information on the disc jacket.
- This unit can play the disc types associated with the logos shown on page 86. (Do not attempt to load any other type of disc into the unit, or the unit may be damaged.)
- Some discs cannot be played depending on the recording conditions such as PC environment and application software. Failure can also result from disc characteristics and condition, like material quality, scratches or curvature.

Handling a disc


- Do not touch the surface of the disc. Hold a disc by its edge and center hole.
- Do not leave a disc in the tray when you are not playing it.
- Do not write on the disc with a pencil or other marker.
- Do not stick tape, seals or other attachments to a disc, and do not bring into contact with glue.
- Do not use a protective cover to prevent scratches.
- Do not use a disc whose surface can be printed with a commercially available label printer.
- Do not put a disc in a place with direct sunlight, high temperature, high humidity or a lot of dust.



Caution

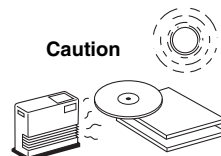

- If a disc becomes dirty, wipe it with a clean, dry cloth from the center out to the edge. Do not use record cleaner or paint thinner.
- To avoid malfunction, do not use a commercially available lens cleaner.

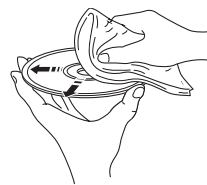

Audio formats

■ **Dolby Digital**

Dolby Digital is a digital surround sound system that gives you completely independent multi-channel audio. With 3 front channels (left, center, and right), and 2 surround stereo channels, Dolby Digital provides 5 full-range audio channels. With an additional channel especially for bass effects, called LFE (low frequency effect), the system has a total of 5.1-channels (LFE is counted as 0.1 channel). By using 2-channel stereo for the surround speakers, more accurate moving sound effects and surround sound environment are possible than with Dolby Surround.

■ **Dolby Pro Logic**

A surround system that takes a 4-channel signal and records it as a 2-channel signal, then by way of some arithmetic processing converts back to an independent 4-channel signal for playback.

■ **Dolby Pro Logic II**

Dolby Pro Logic II is an improved technique used to decode vast numbers of existing Dolby Surround software. This new technology enables a discrete 5-channel playback with 2 front left and right channels, 1 center channel, and 2 surround left and right channels (instead of only 1 surround channel for conventional Pro Logic technology). Music and Game modes are also available for 2-channel sources in addition to the Movie mode.

■ **DTS (Digital Theater Systems)**

The 5.1-channel surround system adopted by most movie theaters. With an abundance of audio data, it is able to provide authentic-sounding effects.

■ **Linear PCM (LPCM)**

A signal that is changed to digital format without compression. A CD is recorded with 16-bit sound at 44.1 kHz, while DVD recording is anywhere from 16 bits at 48 kHz to 24 bits at 192 kHz, which makes it a higher quality sound than CD. This signal also has a type called Packed PCM (P.PCM) that can be compressed without any loss of data.

■ **Matrix 6.1**

CinemaStation incorporates a Matrix 6.1 decoder for Dolby Digital and DTS multi-channel software that enables 6.1-channel reproduction by adding the surround back channel to existing 5.1-channel format. (The surround back channel is created from surround left and right channels, and output from a virtual surround back speaker.) With this additional channel, you can experience more dynamic and realistic moving sound especially scenes with “fly-over” and “fly-around” effects.

Sound field programs

■ CINEMA DSP (Digital Sound Field Processor)

Since the Dolby Surround and DTS systems were originally designed for use in movie theaters, their effect is best felt in a theater having many speakers and designed for acoustic effects. Since home conditions, such as room size, wall material, number of speakers, and so on, can differ so widely, it's inevitable that there are differences in the sound heard as well. Based on a wealth of actually measured data, YAMAHA CINEMA DSP uses YAMAHA original sound field technology to combine Dolby Pro Logic, Dolby Digital and DTS systems to provide the visual and audio experience of movie theater in the listening room of your own home.

■ "SILENT CINEMA"

"SILENT CINEMA" was developed by YAMAHA as a natural, realistic sound effect DSP algorithm for headphones.

Parameters for headphones have been set for each sound field so that accurate representations of all the sound field programs can be enjoyed on headphones.

■ Virtual CINEMA DSP

YAMAHA has developed a Virtual CINEMA DSP algorithm that allows you to enjoy DSP sound field surround effects even without any surround speakers by using virtual surround speakers.

It is even possible to enjoy Virtual CINEMA DSP using a minimal two-speaker system that does not include a center speaker.

Audio information

■ Bit stream

A signal that is compressed and changed into digital format. Then depending on the decoder it can be processed as 5.1 multi-channel audio.

■ Channel (ch)

A channel is an audio type that has been divided based on range and other characteristics.

Ex. 5.1 channel

- Front speakers, Left (1ch), Right (1ch)
- Center speaker (1 ch)
- Surround speakers, Left (1ch), Right (1ch)
- Subwoofer (1 ch x 0.1* = 0.1 ch)

* In contrast to a full 1-channel band, a component designed to enhance low frequency sound for added effect.

■ Dynamic range

The difference between the smallest sound that can be heard above the equipment noise and the biggest sound that can be heard without distortion is the dynamic range.

■ LFE (Low Frequency Effect) 0.1 channel

This channel is for the reproduction of low bass signals. The frequency range for this channel is 20 Hz to 120 Hz. This channel is counted as 0.1 because it only enforces a low frequency range compared to the full-range reproduced by the other 5/6 channels in Dolby Digital or DTS 5.1/6.1-channel systems.

■ Sampling frequency and quantized bit rate

When converting an analog signal to digital, the number of times the signal is sampled per second is called the sampling frequency, while the degree of fineness when converting the sound level into a numeric value is called the quantized bit rate.

The frequency band that can be played back is determined by the sampling rate, while the dynamic range expressing the difference in sound level is determined by the quantized bit rate. In principle, the higher the sampling rate, the wider the frequency range that can be played back, and the higher the quantized bit rate, the finer the sound that can be reproduced.

■ Track (CD/Video CD)

A CD or Video CD can be divided into a number of segments (tracks). Each division is called a title number.

■ YPAO (YAMAHA Parametric Room Acoustic Optimizer)

YPAO is an original YAMAHA system that configures speaker settings such as speaker balance (volume level of each speaker), delay time of each channel, and crossover/high cut frequency for the subwoofer automatically.

YPAO uses the supplied optimizer microphone to collect and analyze sounds output from the speakers in the actual listening environment.

Video signal information

■ Component video signal

With the component video signal system, the video signal is separated into the Y signal for the luminance and the Pb and Pr signals for the chrominance. Color can be reproduced more faithfully with this system because each of these signals is independent. The component signal is also called the “color difference signal” because the luminance signal is subtracted from the color signal.

■ Decoder

A device that converts encoded data on DVD and other media back to its original audio or video signal.

■ Film and video data

In general, DVD media can be classified into the 2 types below.

- Film Data
Video recorded at 24 frames/second. (The film used for shooting movies is recorded at 24 frames/second.)
Recently 30 frames/second progressive video has made its debut.
- Video Data
Video recorded at 30 frames/second.

CinemaStation will automatically recognize whether the source recorded on DVD is film or video, then select the best method to convert it into progressive output.

■ Interlace and progressive outputs

Up to now the standard video signal has been NTSC with 525i (i: interlaced) scan lines. In contrast, 525p (p: progressive) is a high-density signal with double the number of scan lines.

■ NTSC

NTSC is a video signal system (525 lines, 30 frames per second) used in North America, Central America, a number of South American countries, and some Asian countries, including Japan.

■ PAL

PAL is a video signal system (625 lines, 25 frames per second) used in the United Kingdom, much of the rest of western Europe, several South American countries, some Middle East and Asian countries, several African countries, Australia, New Zealand, and other Pacific island countries.

■ Pan & Scan and Letterbox

In general, DVD Video is produced for viewing on a wide television screen with an aspect ratio of 16:9. This means you can now view most material with the intended aspect ratio on a wide-screen television.

This ratio will not fit on a standard television that has an aspect ratio of 4:3. Two picture styles, Pan & Scan and Letterbox, deal with this problem.

- Pan & Scan cuts off the left and right portions of the picture to fill the screen.
- Letterbox inserts black bands at the top and bottom of the picture to reproduce an aspect ratio of 16:9.

■ S-Video signal

With the S-Video signal system, the video signal normally transmitted using a pin cable is separated and transmitted as the Y signal for the luminance and the C signal for the chrominance through the S-Video cable. Using the S VIDEO jack eliminates video signal transmission loss and allows recording and playback of even more beautiful images.

■ Title, Chapter (DVD Video)

DVD video lets you divide a disc in a big way by titles or a small way by chapters. Each division is either called a title number or a chapter number.

Copyright and logo marks

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

“SILENT CINEMA” is a registered trademark of YAMAHA CORPORATION.



Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.



“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

Specifications

AUDIO SECTION

- Front L/R, Center, Surround L/R
 - Min RMS output power
(1 kHz, 0.9% THD, 6 Ω) 45 W
 - Min RMS output power (U.S.A. and Canada models)
(20 Hz to 20 kHz, 0.9% THD, 6 Ω) 45 W
 - Max power -EIAJ- (Asia, Korea, China, and General models)
(1 kHz, 10% THD, 6 Ω) 55 W
 - Total harmonic distortion (FRONT L/R) less than 0.05%
 - Signal to Noise Ratio (IHF-A Network, shorted) 90 dB
 - Input Sensitivity
 - VIDEO, VCR 200 mV/47 k Ω
 - Output Level (when 200 mV is input)
 - REC OUT 200 mV/1.2 k Ω
 - Phones Output 200 mV/100 Ω

VIDEO SECTION

- Video Signal Level
 - Video 1 Vp-p/75 Ω
 - S-Video (Y/C) 1 Vp-p/0.286 Vp-p/75 Ω
 - Component (Y/PB, PR) 1 Vp-p/0.7 Vp-p/75 Ω
 - Signal to Noise Ratio 50 dB

TUNER SECTION

- FM Tuning Range
 - U.S.A. and Canada models 87.5 to 107.9 MHz
 - Other Models 87.5 to 108.0 MHz
- AM Tuning Range
 - U.S.A. and Canada models 530 to 1710 kHz
 - U.K., Europe, Australia and Korea models 531 to 1611 kHz
 - Asia and General models 530/531 to 1710/1611 kHz

GENERAL

- Power Supply
 - U.S.A. and Canada models AC 120 V, 60 Hz
 - Australia model AC 240 V, 50 Hz
 - U.K. and Europe models AC 230 V, 50 Hz
 - Korea model AC 220 V, 60 Hz
 - Asia model AC 220–240 V, 50 Hz
 - General model AC 110–120 V, 50 Hz
- Power consumption 85 W
- Standby power consumption
 - Asia and General models 0.5 W
 - Other models 0.4 W
- Laser Pickup
 - Type Semiconductor laser GaAlAs
 - Wave length 650 nm (DVD), 790 nm (VCD/CD)
 - Output Power 1.45 mW (DVD), 1.31 mW (VCD/CD)
- Dimensions (W x H x D) 360 x 75 x 360 mm
(Approx. 14 3/16 x 2 15/16 x 14 13/16 in.)
- Weight 6.4 kg
(Approx. 14 lbs 2 oz)
- Operating Temperature Range + 5 to +35°C (41 to 95°F)
- Operating Humidity Range 5 to 90% (No Condensation)

Specifications are subject to change without notice.

LIST OF REMOTE CONTROL CODES

TV			Nikko	286/287/297	Electroponic	396	Scott	399/335/336/348/
YAMAHA	299/292		Nokia	244/245	Emerson	327/334/396/397		359/352/354/358
Admiral	292/293		Nokia Oceanic	245	Fisher	393/336	Sears	328/342/396
Aiko	287		Nordmende	265/266	Garrard	397	Seleco	322
Aiwa	294/276/283		NTC	287	GE	328/333/387/363	Sharp	395/362/382
Akai	295/296		Onwa	296/285	LG/Goldstar	396/388/392	Siemens	393
Alba	296		Panasonic	234/235/236/253	Goodmans	334/337	Signature 2000	393
AOC	297/286		Philco	297/225/239/286	Grandiente	397	Sony	368/379/372/373/
Audiovox	285		Philips	225	Grundig	332/338		374/375
Belcor	297		Pilot	297/	Hitachi	325/333/349/342/	Sylvania	397/325/326/328
Bell & Howell	292		Pioneer	226/235/254/255/		343	Symphonic	397
Bestar	298			268	Harman Kardon	392	Tandberg	334
Blaupunkt	229/222		Portland	297/256/287	Instant Replay	325/328	Tashiro	396
Blue sky	298		Quasar	238/235	Itt/Nokia	393	Tatung	392/394
Bradford	285		Radio Shack	299/293/297/285/	JCL	328	Teac	392/394/397
Brandt	223			296	JC Penny	392/393/394/328/	Technics	325/328
Brocsonic	297		RCA	293/297/234/256/		333/349/363/396	Teknika	328/396/397
Brokwood	297			257/258	JVC (Victor)	392/394/344/345/	Telefunken	376/377
Bush	296		Realistic	299/293/297/285/		346/347	Thorn	393/396
Candle	286/297			286	Kendo	396	Toshiba	335/369/383
Citizen	286/287/297	SABA	223/269/265/266		Kenwood	392/394/396	Totevision	363/396
Clatronc	298	Sampo	286/297		Kodak	396	Universam	396/327/376
Contec	285	Samsung	297/239/248/262/		Lyold	397	Vector Research	392
Craig	224/285		275/286		Loewe	396/337	Videosonic	363
Croslex	225	Sanyo	295/233/279/272/		Luxor	395	W.WHouse	396
Crown	285		273/274		LXI	393/396/397/336/	Wards	395/396/336/362/
Curtis Mathis	297/226/286	Schneider	296			349		328/342/363/397
CXC	285	Scott	297/285		Magnavox	325/326/328	CD recorder	
Daewood	297/298/224/227/	Sharp	292/239/232/284		Magnin	363	YAMAHA	499
	228/287	Shogun	297		Marantz	392/394328	DENON	422/423
Dayton	239/297	Siemens	229		Marta	396	Hitachi	424
Dual	298	Signature	292		Matsui	396	JVC (Victor)	425/428
Dumont	297	Sony	263		MEI	328	Kenwood	422
Emerson	297/224/239/232/	Soundesign	285		Memorex	328/336/363/396/	Marantz	422
	285	SSS	285/297			397	Philips	422
Envision	286/297	Starlite	285		Minolta	333/349/342	Pioneer	426
Ferguson	223/265/266	Sylvania	297/225/286		Mitsubishi	399/344/348/359/	Sony	427
First line	298	Teknika	297/285/287			352/353	Teac	429
Fisher	295/233	Telefunken	269/264/265/266		MTC	363/397	MD recorder	
Fraba	298	Thomson	223/266		Multitech	397/348/354	YAMAHA	599/522/598
Funai	277/278/285	Toshiba	292/226/267		NEC	392/384/344/383	Denon	523/524
Futuretec	285	Videch	297/242		Nikko	396	JVC (Victor)	525
GE	293/297/234/235/	Wards	297/239/232/286		Noblex	363	Kenwood	526
	236	VCR			Nokia	393/395	Onkyo	592
Gilbralter	297	YAMAHA	399/392/393/394		Nokia Oceanic	395	Pioneer	527
LG/Goldstar	297/298/239/237	Admiral	395		Okano	323	Sharp	528
Goodmans	296/298/223	Aiwa	396/397/398/329/		Olympic	325/328	Sony	522
Grundig	229/238/249		339		Orion	327	Teac	593
Havard	285	Akai	322/323/324		Panasonic	325/328/355/378/		
Hitachi	297/239/242/243	Asha	363			384/385		
ICE	296	Audio Dynamic	392/394		Pentax	333/349/342		
Irradio	296	Audiovox	396		Philco	325/328		
Itt/Nokia	244/245	Beaumark	363		Philips	325/326/328/337/		
JC Penny	293/297/234/237/	Bell & Howell	393			356/357		
	286	Blaupunkt	325/326		Phonola	337		
JVC (Victor)	296/246/247	Brocsonic	327		Pilot	396		
Kendo	298	Bush	322		Pioneer	325		
Kenwood	297	Calix	396		Quasar	325/328		
KTV	297/239/285	Candle	335/363/396		Radio Shack	396/397		
Loewe	298/248	Canon	325/328		Radix	396		
LXI	293/297/225/226/	CGM	396/332		RCA/PROSCAN	325/326/328/333/		
	233	Citizen	396			335/349/358/369/		
Magnavox	297/225/239/286					363/342		
Marantz	286/297				Realistic	393/397/328/336/		
Matsui	295	Curtis Mathis	397/328/333/392			359/362/396		
MGA	286/297	Cybernex	363		Samsung	354/358/363/364/		
Mitsubishi	299/297/259	Daewood	328/334/335			365/366/335		
MTC	286/297	DBX	392/394		Sansui	394		
Multitec	285	Dimensia	333		Sanyo	393336/367/363		
NEC	297/292/282/286	Dynatech	397		Schneider	337		
		Electrohome	396					



© 2004 YAMAHA CORPORATION All rights reserved.

YAMAHA ELECTRONICS CORPORATION, USA 6660 ORANGETHORPE AVE., BUENA PARK, CALIF. 90620, U.S.A.
YAMAHA CANADA MUSIC LTD. 135 MILNER AVE., SCARBOROUGH, ONTARIO M1S 3R1, CANADA
YAMAHA ELECTRONIK EUROPA G.m.b.H. SIEMENSSTR. 22-34, 25462 RELLINGEN BEI HAMBURG, F.R. OF GERMANY
YAMAHA ELECTRONIQUE FRANCE S.A. RUE AMBROISE CROIZAT BP70 CROISSY-BEAUBOURG 77312 MARNE-LA-VALLÉE CEDEX02, FRANCE
YAMAHA ELECTRONICS (UK) LTD. YAMAHA HOUSE, 200 RICKMANSWORTH ROAD WATFORD, HERTS WD18 7GQ, ENGLAND
YAMAHA SCANDINAVIA A.B. J A WETTERGRENS GATA 1, BOX 30053, 400 43 VÄSTRA FRÖUNDA, SWEDEN
YAMAHA MUSIC AUSTRALIA PTY, LTD. 17-33 MARKET ST., SOUTH MELBOURNE, 3205 VIC., AUSTRALIA

YAMAHA CORPORATION
Printed in Malaysia  WD57200